



# Motorola Razr V3m Keypad Cover Replacement

Following this guide will show the user how to replace the keypad cover on the Motorola Razr V3m

Written By: Jonathan Gendron



This document was generated on 2019-10-02 08:44:11 AM (MST).

 **TOOLS:**

- [T6 Torx Screwdriver \(1\)](#)
- [Spudger \(1\)](#)
- [Tweezers \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

## Step 1 — Battery



- Press the release button located on the upper edge of the battery cover. At the same time, lift the battery cover away from the phone.

## Step 2



- Push the top edge of the battery and lift away from the phone.

## Step 3 — SIM Card




- Gently pull the SIM Card toward the top of the phone with your finger.

## Step 4 — Keypad Cover



- Remove the two screws from the back panel with a T6 screwdriver.


## Step 5

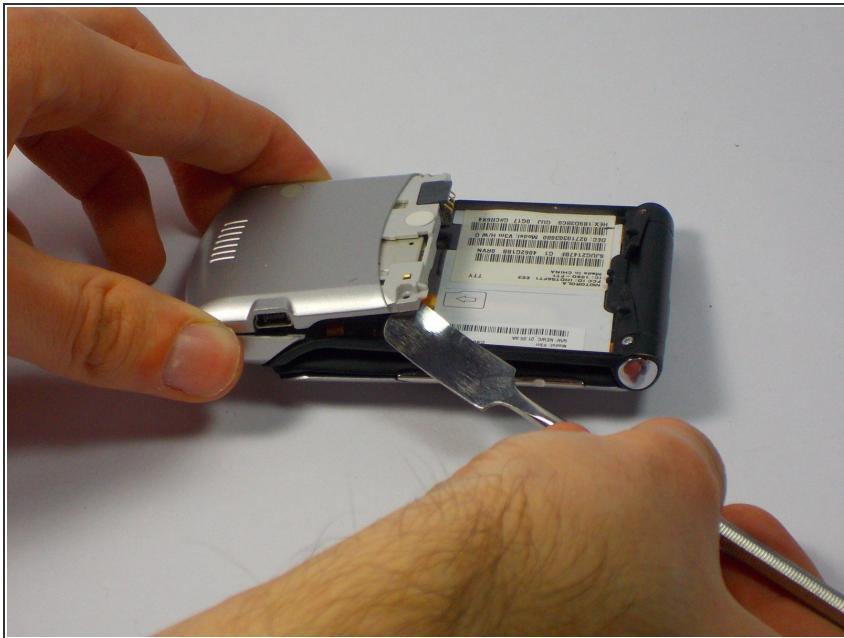

- Carefully use a metal spudger to pry back panel open.
- *(i)* The back panel is attached to the phone with a copper ribbon that acts as a hinge.
- Carefully open out the back panel to the side of the phone corresponding with the hinge.


**⚠** Do not pull back away from phone. It may damage the copper ribbon.

## Step 6

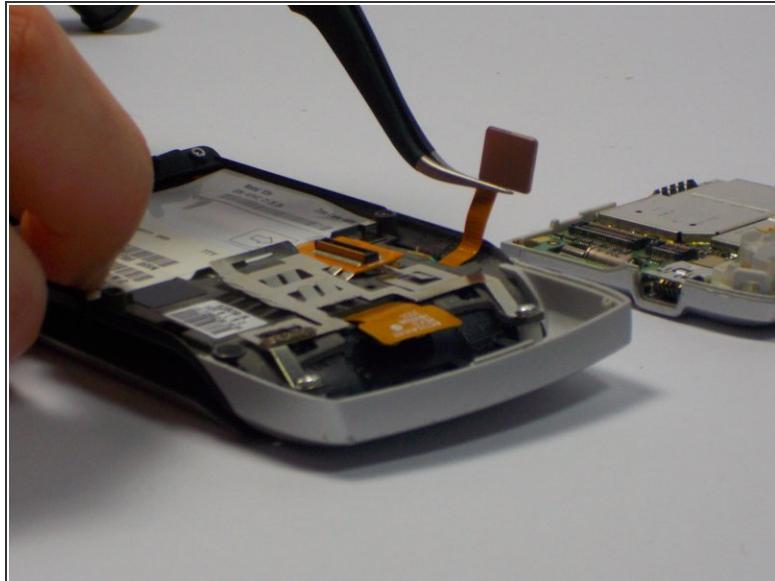

- Use tweezers to disconnect the copper ribbon from the inside of the back panel.

## Step 7

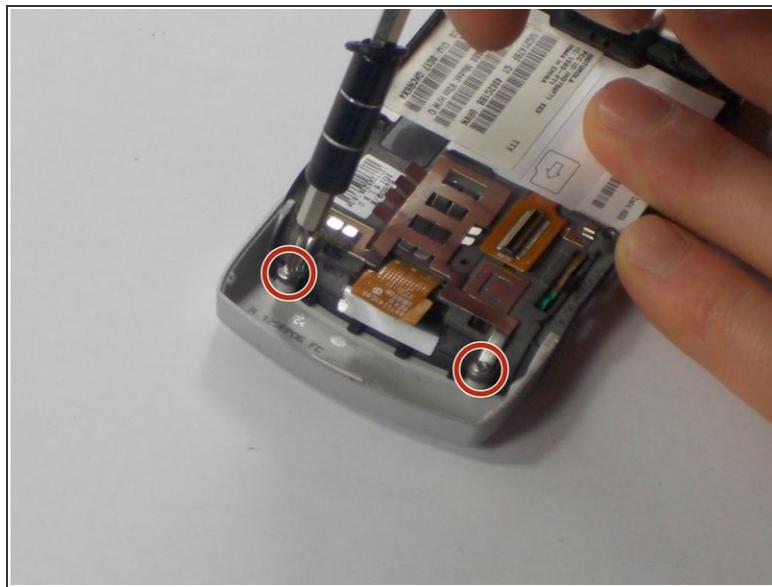


- Use a T6 Torx bit screwdriver to remove the two screws holding the cover down.
- The metal shield will come off with the screws; don't forget to reattach it before replacing the screws.

## Step 8






- Remove the keypad cover, located below the keypad on the front of the phone.

## Step 9

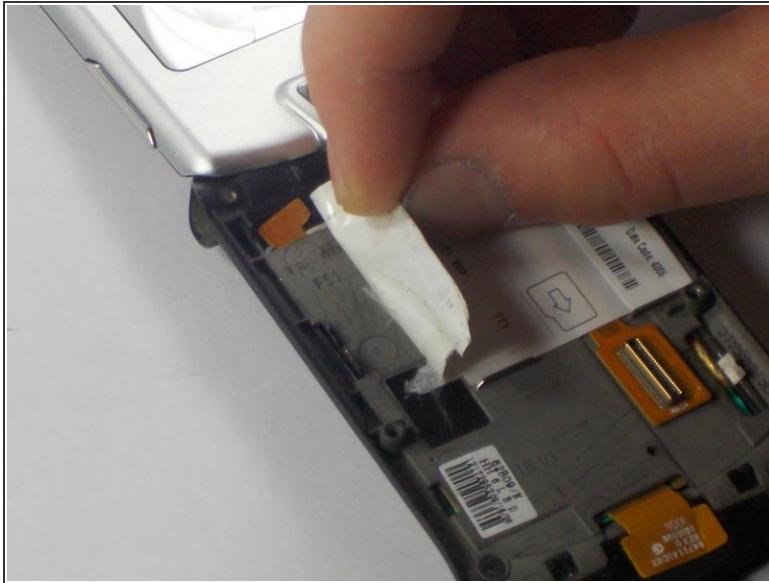


- Remove the sticker on the back of the phone.

## Step 10

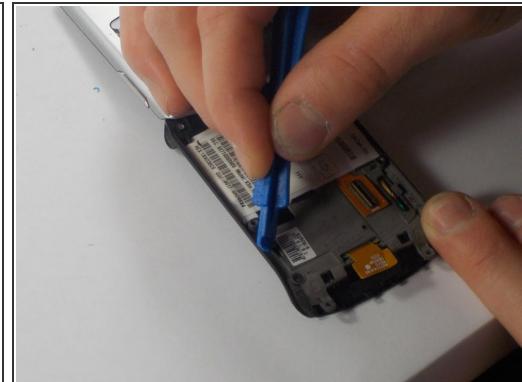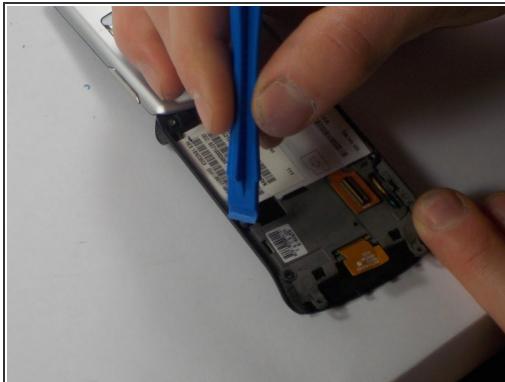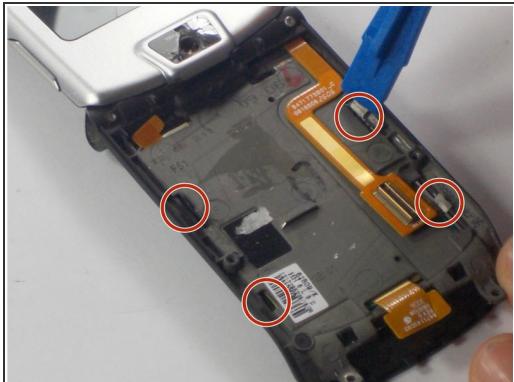

- Using a plastic opening tool, push the four metal tabs along the edge of the phone in towards the keypad.

## Step 11

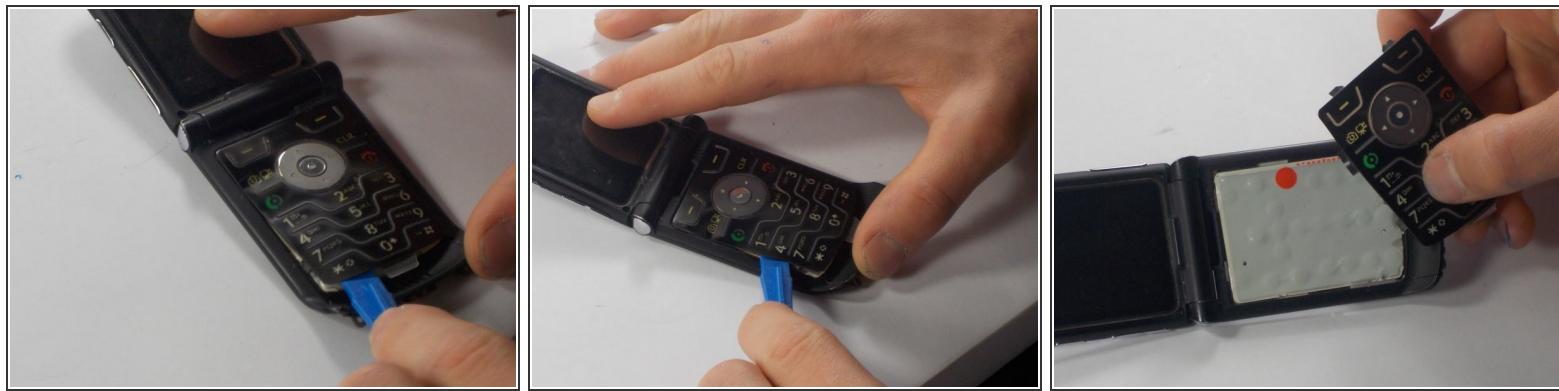

- Using the plastic opening tool, pry the edges of the keypad until it is loose. Then, pull it off.
- ★ It is easiest to work your way from left to right when loosening the case.

To reassemble your device, follow these instructions in reverse order.