




# Motorola V276 Headphone Jack Replacement

Written By: Jason Kilroy

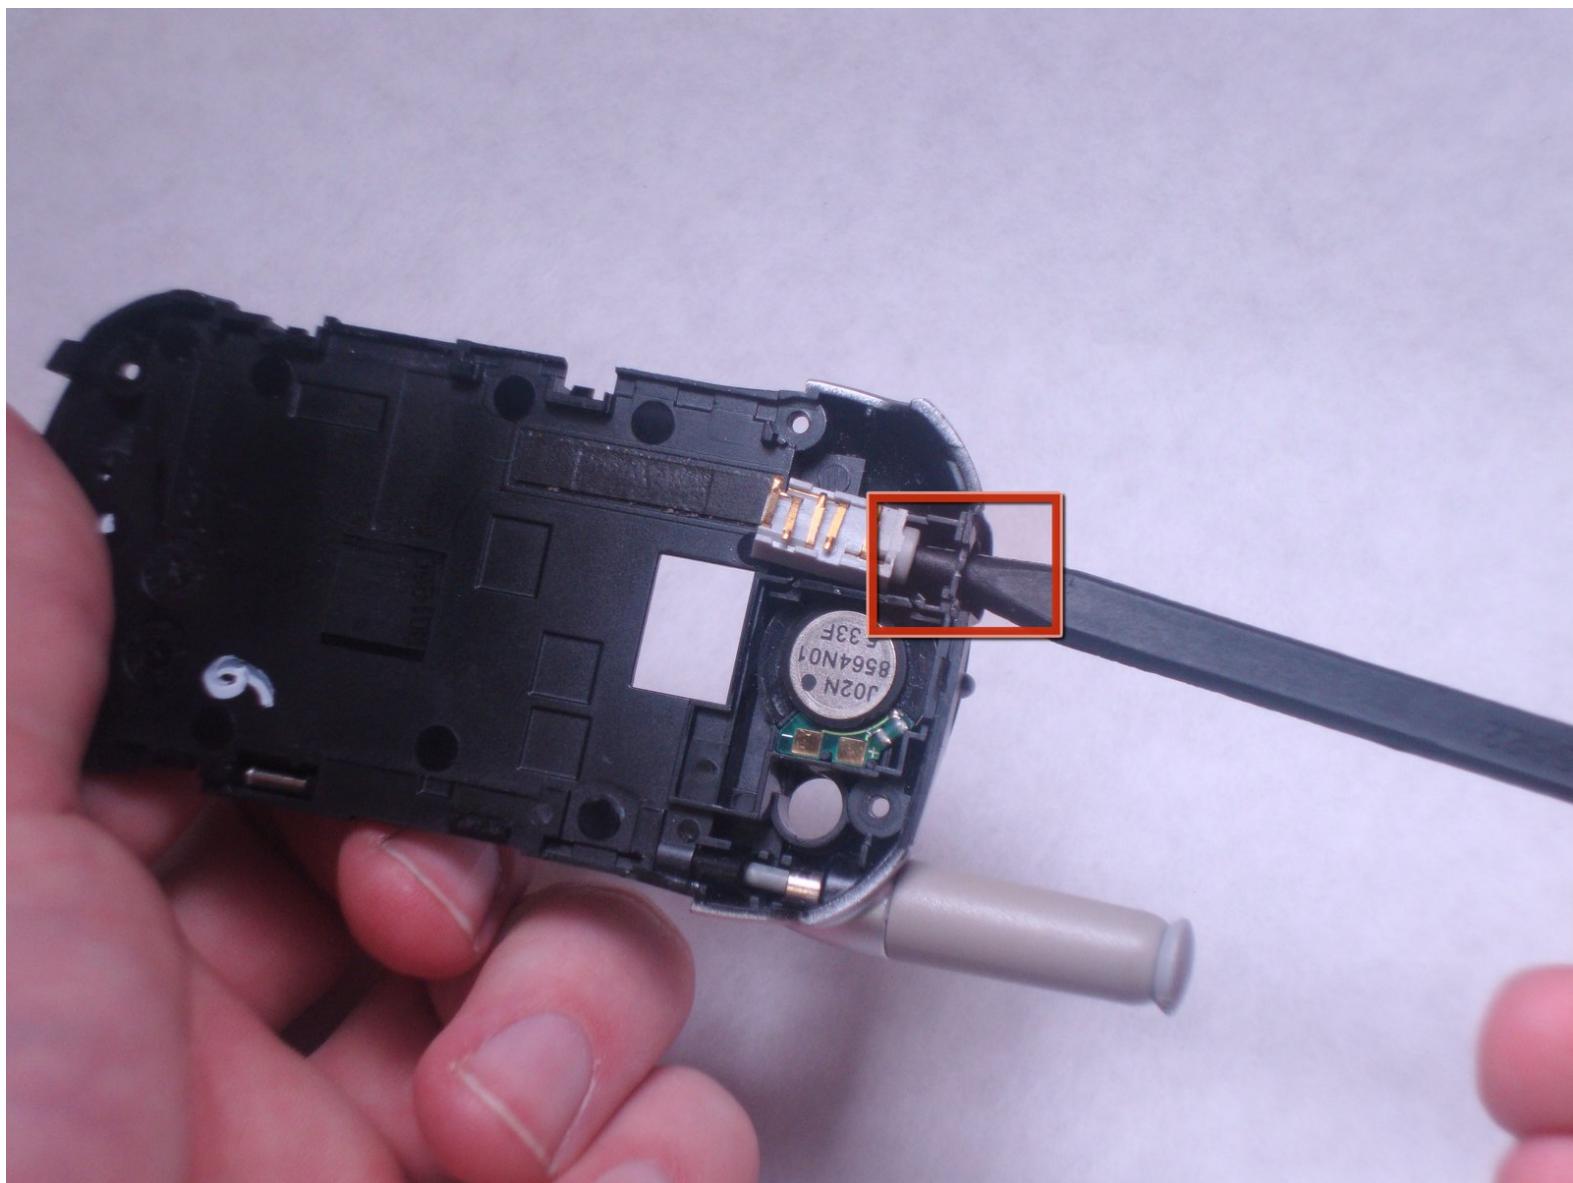

## INTRODUCTION

Replacing the phone's headphone jack.

### TOOLS:

- [Spudger \(1\)](#)

## Step 1 — Battery



- Locate the silver button on the back of the phone, near the bottom.
- Depress the silver button with one hand and slide the back cover of the phone *away* from the antenna.


**i** The back cover should slide off easily.

## Step 2



- Insert a plastic spudger near one corner of the battery (preferably one furthest from the phone's antenna).
- Gently pry the battery up and away from the phone. The battery should easily raise out of its place.
- Now that the battery is exposed, use your fingers to remove it from the phone.

## Step 3

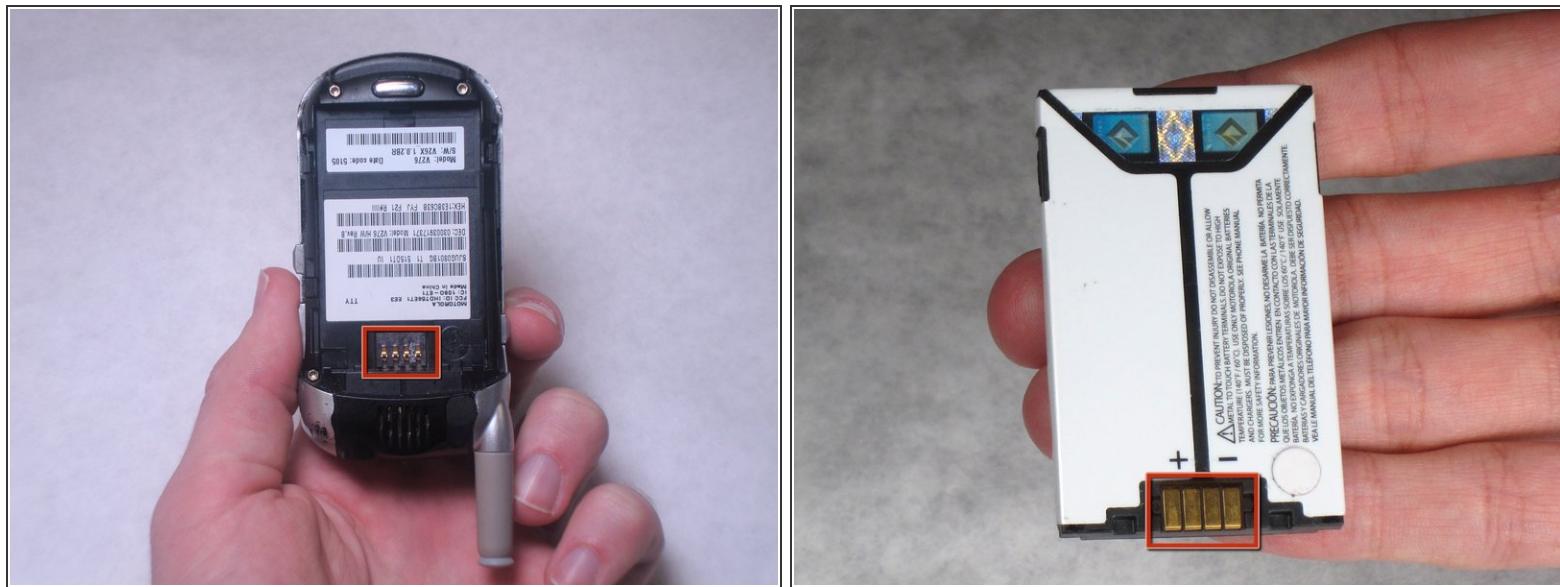

- Note the metal connections on the phone, which are now exposed with the battery removed.
- There are corresponding metal connectors on the replacement battery.
- When you install the battery, be sure both connectors are matched up. Otherwise, your battery will be unable to supply power to your phone.

## Step 4 — Headphone Jack



- Use Spudger to remove rubber plug from upper left corner of the back of the phone

## Step 5



- Using a Hex T6 screwdriver, remove the 4 screws holding the back plate of the phone in place


## Step 6



- Using your hands, pull up on the back plate while pulling on the 3 side tabs to remove the back plate.

**⚠** Be careful when removing the back plate; don't put too much stress on the back plate or the plastic may snap

## Step 7

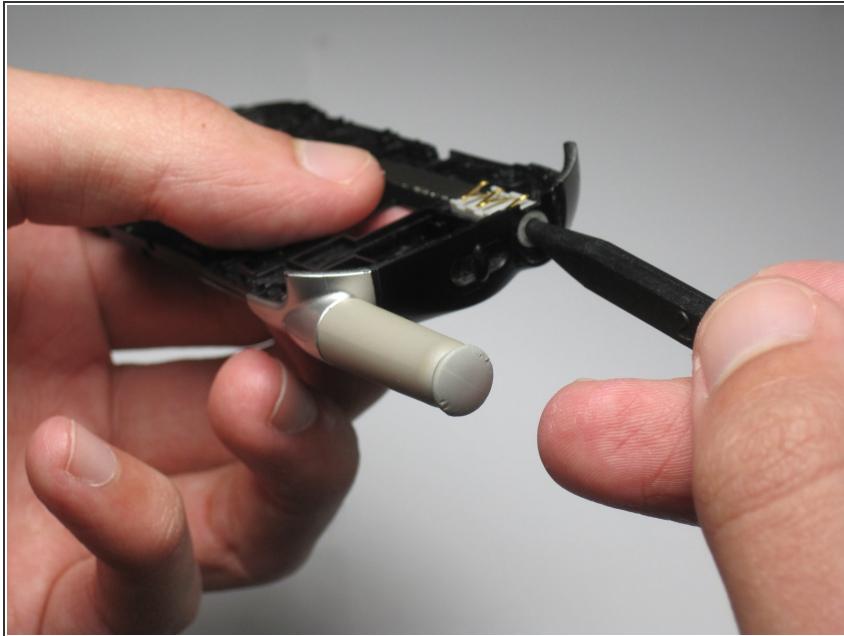

- On the back casing, using a spudger, push into the headphone jack at an upward angle to pop it out

To reassemble your device, follow these instructions in reverse order.