




# Motorola V557 Headphone Jack Replacement

This guide contains all of the steps needed to remove the headphone jack from a Motorola V577-model cell phone.

Written By: Alex Georges

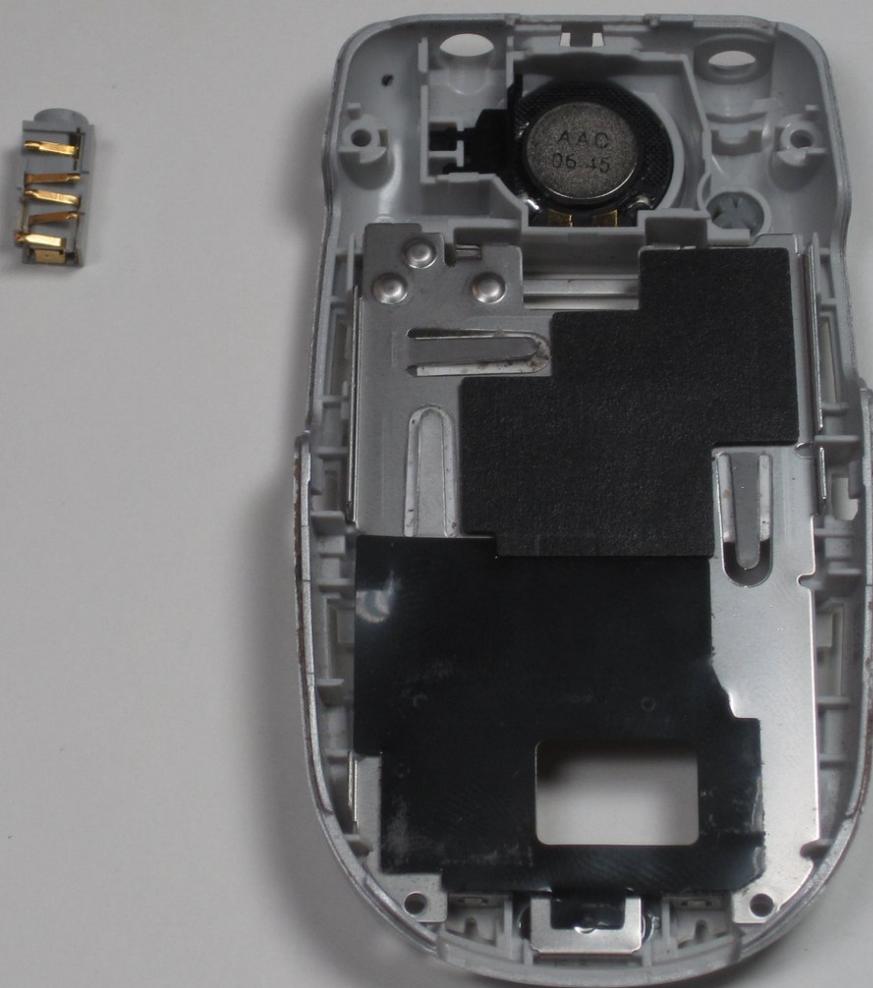

## INTRODUCTION

This guide section shows how to remove the headphone jack from a Motorola V557 phone.

### TOOLS:


- [Push Pin](#) (1)
- [Spudger](#) (1)
- [T6 Torx Screwdriver](#) (1)

## Step 1 — Battery




- Push down on the silver button while sliding the back plate down to reveal the battery.

## Step 2

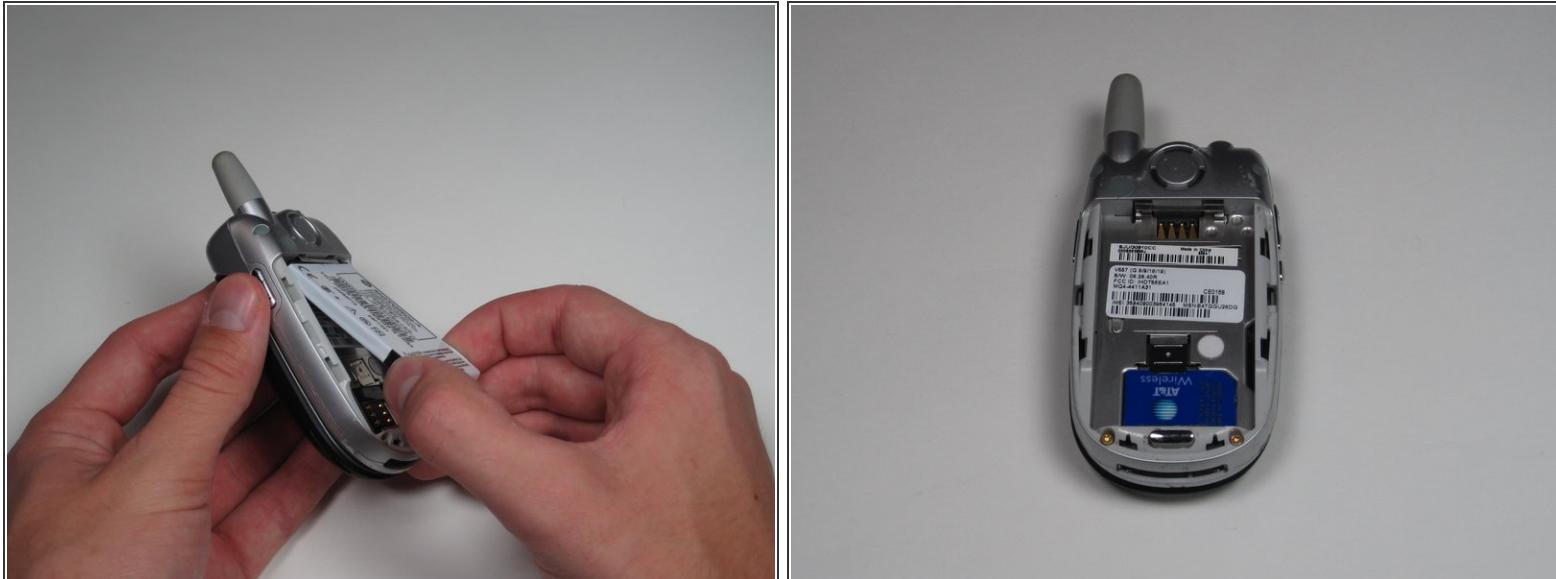

- Grab the lower edge of battery at the black areas and pull upward on the edges to remove it.

## Step 3 — SIM Card

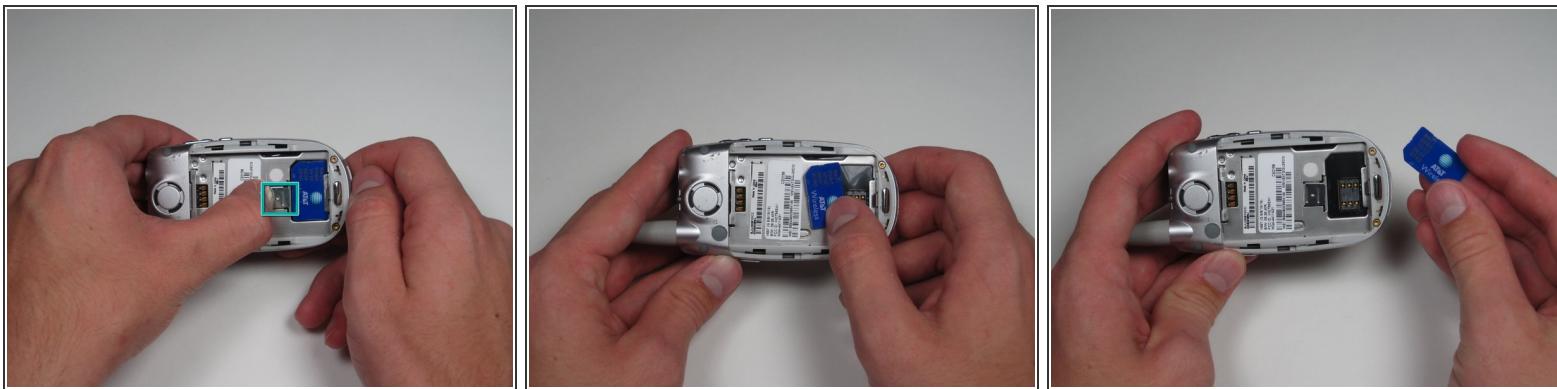

- Move the the metal slider towards the top of the phone until it clicks out of its original position.
- Slide out and remove the SIM card.

## Step 4 — Antenna



- Grip the antenna and twist it counterclockwise to loosen it.
- When it has been loosened all the way, pull gently to remove the antenna piece.

## Step 5 — Rear Casing



- Remove the screw covers over the two top screws by prying gently with a pin.
- The large cover in the upper left of the back plate has no screw behind it, so should *not* be removed.

## Step 6



- Remove all four 6.0 mm Torx screws.

## Step 7



- Insert a spudger into marked holes, one at a time, and pry away from the phone to release internal tabs.
- Separate and detach the rear casing.

## Step 8 — Headphone Jack



- Lift out the headphone jack section from the sides using a push pin.

To reassemble your device, follow these instructions in reverse order.