




Motorola V60c Logic Board Replacement

Written By: Ryan Kuroiwa

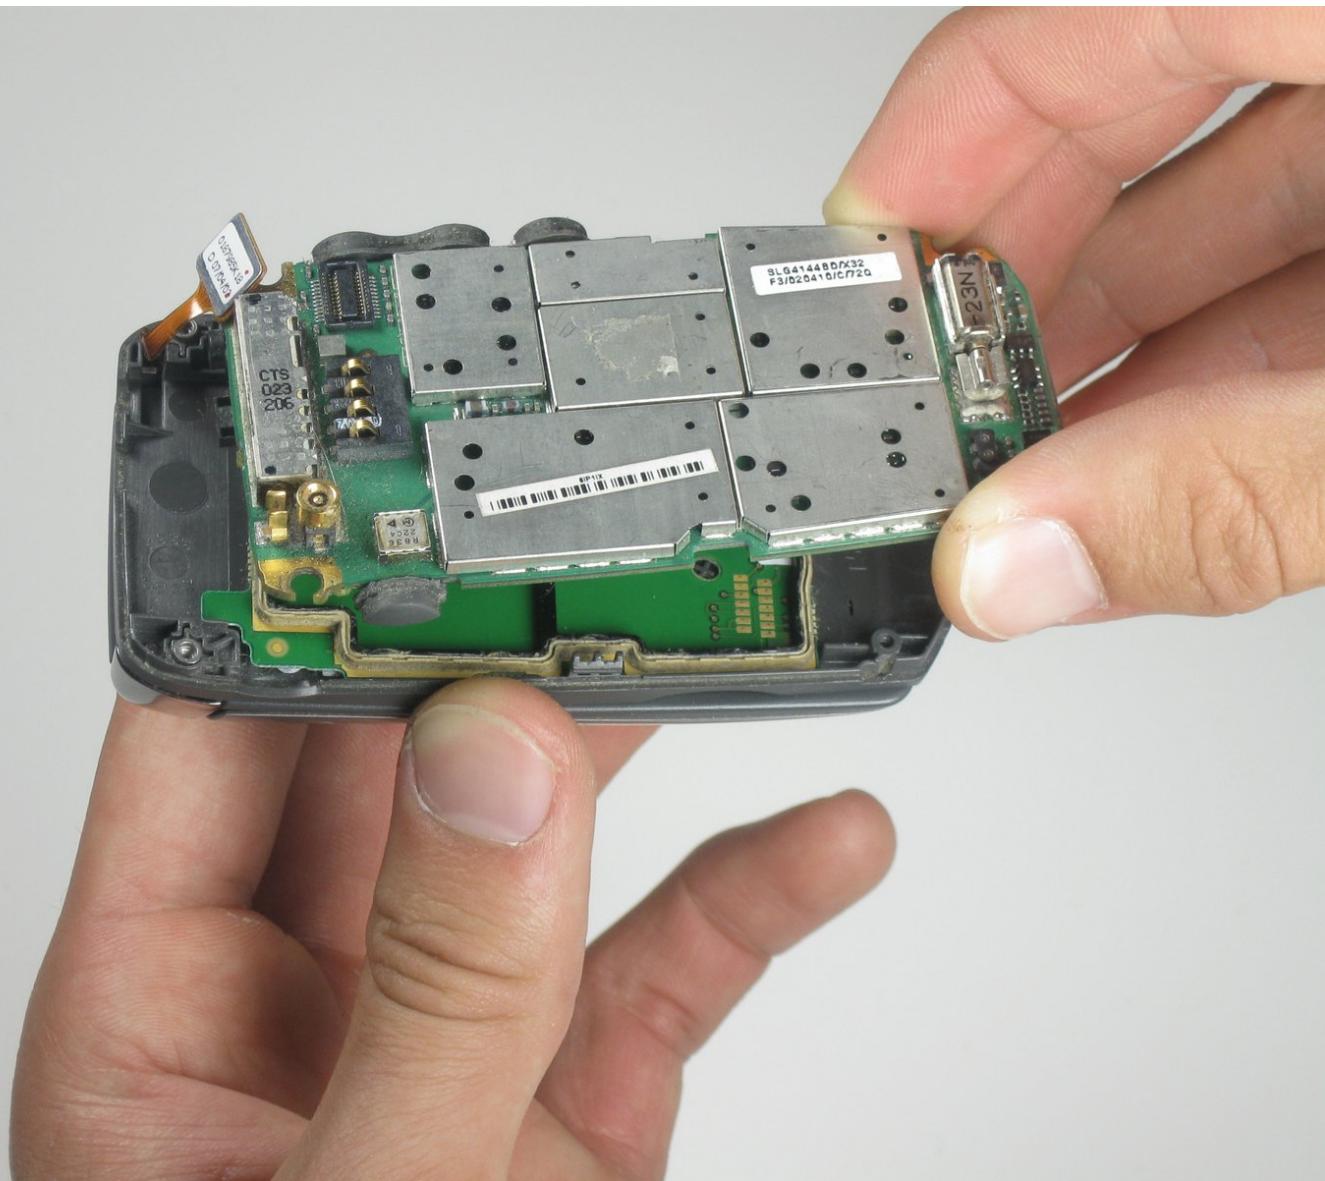

INTRODUCTION

How to replace the logic board.

TOOLS:

- iFixit Opening Tools (1)
- T6 Torx Screwdriver (1)

PARTS:

- Motorola V60c Logic Board (1)

Step 1 — Battery



- Depress the silver button.
- Pull from top of phone to lift the cover.

Step 2



- Hold battery from both sides at the bottom.
- Push upwards and gently lift to remove.

Step 3 — Logic Board



- Remove 4 screws from corners using T-6 screwdriver.
- *(i)* NOTE: Bottom two screws are gold.
- NOTE: Make sure screws return to correct place when reassembling.

Step 4




- Use a plastic opening tool to pry up back cover from the two side clips.
- *(i)* NOTE: sticker might be attached to rest of phone.

Step 5



- Remove the back cover.

Step 6

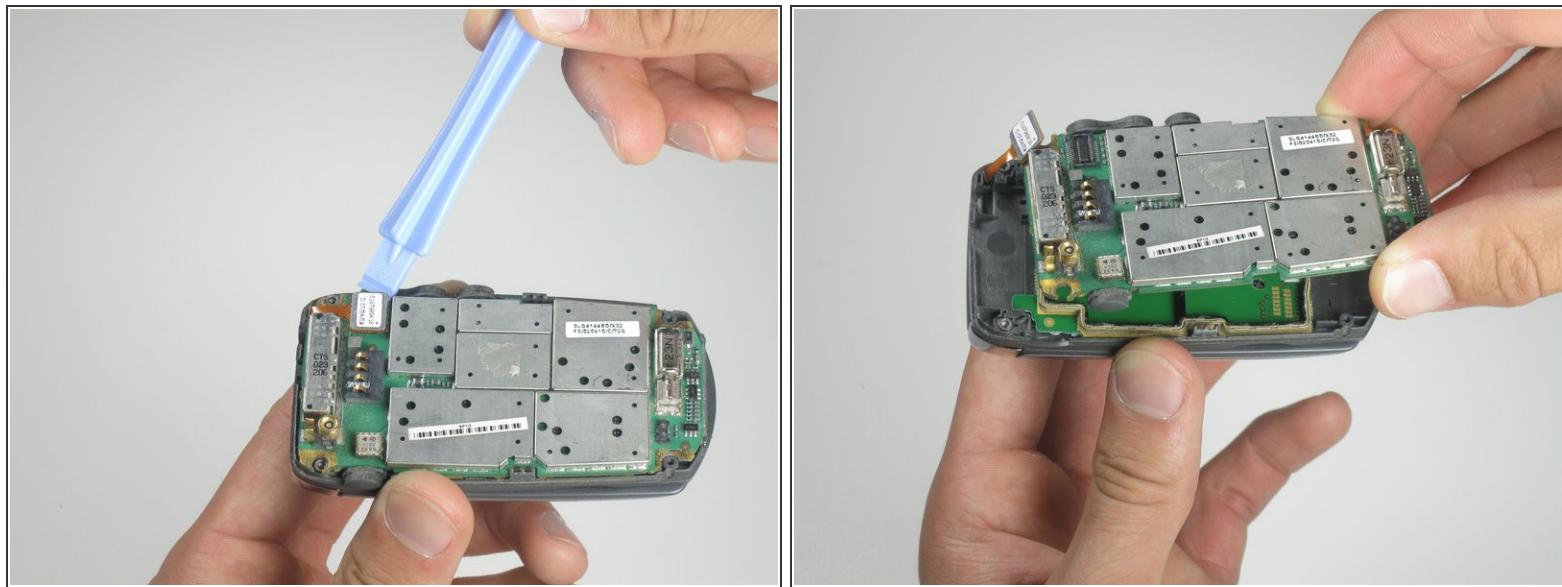

- Use a plastic opening tool to gently remove the orange ribbon cable.
- Lift up the main logic board to remove.

To reassemble your device, follow these instructions in reverse order.