



# Motorola W315 Headphone Jack Replacement

This guide will show how to access and replace the headphone jack in the Motorola W315.


Written By: Jacob Gray



 **TOOLS:**

- [T6 Torx Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

## Step 1 — Battery

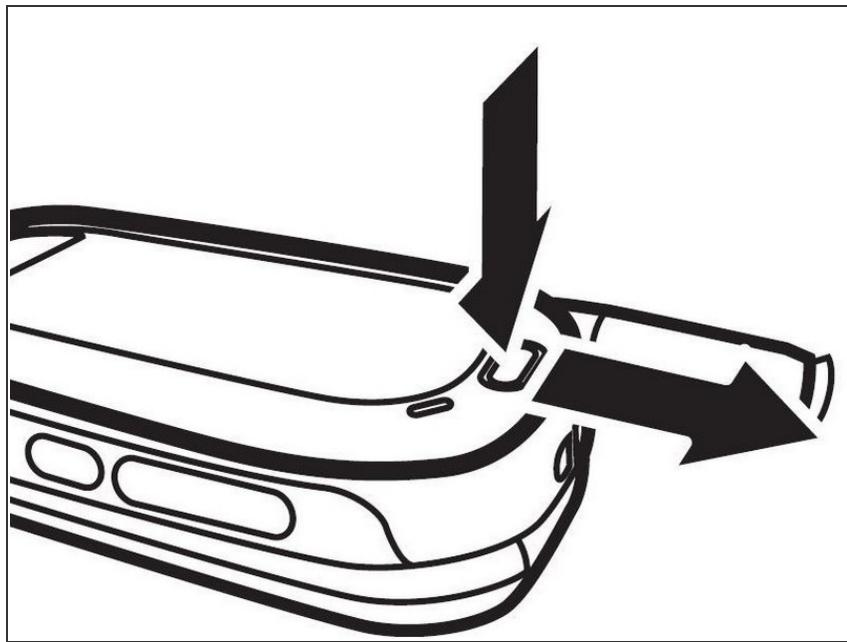


- Turn off the phone.
- Turn the device over.
- Remove the battery cover.

## Step 2



- Insert thumb in the gap between the button and the battery and pry the battery upwards.
- Pull the battery out of the phone.

## Step 3

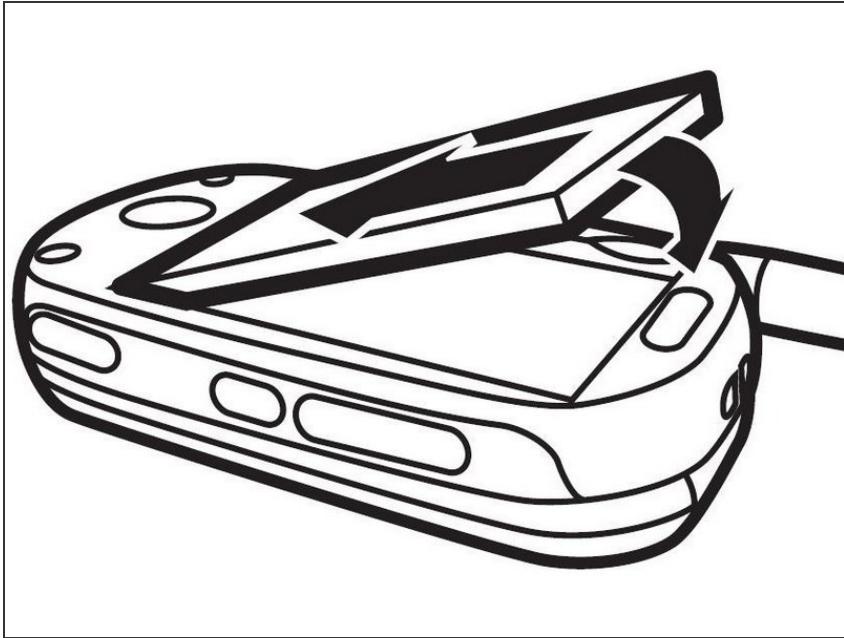


- Insert the new battery.

## Step 4 — Rear Case




- Four 5 mm screws are visible (circled in red).
- Using the T6 tool, remove all four 5mm screws and set them aside.

## Step 5

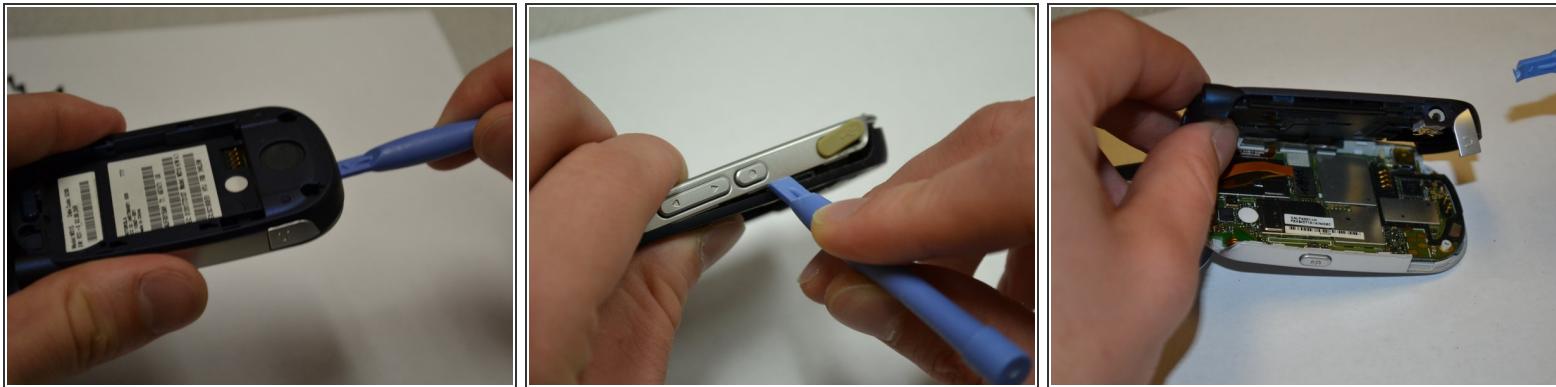

- Insert the plastic opening tool between the front and back panels of the lower half of the device.
- Slide the tool around the entire frame of the device until it has loosened.
- Remove the back of the device.

## Step 6 — Headphone Jack

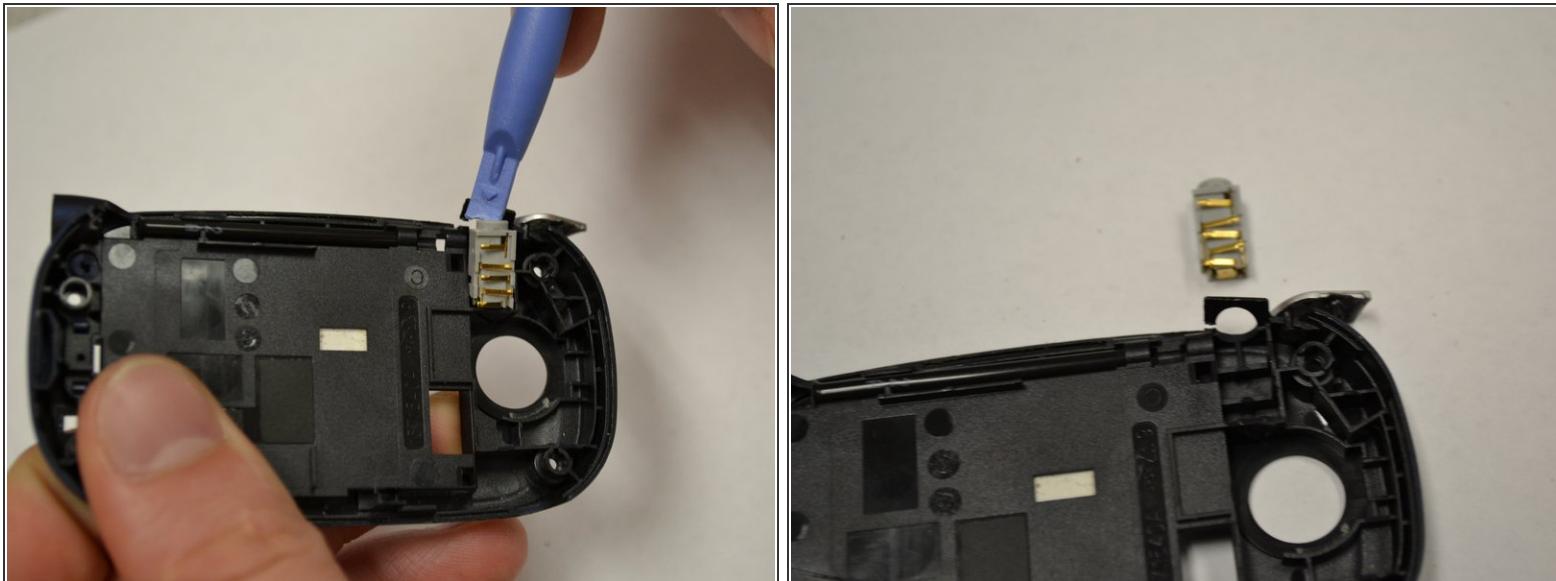

- Use the pry bar to carefully remove the headphone jack.

To reassemble your device, follow these instructions in reverse order.

Information on recycling/disposing of your electronic waste is located under Additional Information on the device page.