




Nokia 8265 Logic Board Replacement

How to take out the Logic Board for the Nokia 8265 Cell Phone, and replace it with another. Follow this guide in reverse order to put phone back together.

Written By: Jack

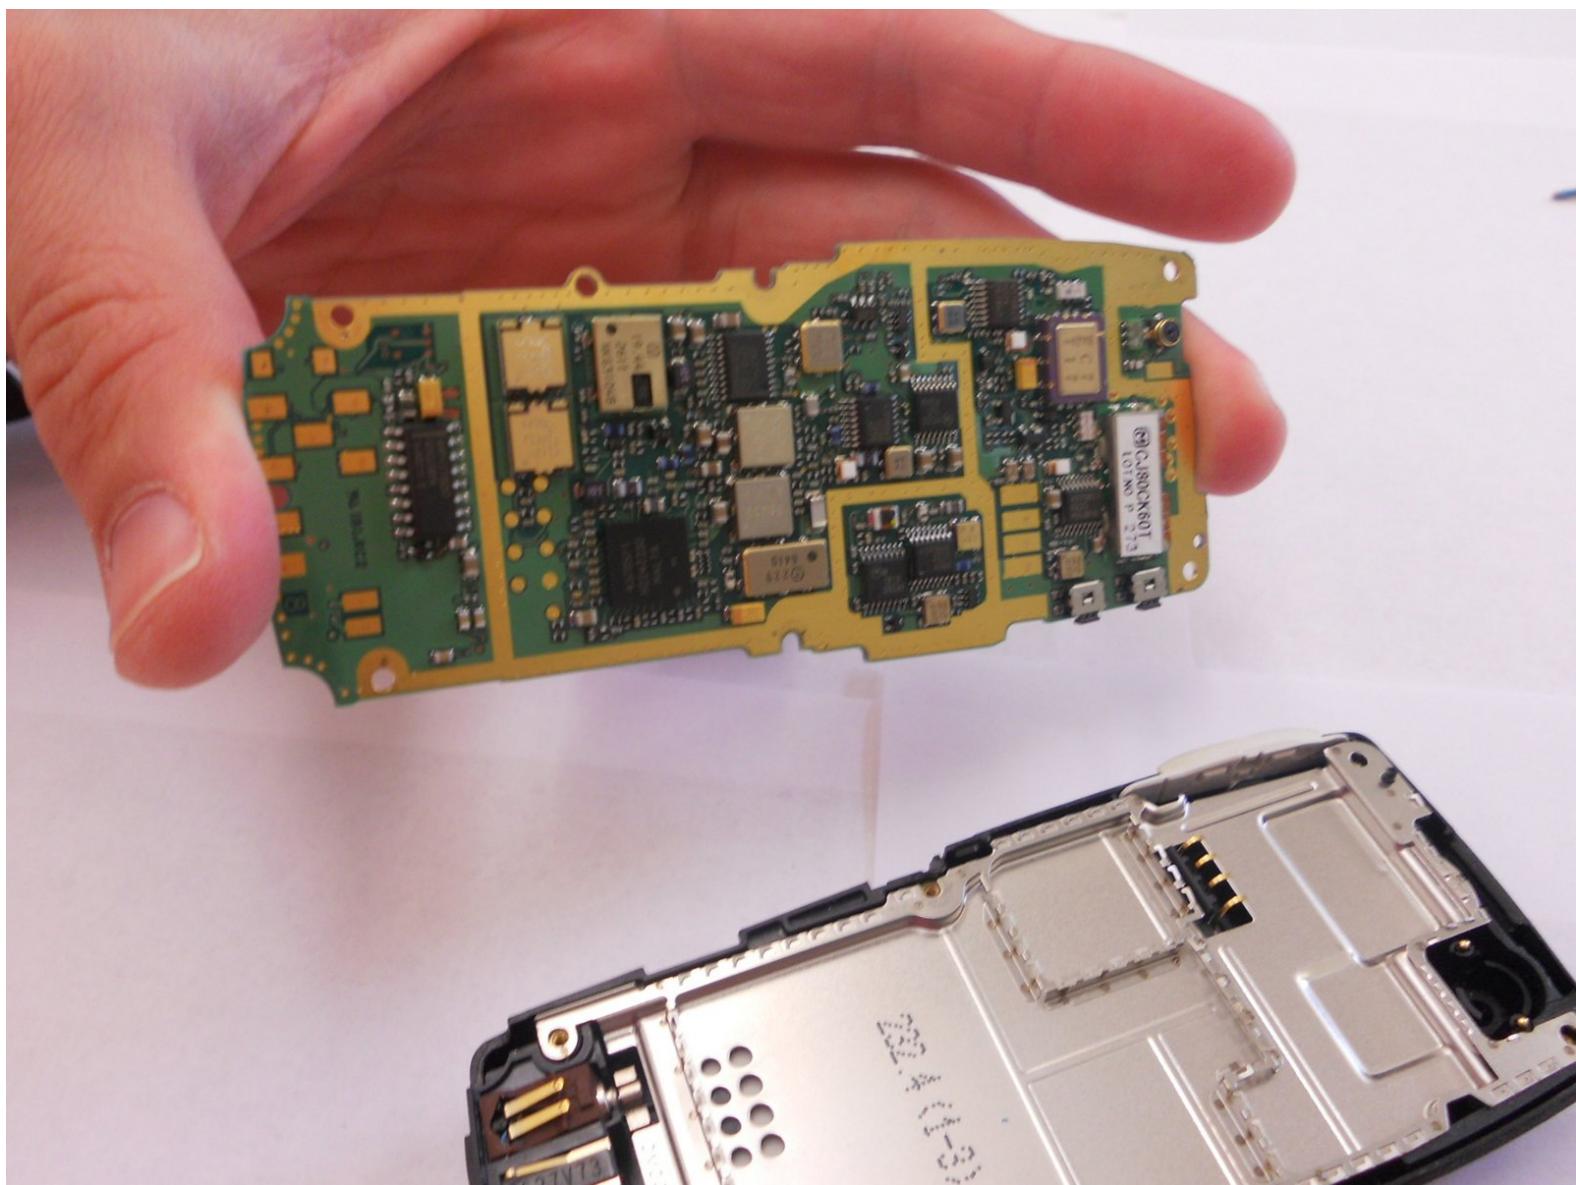

INTRODUCTION

How to take out and replace the Logic Board for the Nokia 8265 Cell Phone.

TOOLS:

- [JIS Driver Set \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Replacement Logic Board \(1\)](#)

Step 1 — Logic Board



- Start by removing the face plate of the phone with a plastic tool.
- Once plastic tool is wedged into the side of the phone, twist and leverage the face plate off.

Step 2



- Once the face plate is off, you will have exposed the keypad.

Step 3




- Simply remove the keypad from on top of the phone, and place it off to the side, leaving just the phone itself remaining

Step 4




- Taking a very small screwdriver, carefully unscrew the six screws attaching the top layer of the screen from the body of the phone.
- Make sure to remember what screw goes where.

Step 5

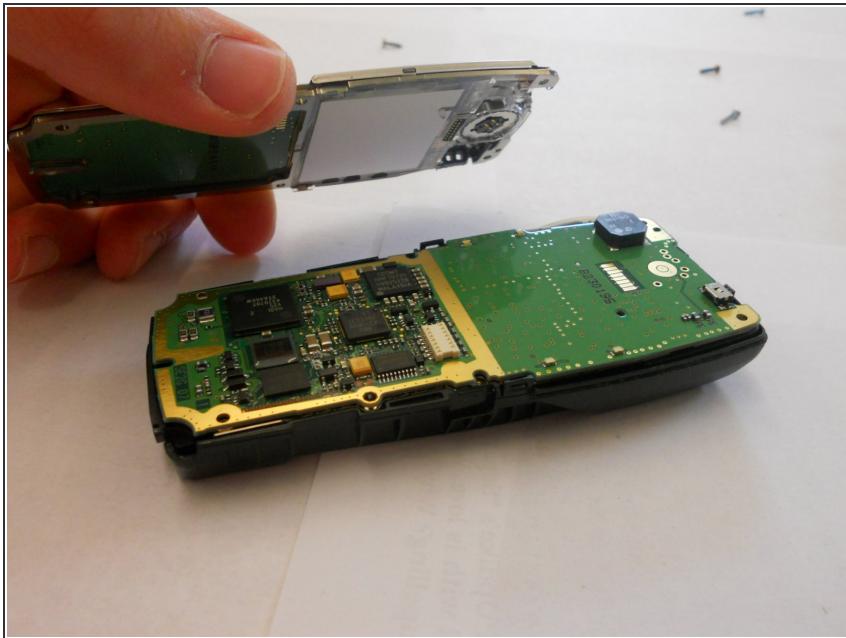


- Once the six screws are removed, you may take off the screen section of the phone, exposing the inner workings of the cell phone.

Step 6

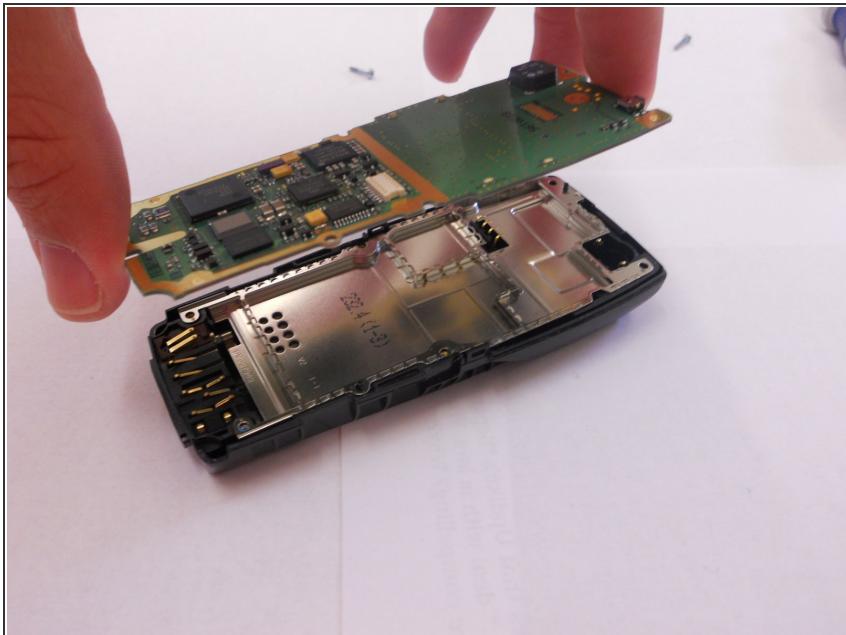

- Be careful when removing the Logic Board from the body, lifting it with fingers on both sides.

Step 7

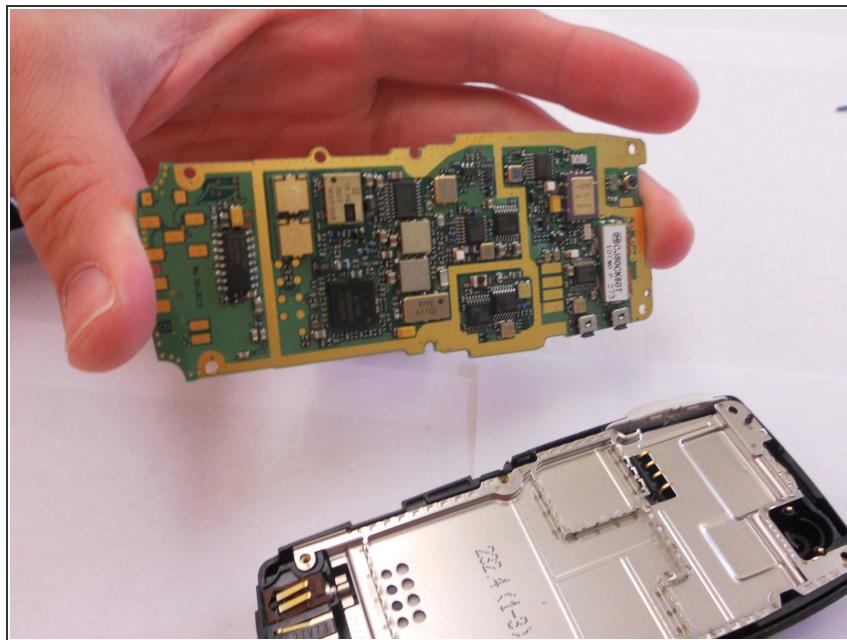

- Now you can put in your new Logic Board, and reassemble the phone.