



Nuvision TM800A510L Headphone Jack Replacement

If you suspect that your headphone jack may be damaged or broken, this Guide shows how to get into the device for potential replacement.

Written By: Kelsey Riggs



This document was generated on 2019-09-21 06:39:31 AM (MST).

INTRODUCTION

Be aware that most of your time will be spent getting the back off of the device. However, once in the device the repair is quick and easy.

TOOLS:

- Heat Gun (1)
- iFixit Opening Tools (1)
- Mako Driver Kit - 64 Precision Bits (1)


Step 1 — Headphone Jack



- Use a Heat Gun to loosen the adhesive around the inside of the device.
- Use prying tools to lift the back of the device up.


(i) I recommend prying up one side at a time and heating the adhesive to 'just barely too hot to touch'.

Step 2

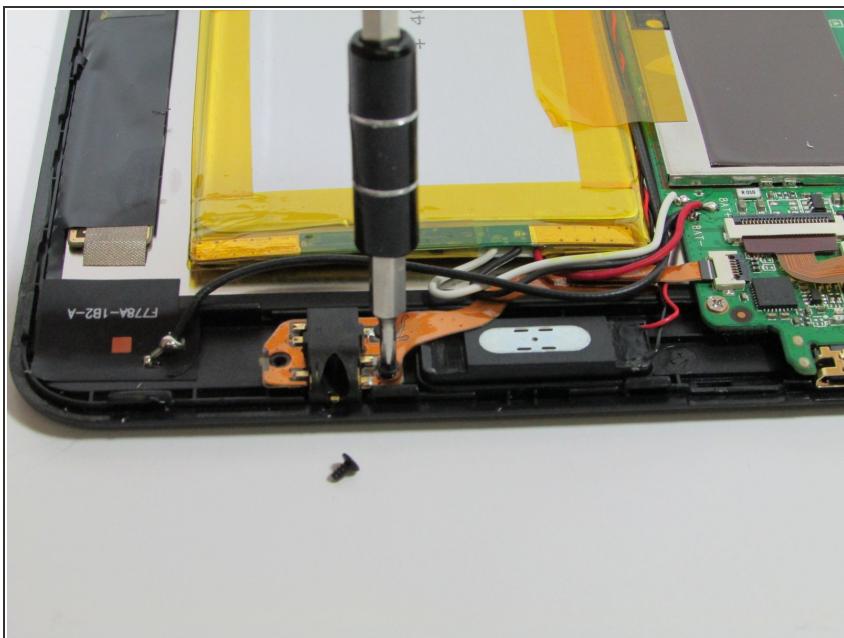


- Unscrew the headphone jack from the device.

Step 3

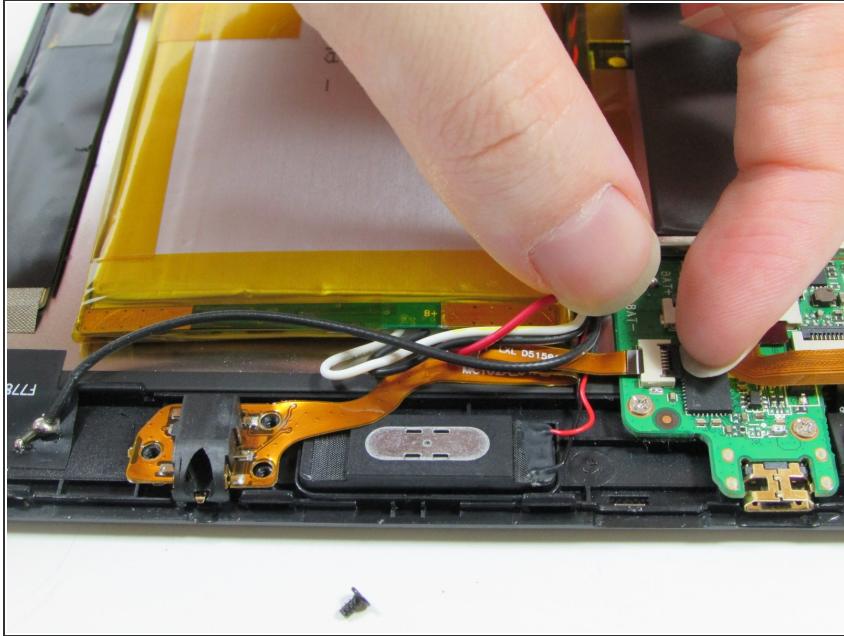


- Unlock the headphone jack ribbon.

Step 4

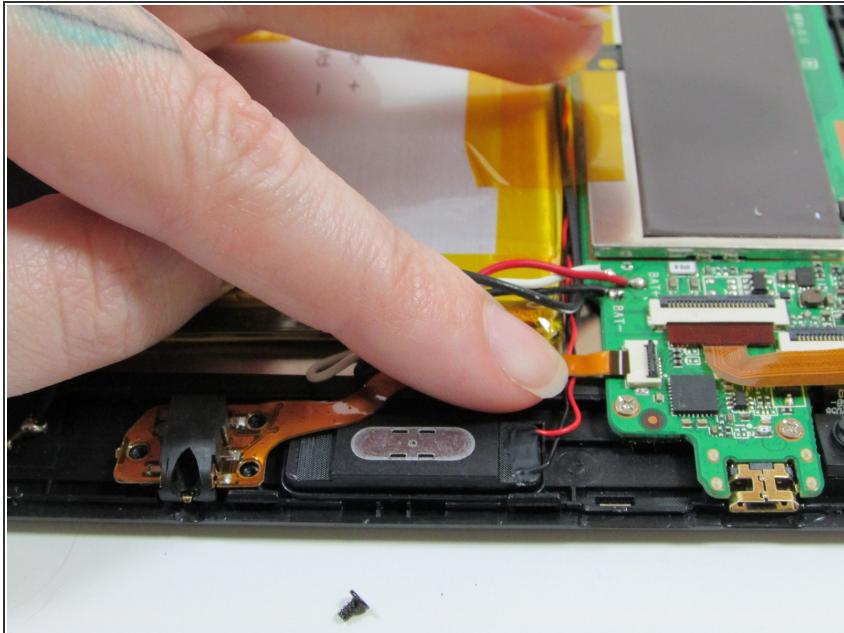

- Move the wires out of the way and slowly pull the ribbon out of the circuit dock.

Step 5

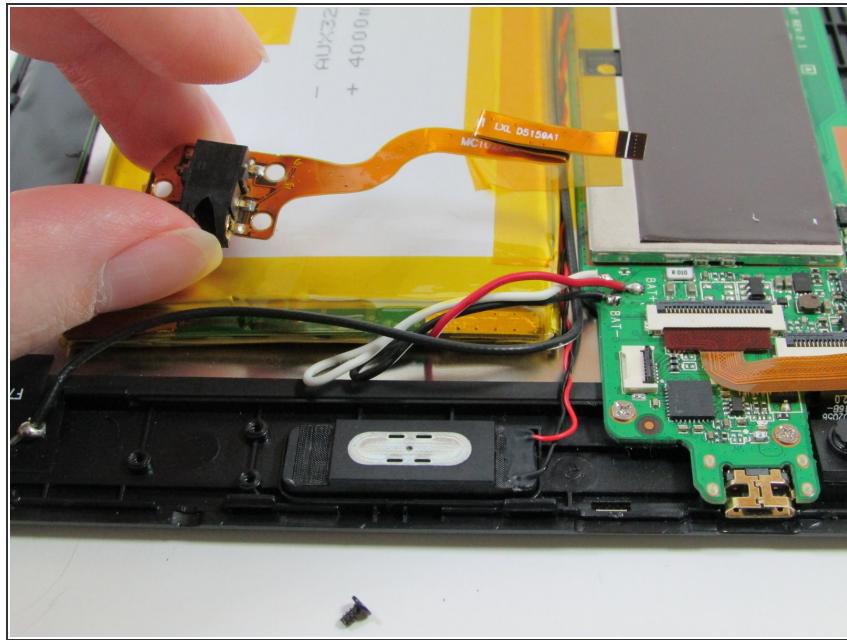

- Lift headphone jack/ribbon out and it's FREE!

To reassemble your device, follow these instructions in reverse order.