




Palm Treo 600 Logic Board Replacement

Written By: Clement Poisson

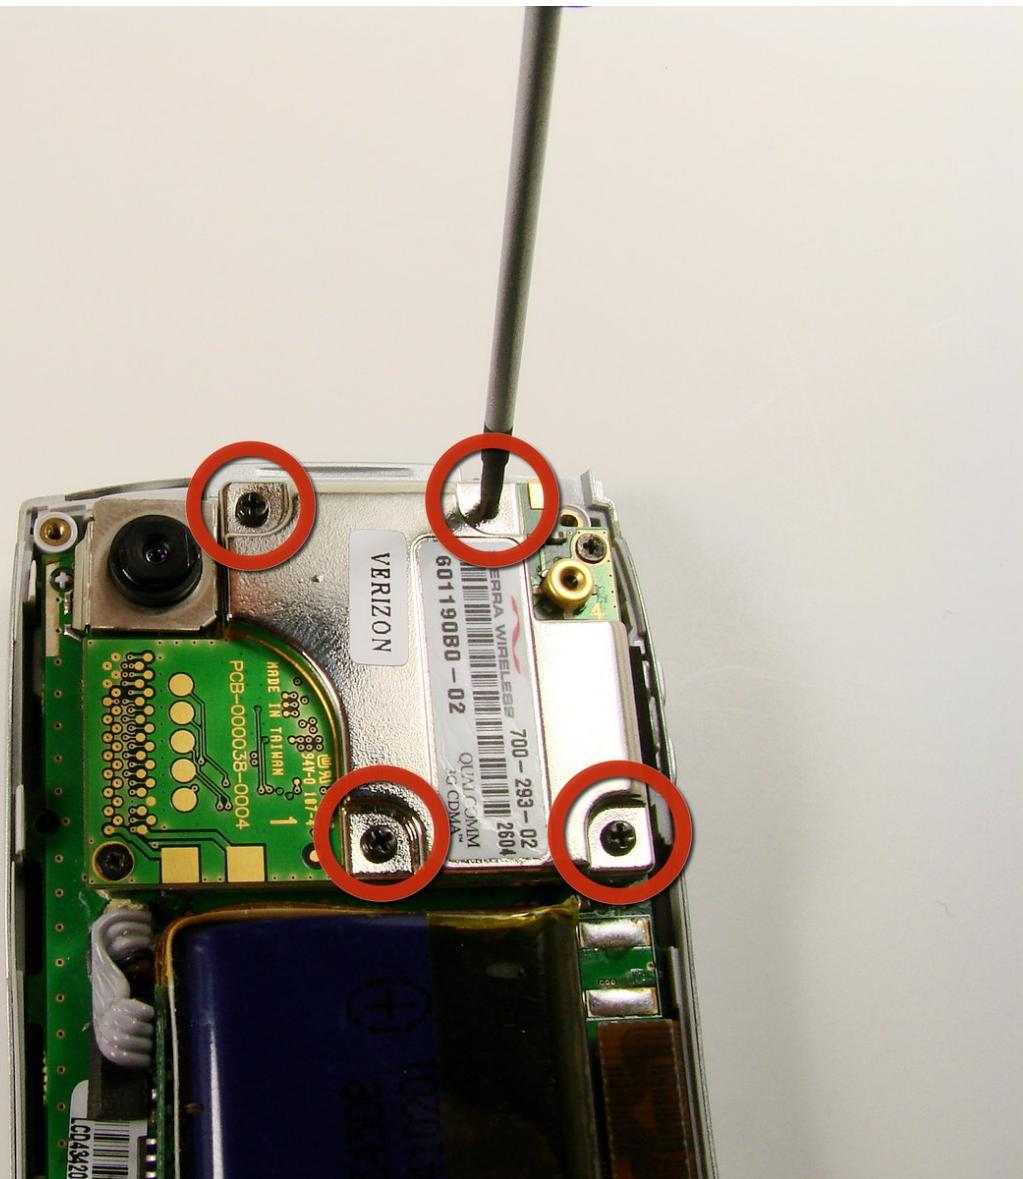

INTRODUCTION

Steps to follow if you want to replace the logic board. Also needed if you want to access the camera.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [T6 Torx Screwdriver](#) (1)

Step 1 — Back Case



- On the back of the device, locate the 3 rubber plugs, and use a plastic spudger to remove them.


Step 2



- Use the T6 Torx Screwdriver to remove all 4 screws.

(i) You have to first remove the Stylus to access the 4th screw.


Step 3

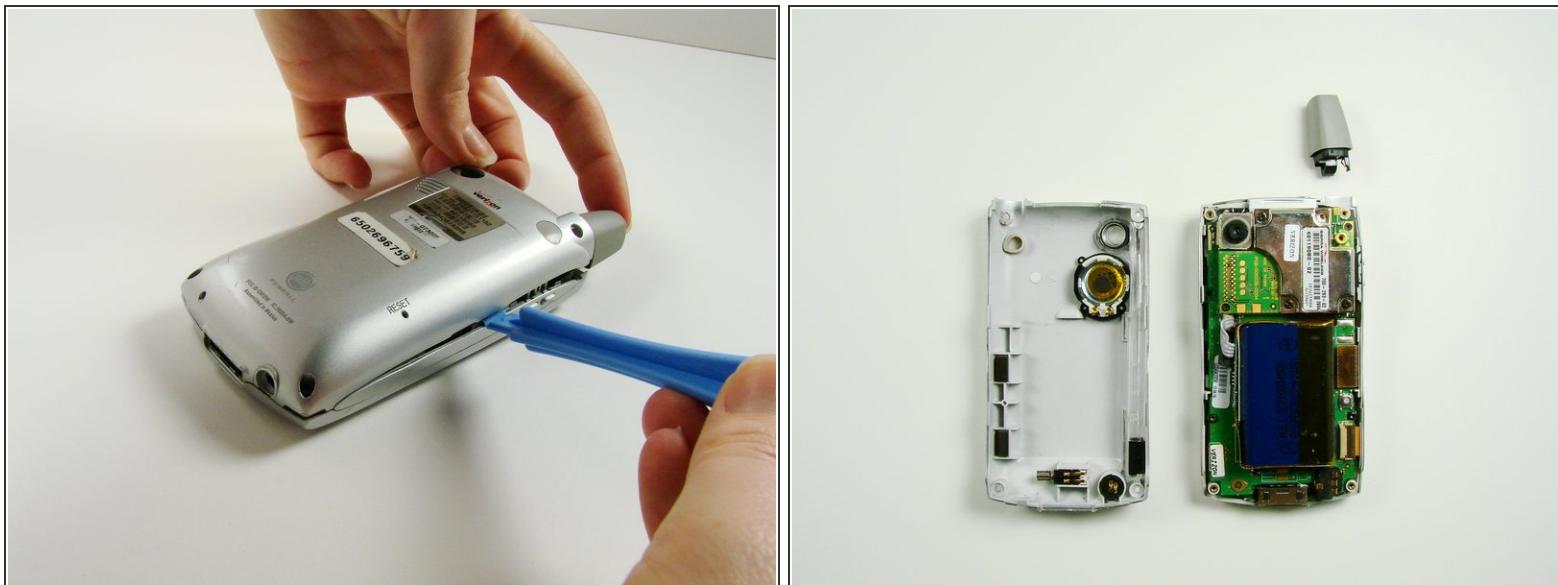

- Using a plastic opening tool, carefully separate the front and back cases.


(i) Note: The antenna will detach from the phone.

Step 4 — Motherboard

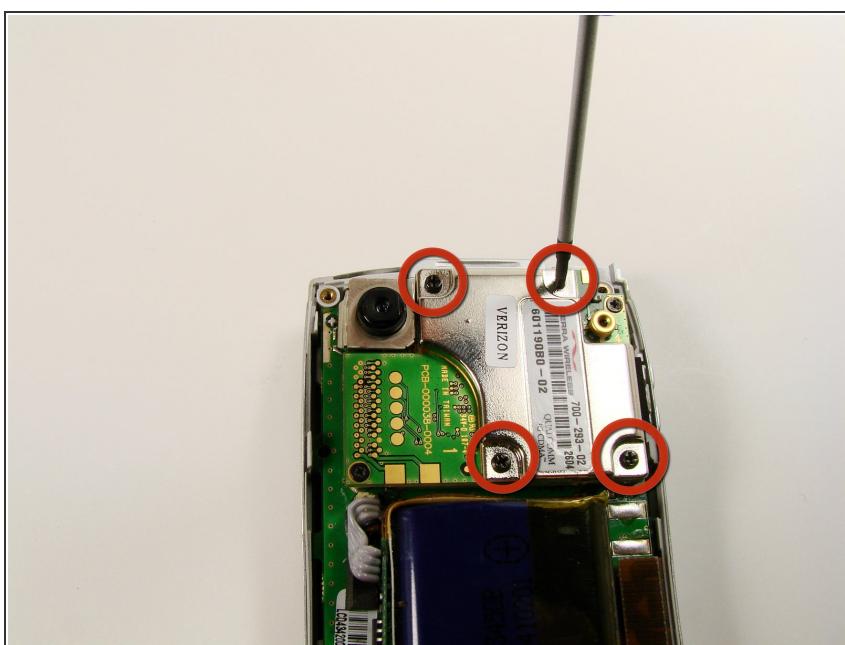

- Using the Phillips #00 screwdriver, unscrew the 4 screws holding the silver casing down.


Step 5

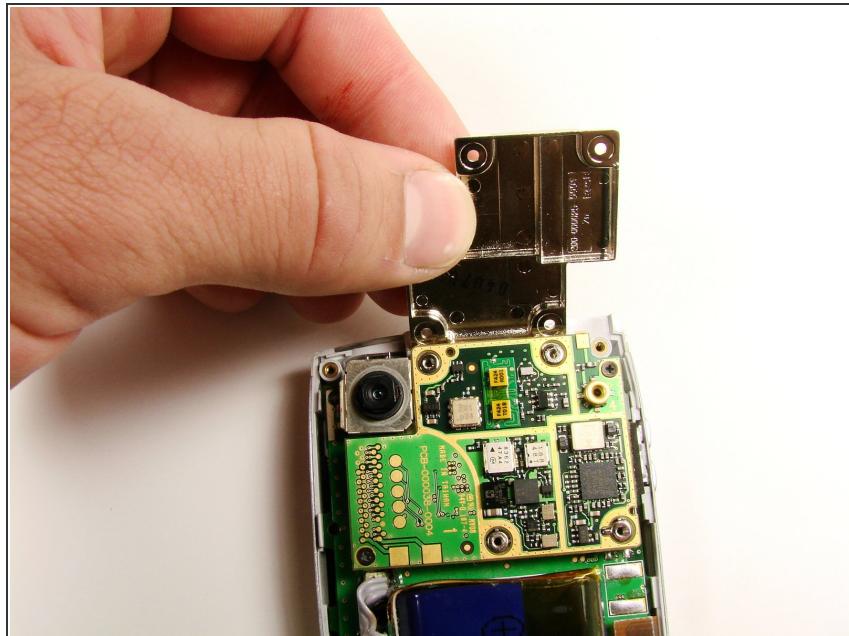

- Lift up the silver casing.


⚠ Careful! The casing is connected to the body. Pull the casing up.

Step 6

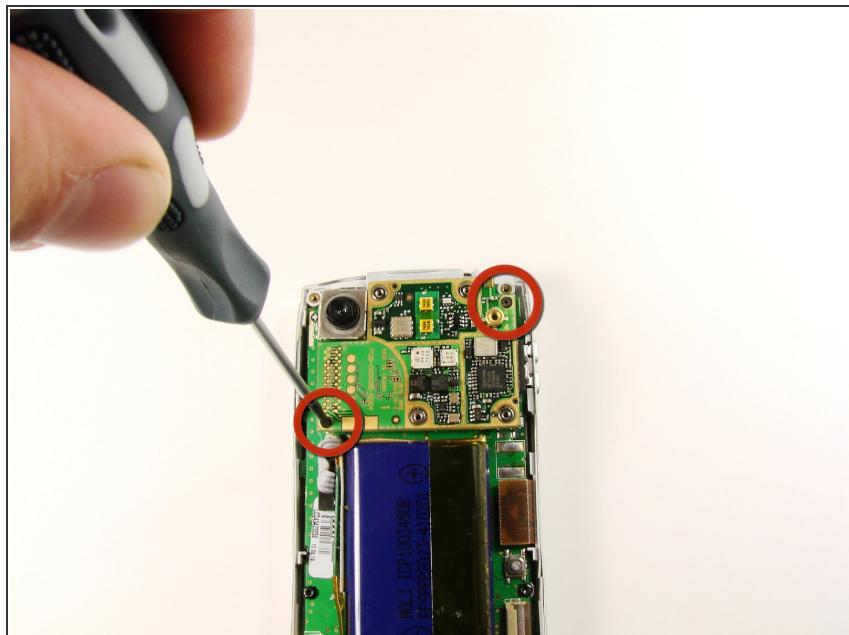

- With the silver casing removed, unscrew two black screws with a #00 Phillips Screwdriver.

Step 7

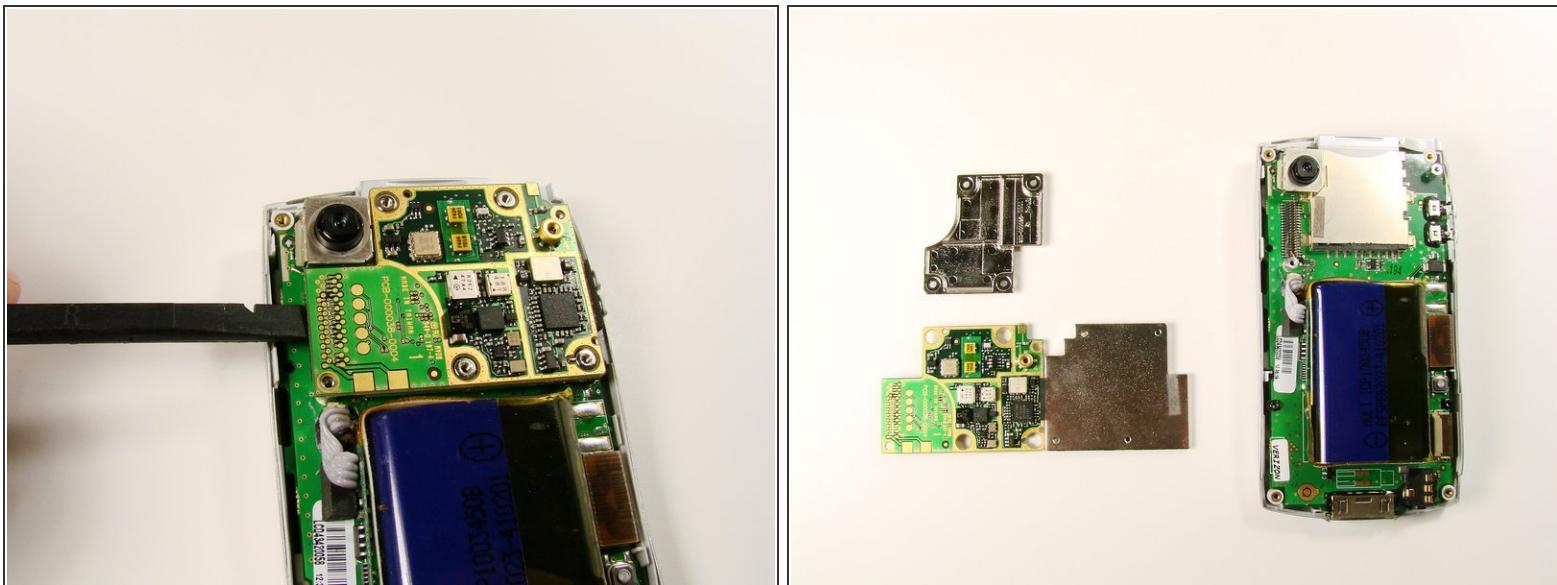

- Use the spudger to lift the logic board from its socket. Remove it from the rest of the phone.

To reassemble your device, follow these instructions in reverse order.