



# Polycom SoundStation Back Housing Replacement

Follow this guide to take off the back housing of the phone to access the motherboard and other parts.

Written By: Cali Nowak Credit



This document was generated on 2019-09-18 03:14:32 AM (MST).

## INTRODUCTION

Taking off the back of this phone will allow you to look at or replace all of the pieces inside this device. This is a prerequisite guide for any other replacement you would like to accomplish with your SoundStation.

### **TOOLS:**


- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Back Housing



- Flip the device over. Using a Phillips #00 screwdriver, remove the black 10mm screw on each three legs of the phone.
- Using a Phillips #00 screwdriver, remove the two silver 7mm screws as pictured.

## Step 2

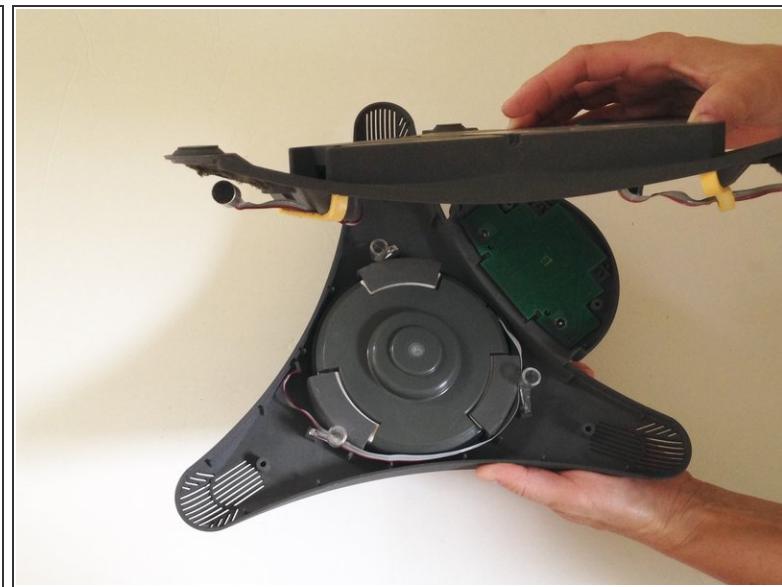

- Gently lift and separate the back housing from the rest of the device. Now you've got the back housing off!

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-18 03:14:32 AM (MST).

