



Power Macintosh G3 Blue and White Modem Replacement

Modem assembly not working or broken? Replace it! This is not meant to be confused with the Ethernet assembly.

Written By: Aaron Cooke



This document was generated on 2019-09-20 05:04:56 AM (MST).

INTRODUCTION

I wasn't able to find a replacement modem assembly online so you are on your own for that part.

TOOLS:

- Phillips #1 Screwdriver (1)

Step 1 — Before opening up your Power Mac...



- Remove the Phillips #1 screw circled in the picture. Set it aside for re-assembly.

Step 2




(i) Unfortunately, I am unable to provide OG content for this step due to my Power Mac's outer case being severely damaged. Once I get my new outer case I will update this step.

- Lift the latch on the right side panel to reveal the internals.

(i) If you are doing this on a hard surface I highly suggest you put a mat down between the door and the ground to prevent scratches.

Step 3

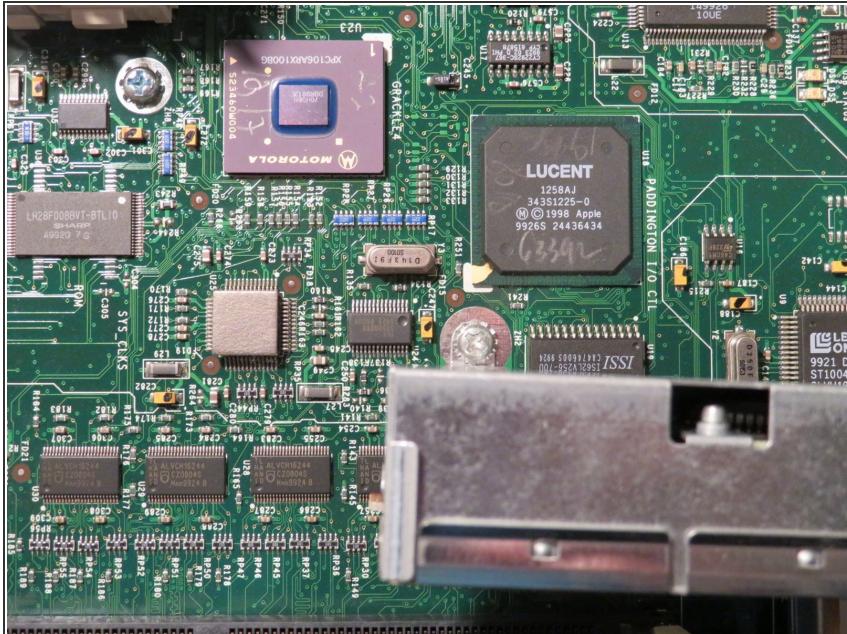

- Remove the single Phillips #1 screw circled in the picture.

(i) I apologize for the lack of picture quality. The only camera and lighting I had were my iPhone X's camera and a table lamp. Lol!

Step 4



- Disconnect the modem's flex cable from the connector on the logic board.

Step 5



- Lift the modem assembly out of its place on the logic board.

To reassemble your device, follow these instructions in reverse order.