



Repair Loose Floorboard Carpet in Vehicle

How to repair loose floorboard carpet in a vehicle.

Written By: Tedra Levatte



INTRODUCTION

This Fast Fix repair guide will teach readers how to repair loose floorboard carpet in a vehicle for less than \$30.00 and under 1 hour completion time. This repair guide will avoid the cost and the wait time of the repair if performed at the dealership. The guide steps are easily achievable for readers.

TOOLS:


- [Spray headliner adhesive](#) (1)
- [Mask](#) (1)
- [Latex or nitrile gloves](#) (1)
- [Squeegee](#) (1)

Step 1 — Floorboard Carpeting



- Pull back detached carpet from the floorboard to determine how much carpet is detached.

Step 2

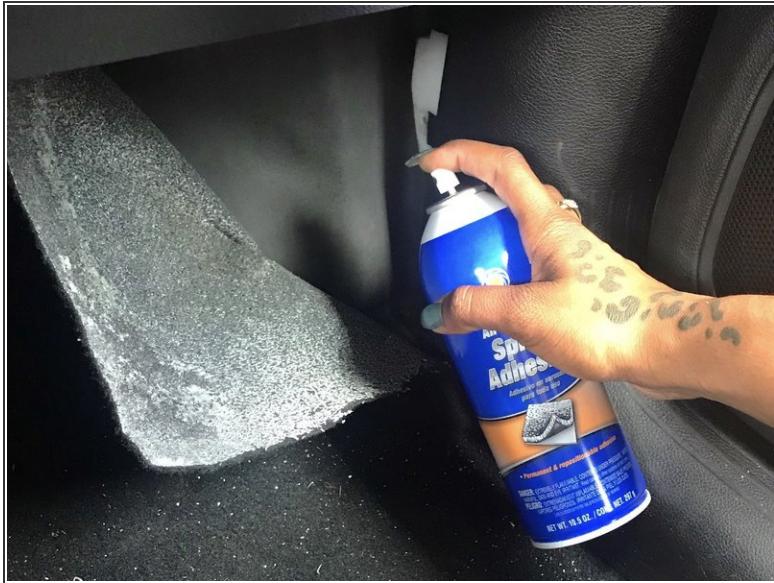

- Apply a generous layer of spray adhesive to floorboard.

⚠ Wear a mask to prevent inhalation of fumes.

⚠ Wear gloves to prevent the adhesive from sticking to your hands.

⚠ Perform repair in a well ventilated area.

Step 3



- Allow 15-30 seconds for adhesive to dry before attaching carpet to floorboard.



Step 4



- Apply carpet to floorboard firmly using hands.

(i) This step needs to be repeated until carpet is in place with no wrinkles or bulges.

Step 5

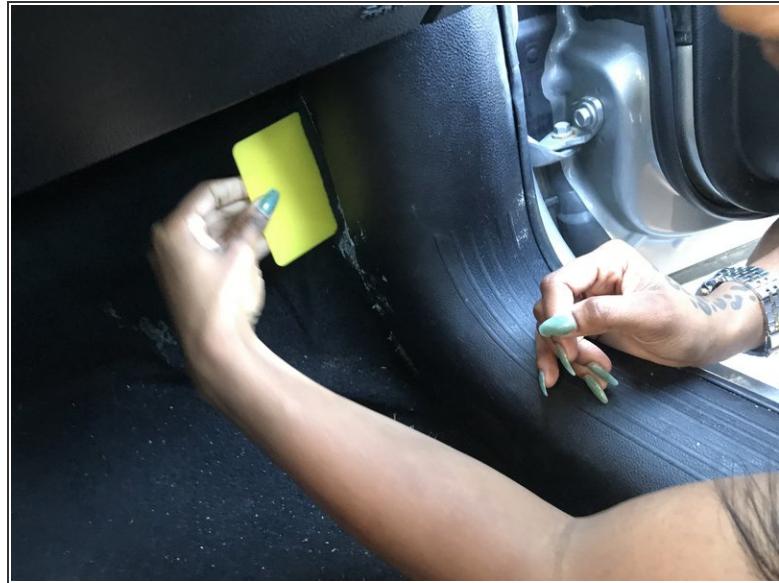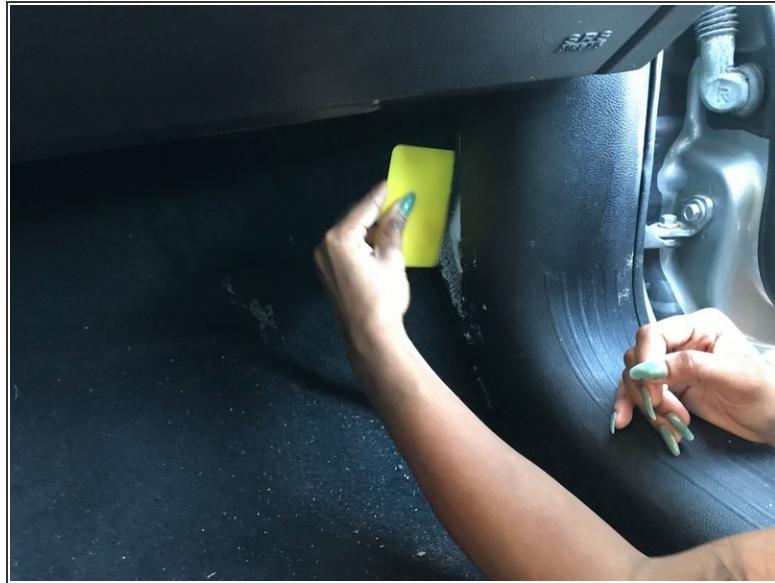

- Use a plastic squeegee to tuck the corner of the carpet into the paneling of the floorboard.

Step 6



- Vacuum floorboard to remove any debris or dirt.

To reassemble your device, follow these instructions in reverse order.