


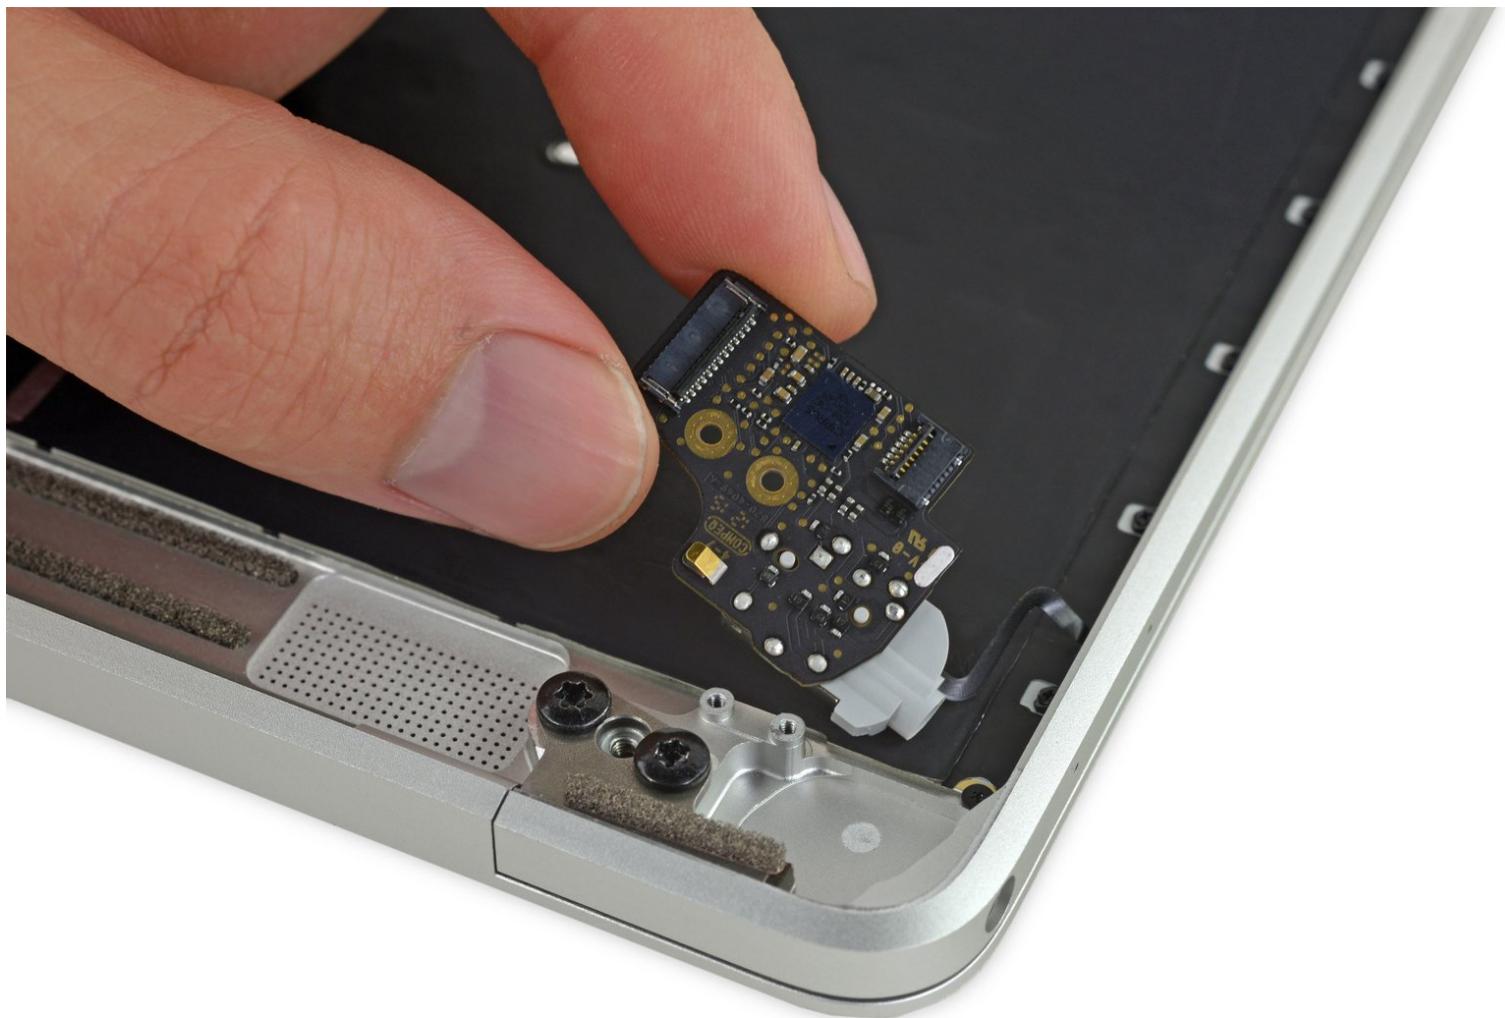

Retina MacBook 2015 Audio Jack Board Replacement

Replace the audio jack board.

Written By: Geoff Wacker



INTRODUCTION

Prereq only to remove the audio jack board with the lower case fully removed.

TOOLS:


- [iPad Battery Isolation Pick](#) (1)
- [P5 Pentalobe Screwdriver Retina MacBook Pro and Air](#) (1)
- [Spudger](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)
- [Tri-point Y00 Screwdriver Bit](#) (1)

Step 1 — Audio Jack Board




- Use a spudger to flip open the ZIF connector retaining flap for the dual microphone assembly ribbon cable.

Step 2

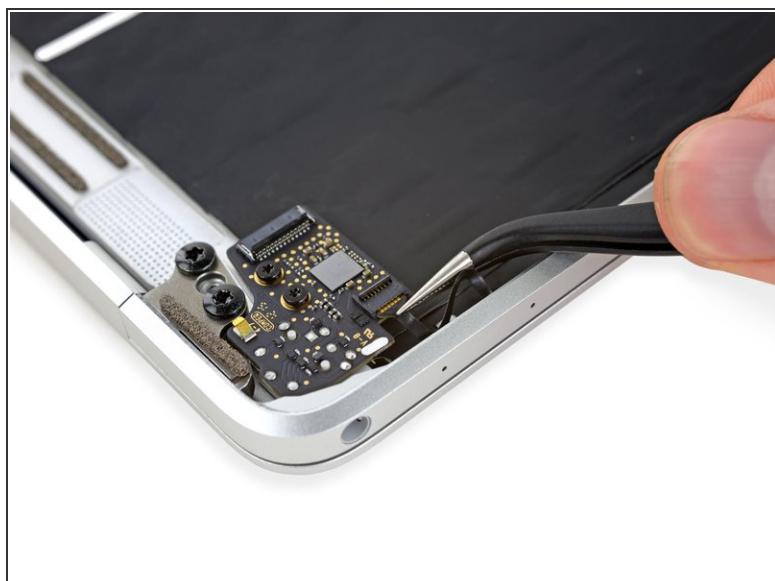


- Use tweezers to pull the microphone assembly ribbon cable free of its connector.

Step 3

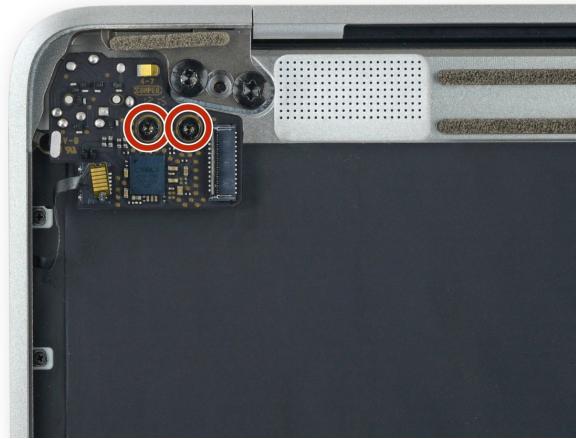

- Remove the two 3.2 mm T5 Torx screws securing the audio jack board to the case.

Step 4

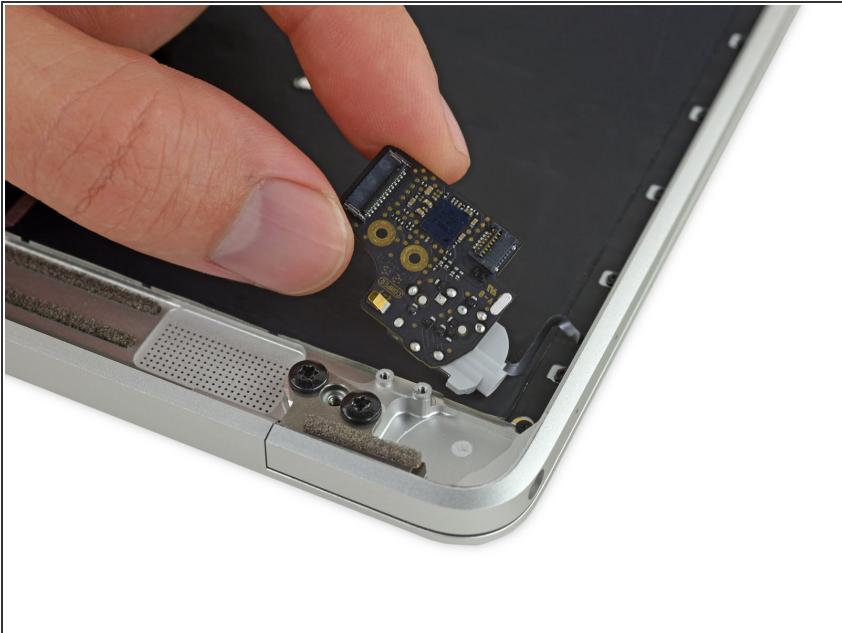

- Remove the audio jack board.

To reassemble your device, follow these instructions in reverse order.