




Samsung BlackJack II Audio Receiver Replacement

Install the audio receiver inside of your phone.

Written By: Ryan Rumsey

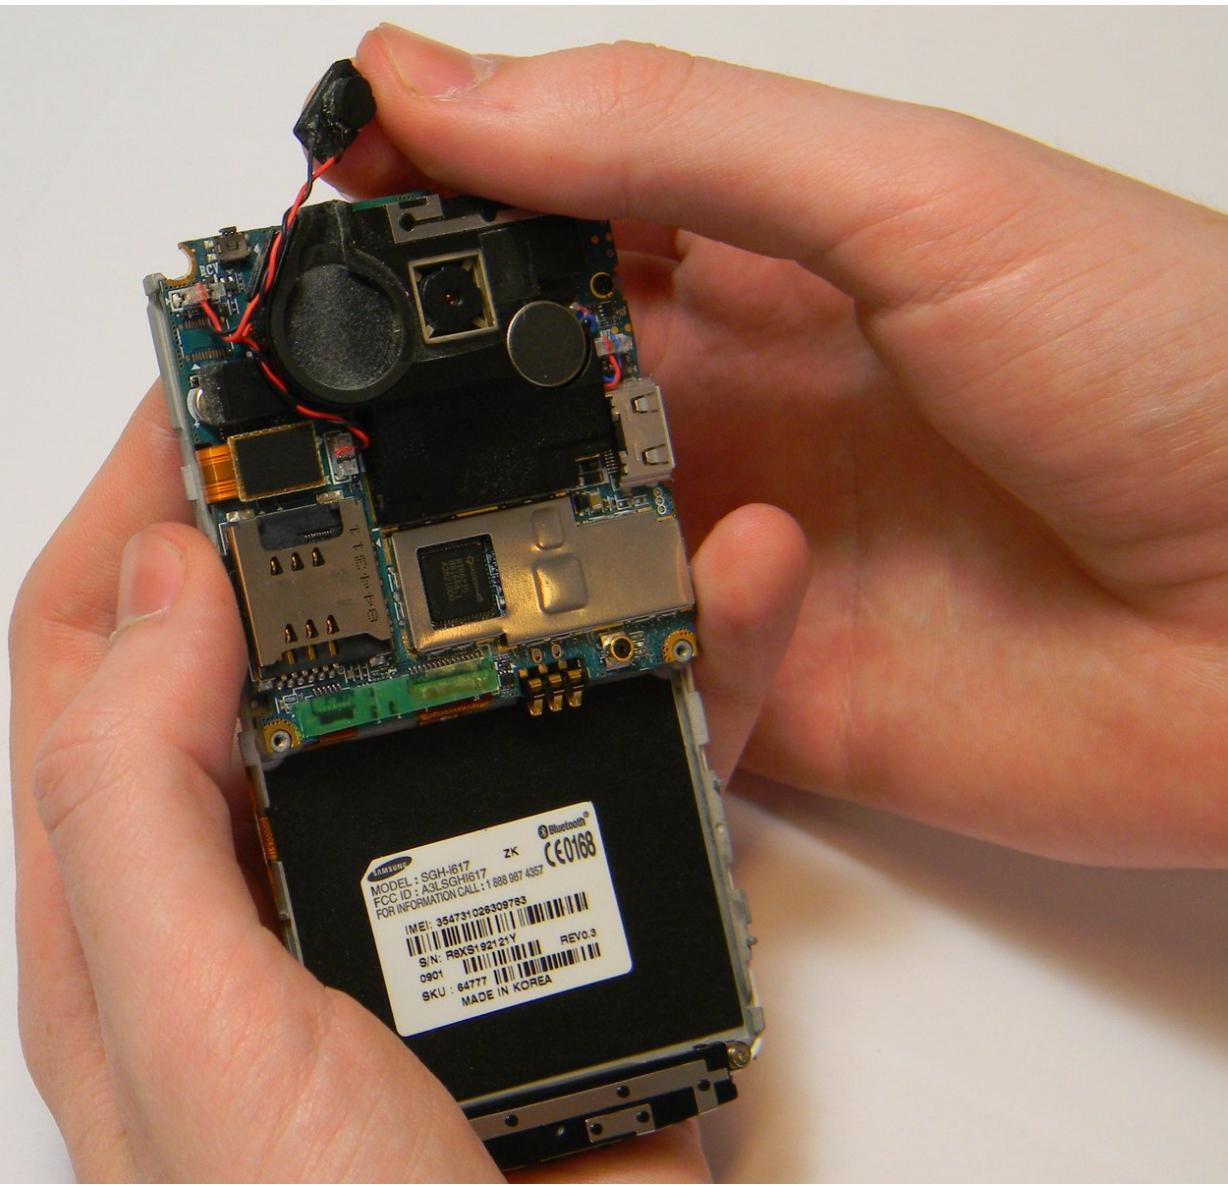


INTRODUCTION

Use this guide to install, remove or replace the phone's audio receiver.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)

Step 1 — Battery

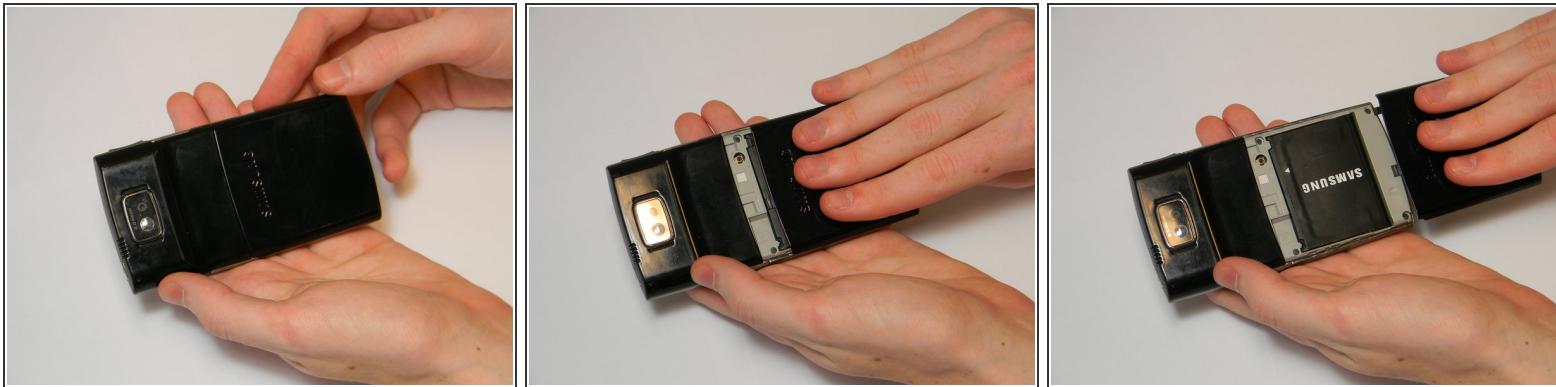

- Apply downward pressure to the top of the battery panel while pulling down to slide it off the phone.

Step 2




- Locate the grooves on the sides of the battery near the bottom of the phone. Use your fingers to pull the battery up and out of the phone.

Step 3 — Back Casing




- Use the spudger to pry the two plastic caps out of the top corners of the phone casing.
- To get a better grip, you may use the tweezers to finish pulling the plastic caps from the phone.

Step 4

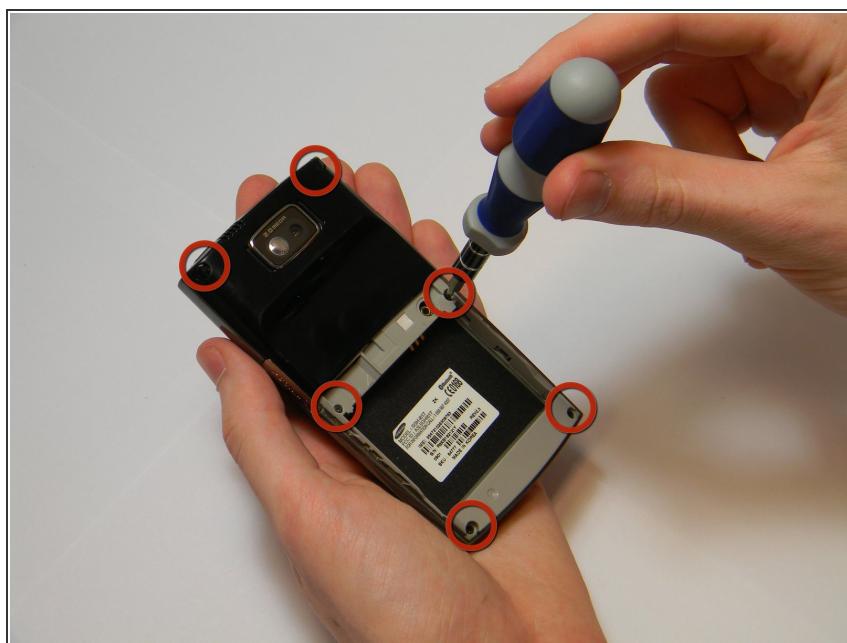

- Remove the six 4.0 mm screws using the Phillips 00 screwdriver.


Step 5

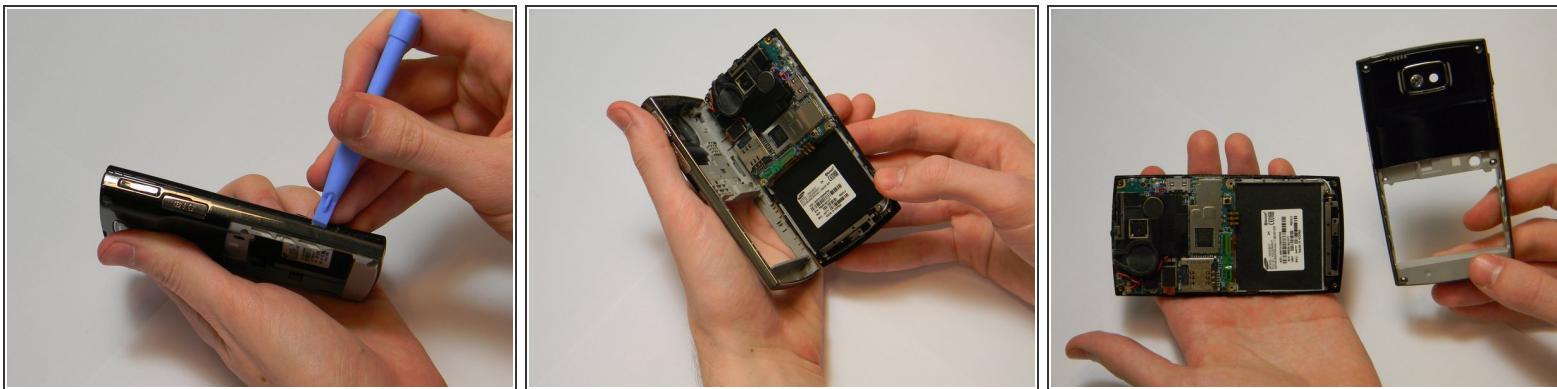

- Insert the plastic opening tool in the gap between the back panel and rest of the body.
- Slide the tool along the edges until the two pieces come apart.


(i) The circuit board is attached to the front casing. Both casings should separate without having to sever electrical connections.

Step 6 — Front Casing

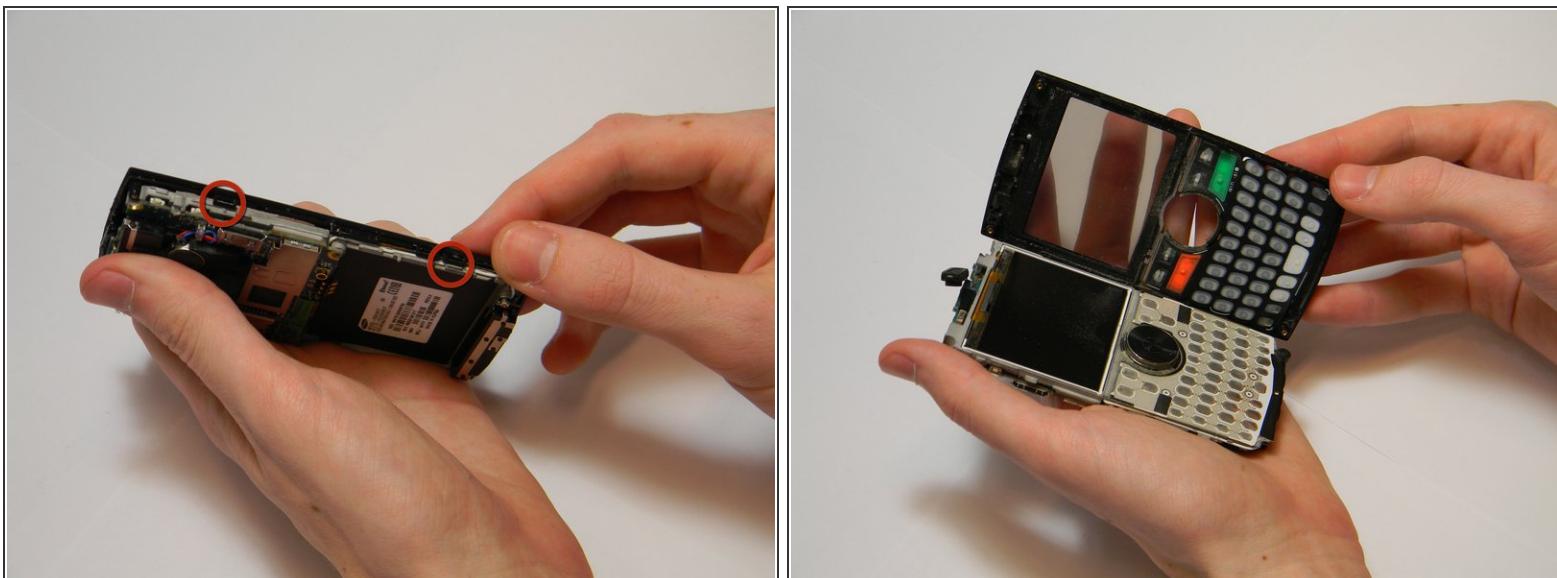



- Pry apart the plastic tabs along the edges of the phone.
- Separate the front panel from the main body of the phone using your fingers.

Step 7 — Audio Receiver

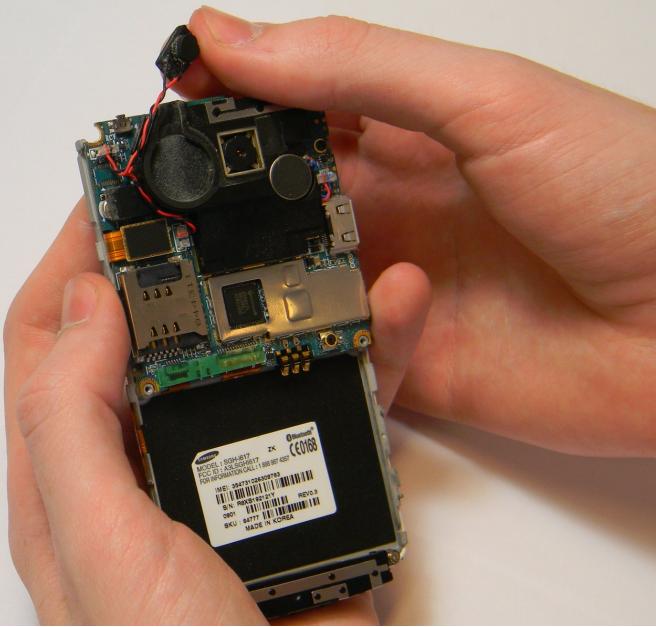

- The audio receiver is a small rectangular piece connected via wire to the circuit board.
- Carefully free the audio receiver so it is only connected by a small, clear plug on the circuit board.

Step 8

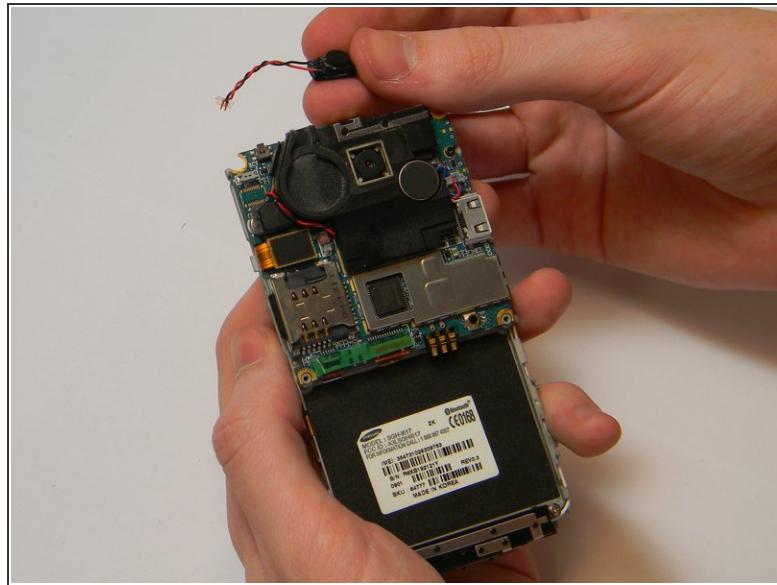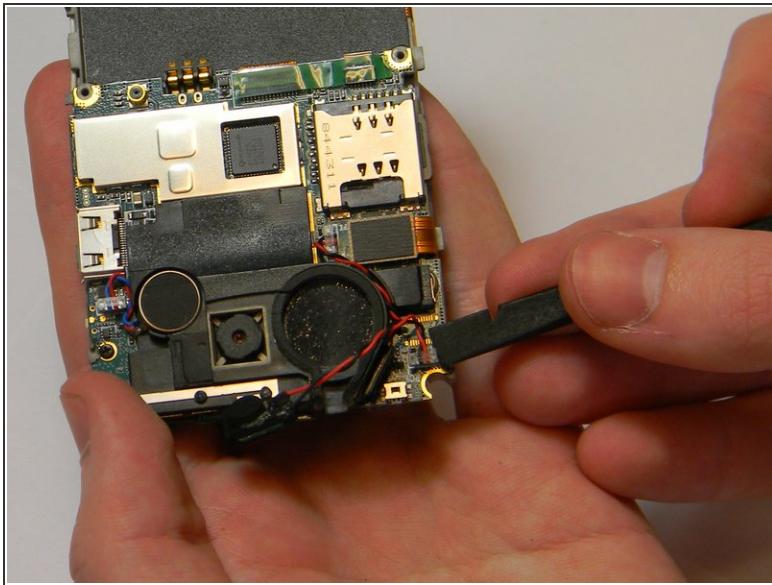

- Use the spudger to separate the clear plug from its connector on the circuit board.
- Use light force to avoid damaging any fragile components.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-27 07:31:08 AM (MST).

