



Samsung BlackJack II Keypad Replacement

Install the rubber keypad of your phone.

Written By: Ryan Rumsey



INTRODUCTION



Use this guide to install, remove, or replace the phone's keypad.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery

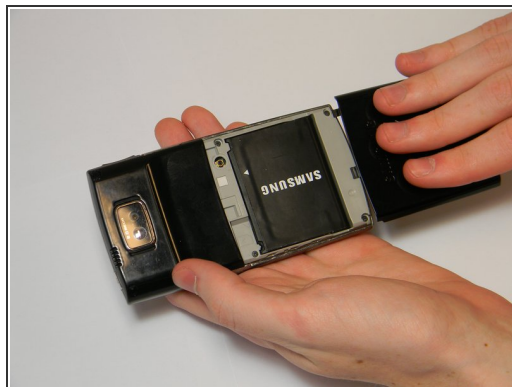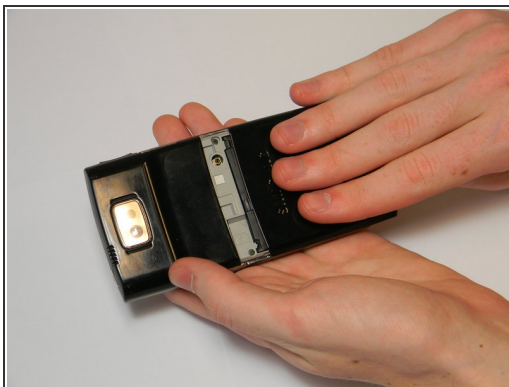


- Apply downward pressure to the top of the battery panel while pulling down to slide it off the phone.

Step 2

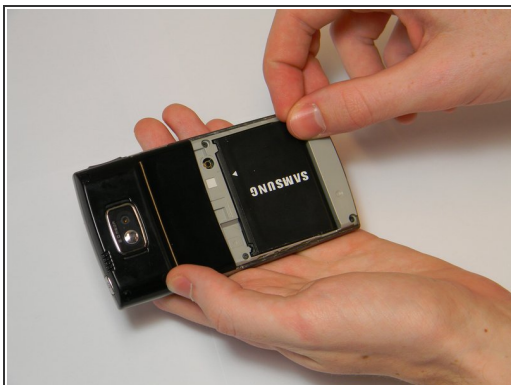


- Locate the grooves on the sides of the battery near the bottom of the phone. Use your fingers to pull the battery up and out of the phone.

Step 3 — Back Casing

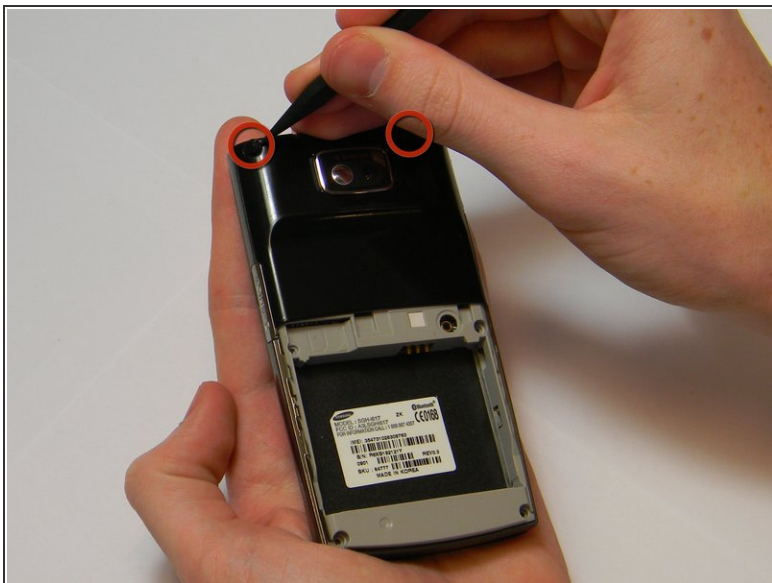


- Use the spudger to pry the two plastic caps out of the top corners of the phone casing.
- ⓘ To get a better grip, you may use the tweezers to finish pulling the plastic caps from the phone.

Step 4

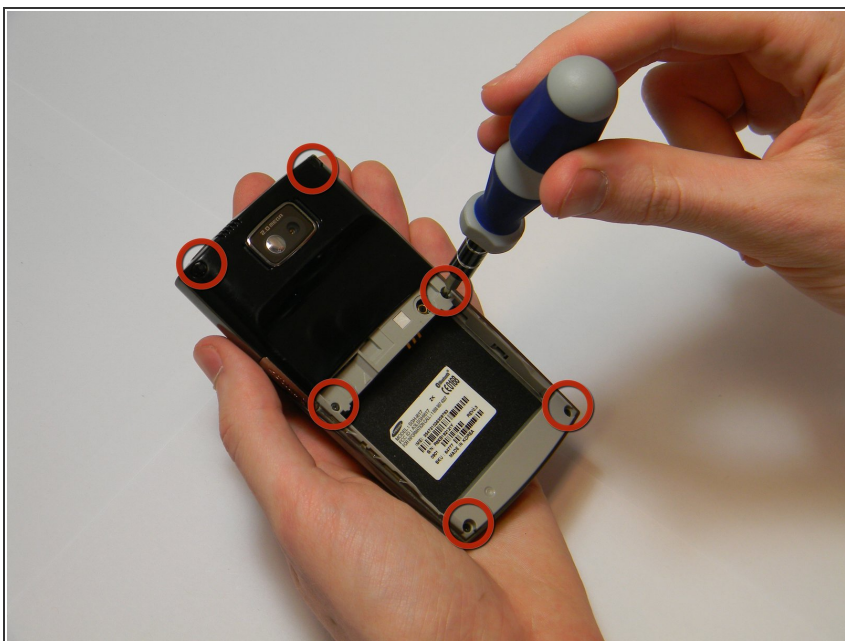


- Remove the six 4.0 mm screws using the Phillips 00 screwdriver.

Step 5

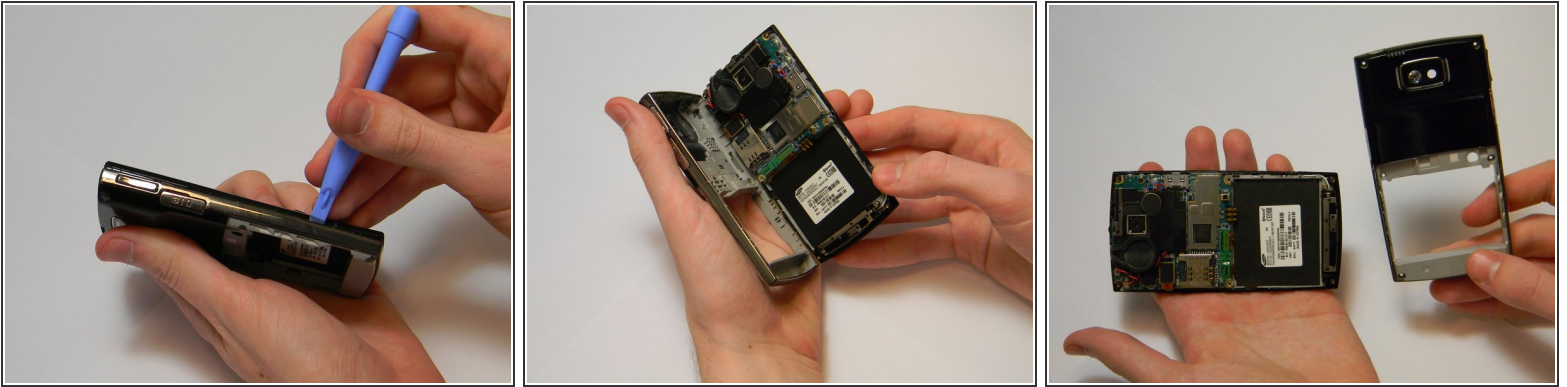

- Insert the plastic opening tool in the gap between the back panel and rest of the body.
- Slide the tool along the edges until the two pieces come apart.
- ⓘ The circuit board is attached to the front casing. Both casings should separate without having to sever electrical connections.

Step 6 — Front Casing

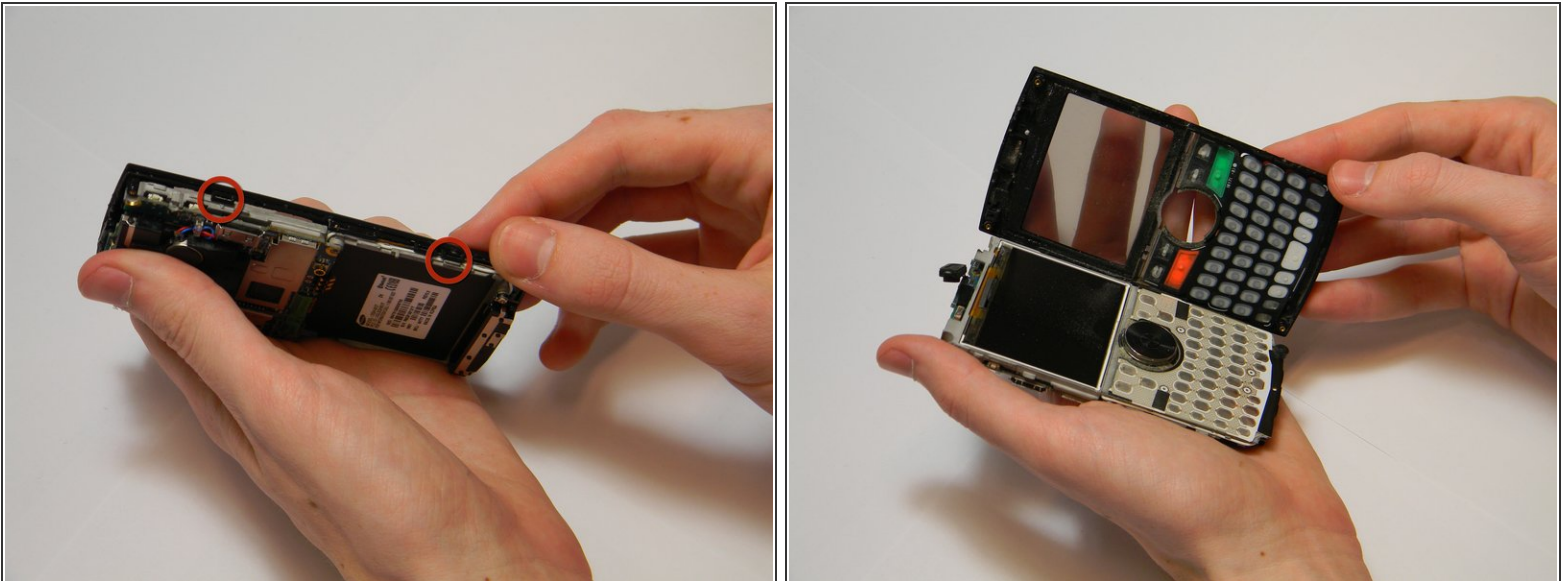

- Pry apart the plastic tabs along the edges of the phone.
- Separate the front panel from the main body of the phone using your fingers.

Step 7 — Keypad



- Peel back the rubber keypad from the front casing.

To reassemble your device, follow these instructions in reverse order.