




# Samsung Exhibit II 4G Headphone Jack Replacement

Replace the Headphone Jack in your Samsung Exhibit II 4G.

Written By: David R

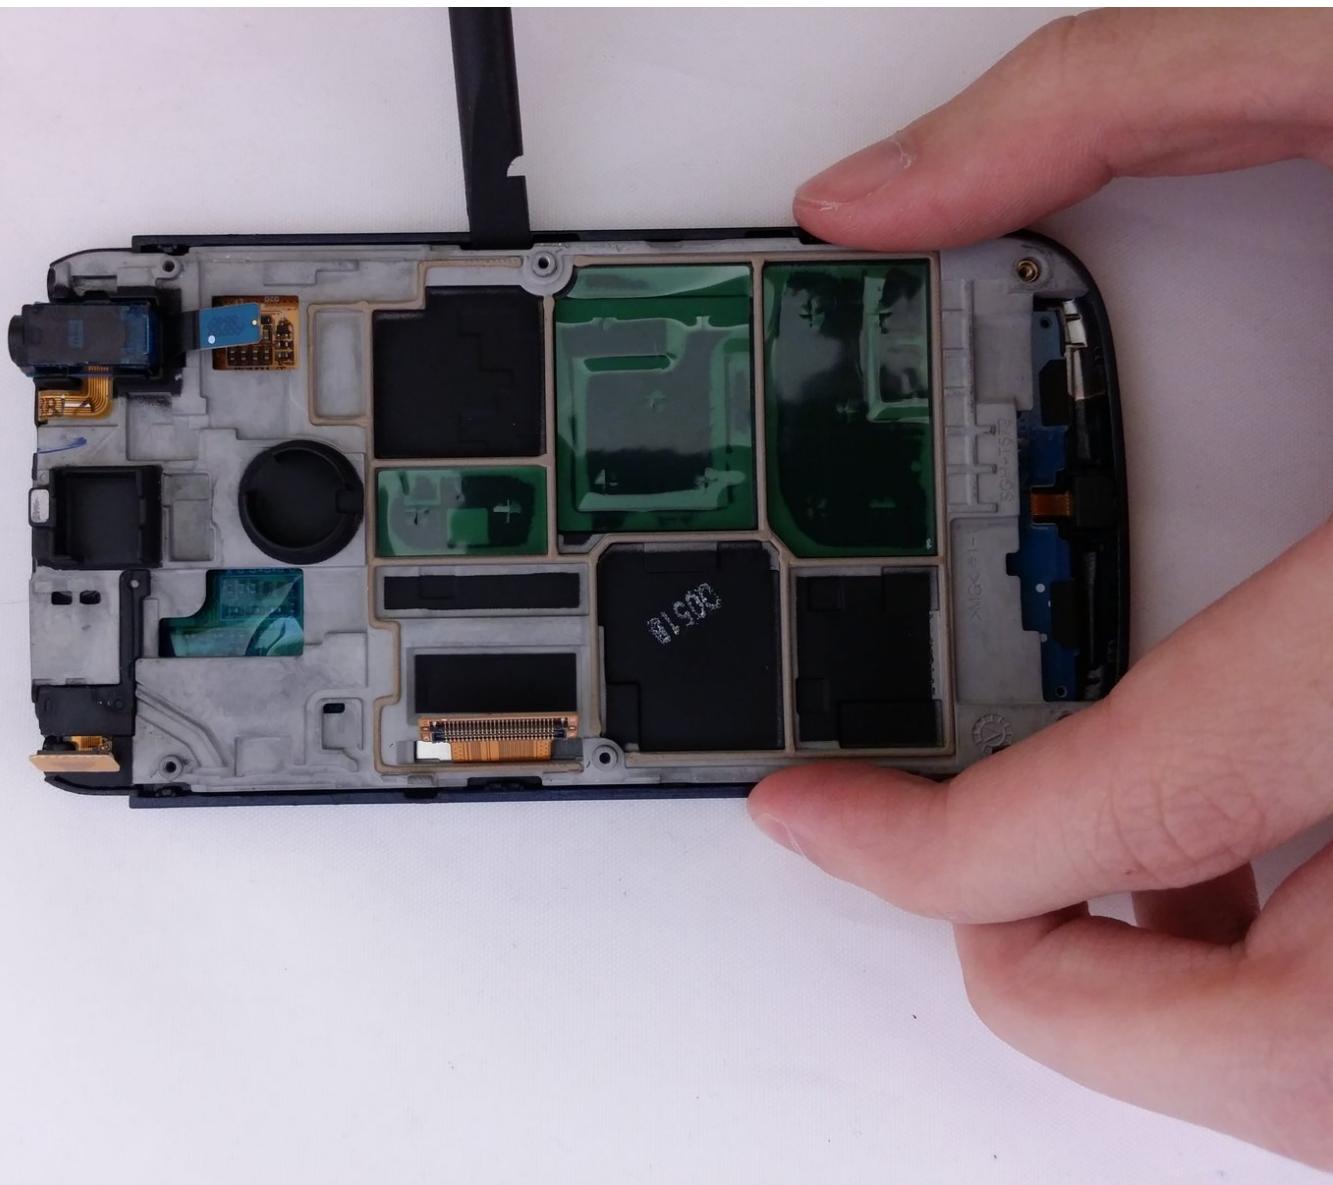

## INTRODUCTION

Use this guide to replace a defective Headphone Jack.

### TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Battery




- Insert plastic opening tool under back cover.
- Apply pressure on tool while using a downward motion to pop off back cover.

## Step 2

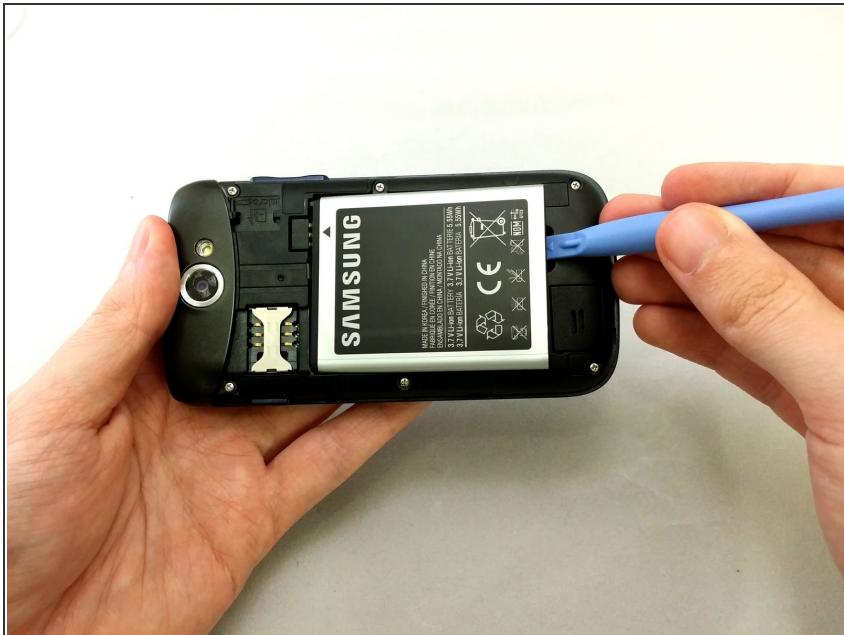

- Insert plastic opening tool under battery.
- Pry battery out.

## Step 3 — Top Rear Housing Cover

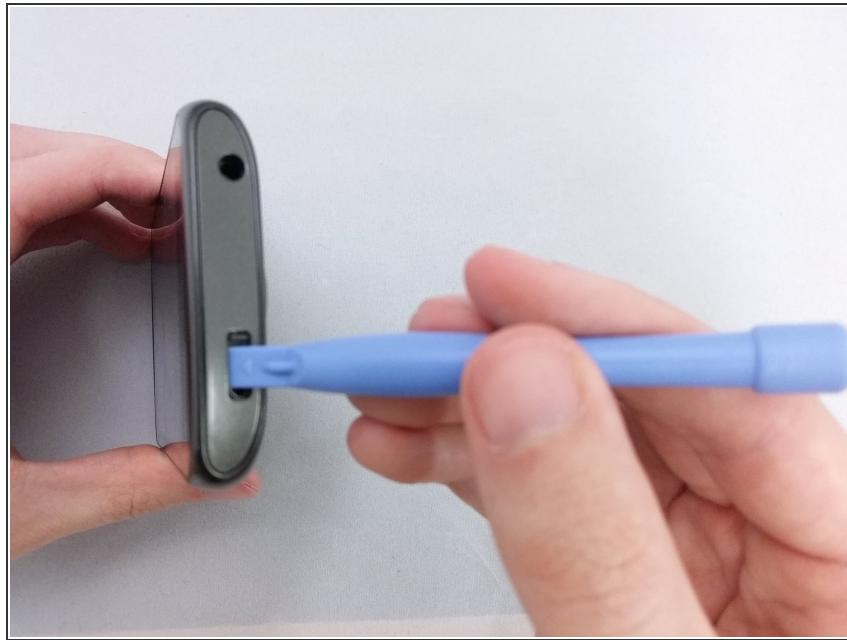

- Insert plastic opening tool under back cover.
- Pry the top cover upward to remove it from the phone.

## Step 4



- Remove the top cover.

## Step 5




- Remove the four 3.8mm Phillips #000 screws securing the top cover to the back assembly.
- *(i)* Two screws from top and two screws from back.

## Step 6




- Insert plastic opening tool under top cover.
- Using hand slide top cover away from phone.

## Step 7 — Midframe

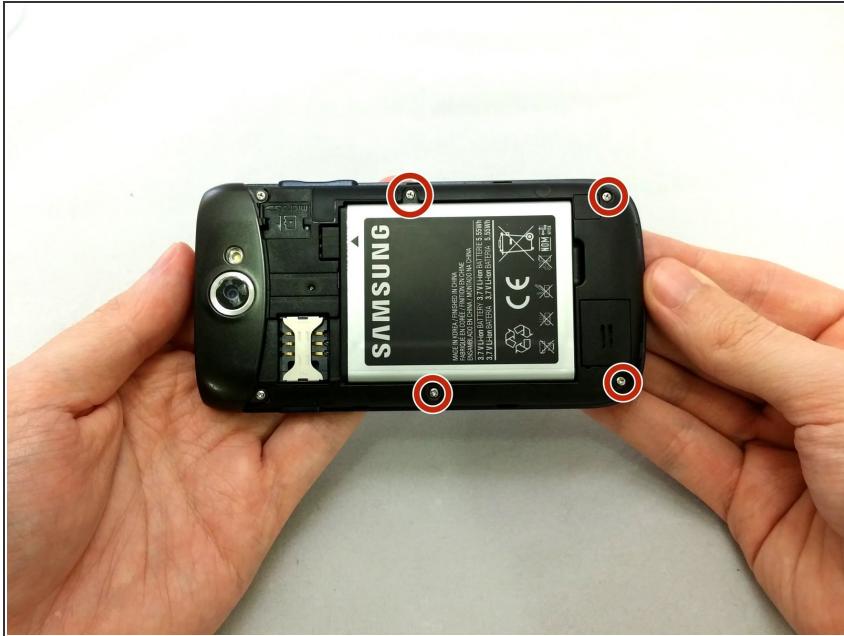

- Remove the four 3.8mm Phillips #000 screws securing the back assembly to the phone.

## Step 8

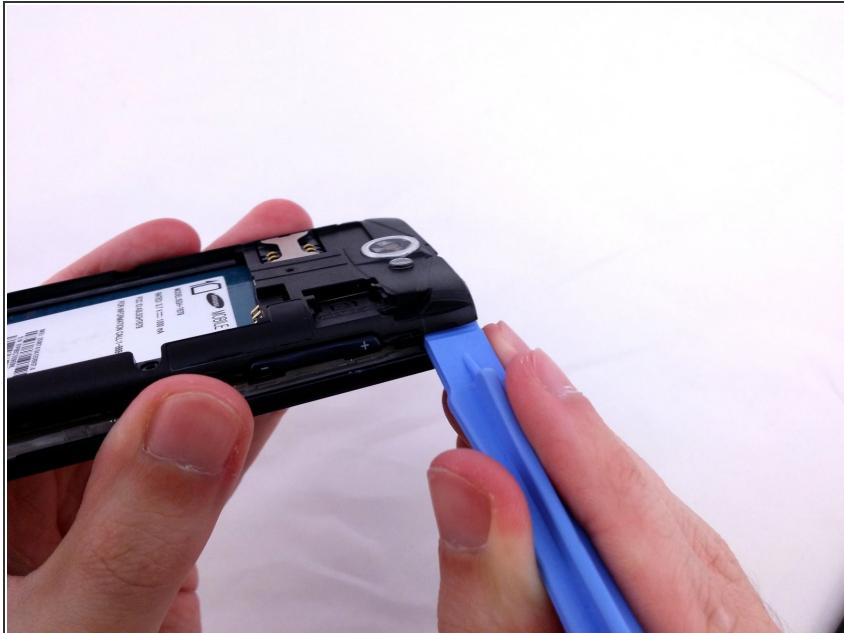

- Insert plastic opening tool between back assembly and phone.
- Pry the back assembly away from phone.

## Step 9



- With plastic opening tool continue prying around the edge of the back assembly.

## Step 10





- Pull back panel assembly away from main body.

## Step 11 — Vibration Motor



- Insert the pointed end of a spudger into the gap in the round housing frame.
- Using spudger to remove vibrator remove from the adhesive.


## Step 12

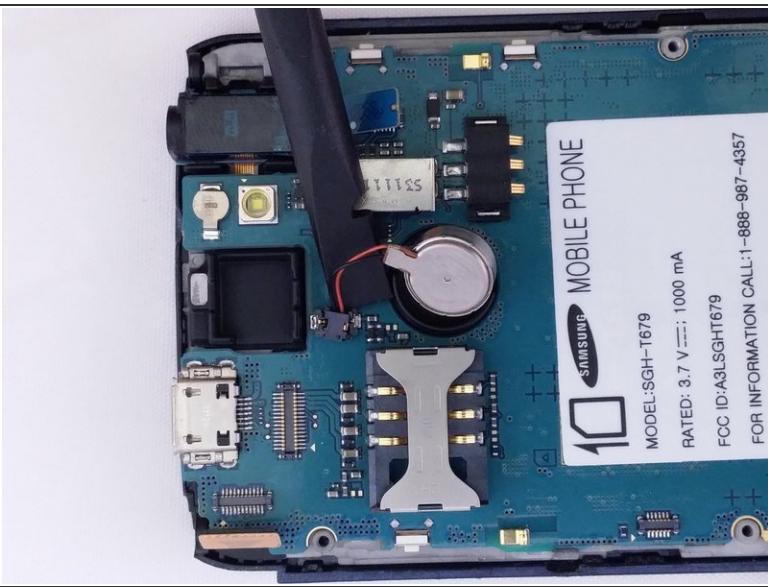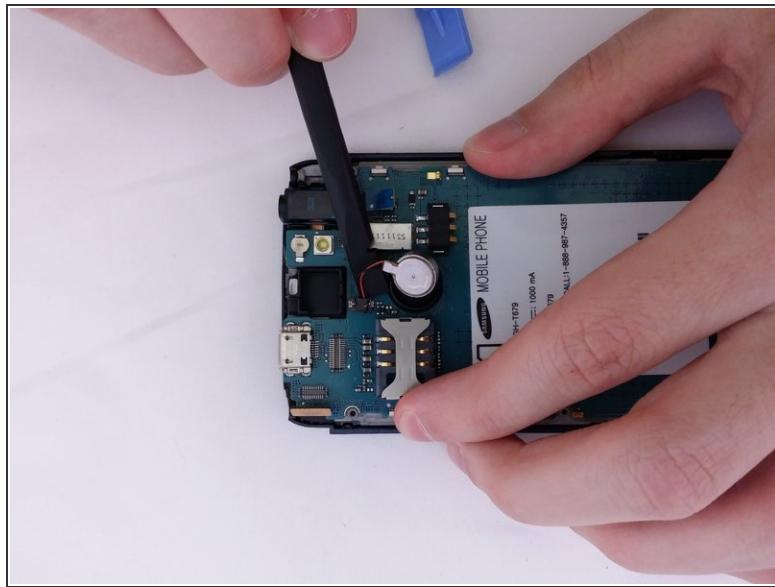

- Use the flat end of a spudger to remove vibrator cable from motherboard.


MOBILE PHONE  
MODEL:SGH-T679  
RATED: 3.7 V == 1000 mA  
FCC ID:A3LSGHT679  
FOR INFORMATION CALL:1-888-987-4357

## Step 13 — Rear Facing Camera

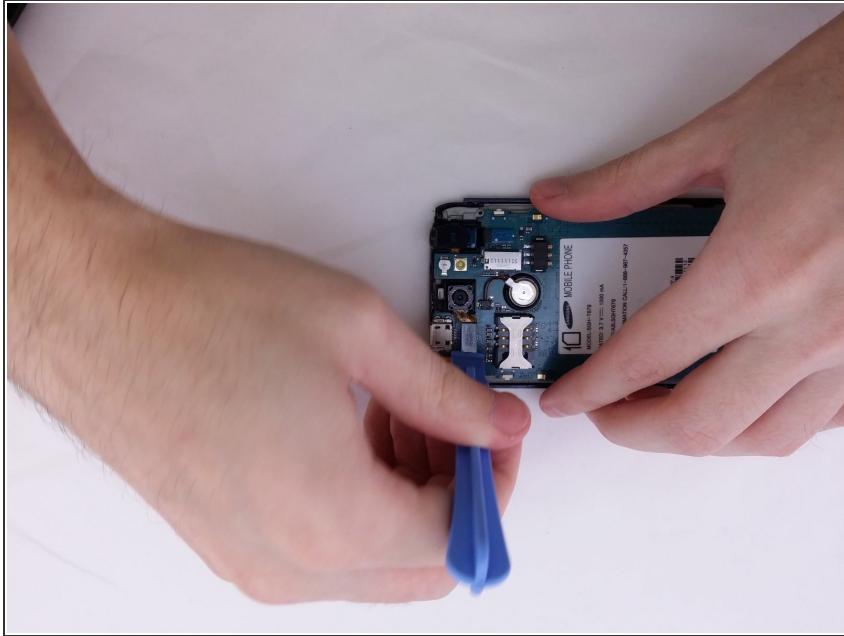

- Use the flat end of a spudger to disconnect the camera assembly cable.

## Step 14

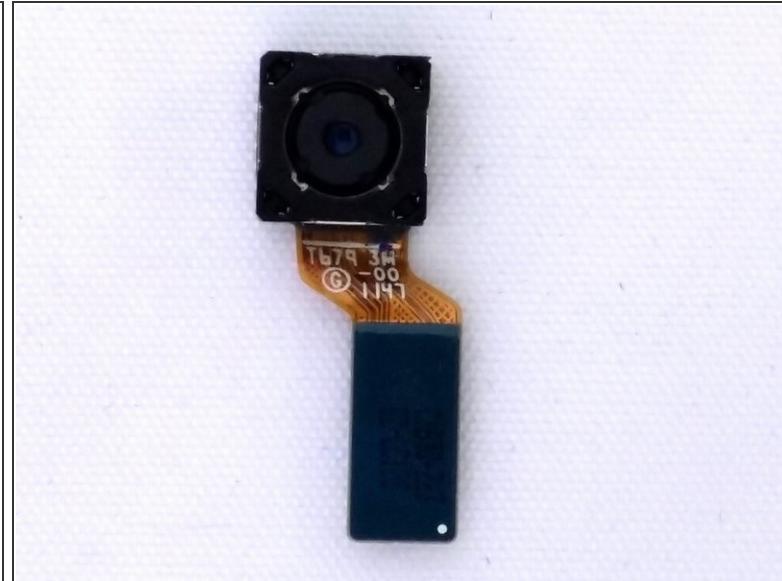


- Remove camera from square housing.

## Step 15 — Motherboard




- Insert the spudger under each corner ribbon cable and lift them out of the way.
- ⚠ Use care when lifting the ribbon cables.
- Insert a plastic pry tool into the gap between motherboard and base of phone

## Step 16

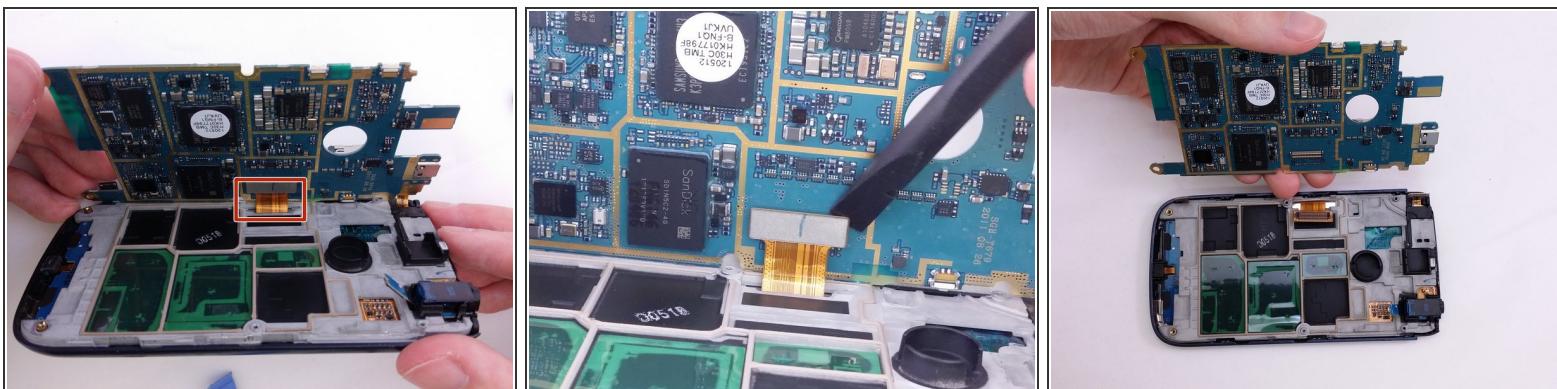


- Tilt the motherboard up carefully.
- ⚠ Be sure not to damage the ribbon cable still connected at the bottom of the motherboard.
- Use a spudger to pry the connector from the socket on the motherboard.
- Lift motherboard from frame.

## Step 17 — Headphone Jack

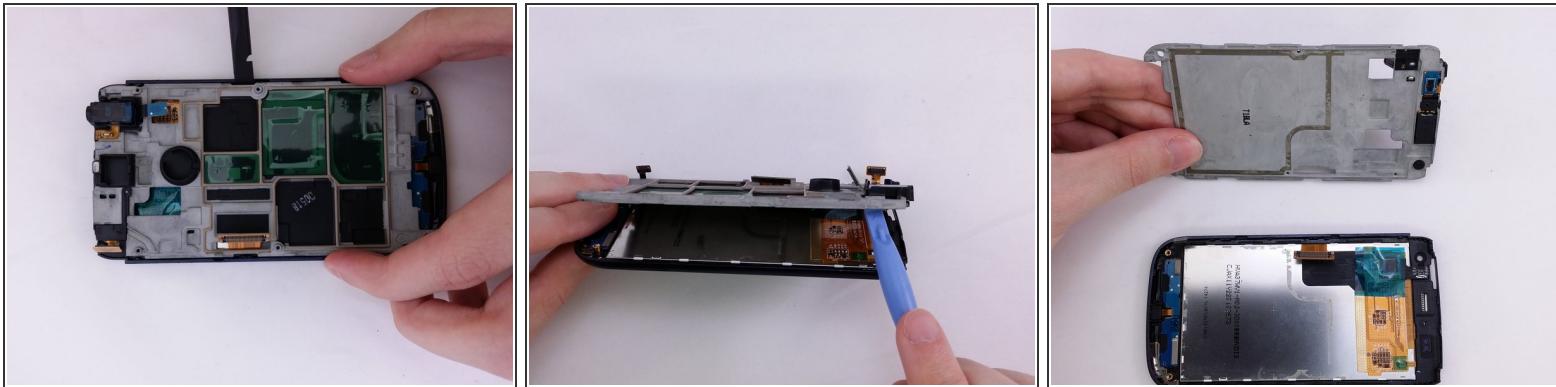


- Insert flat end of spudger between support panel and front assembly.
- Using a spudger pry up to create opening to insert plastic opening tool.

## Step 18

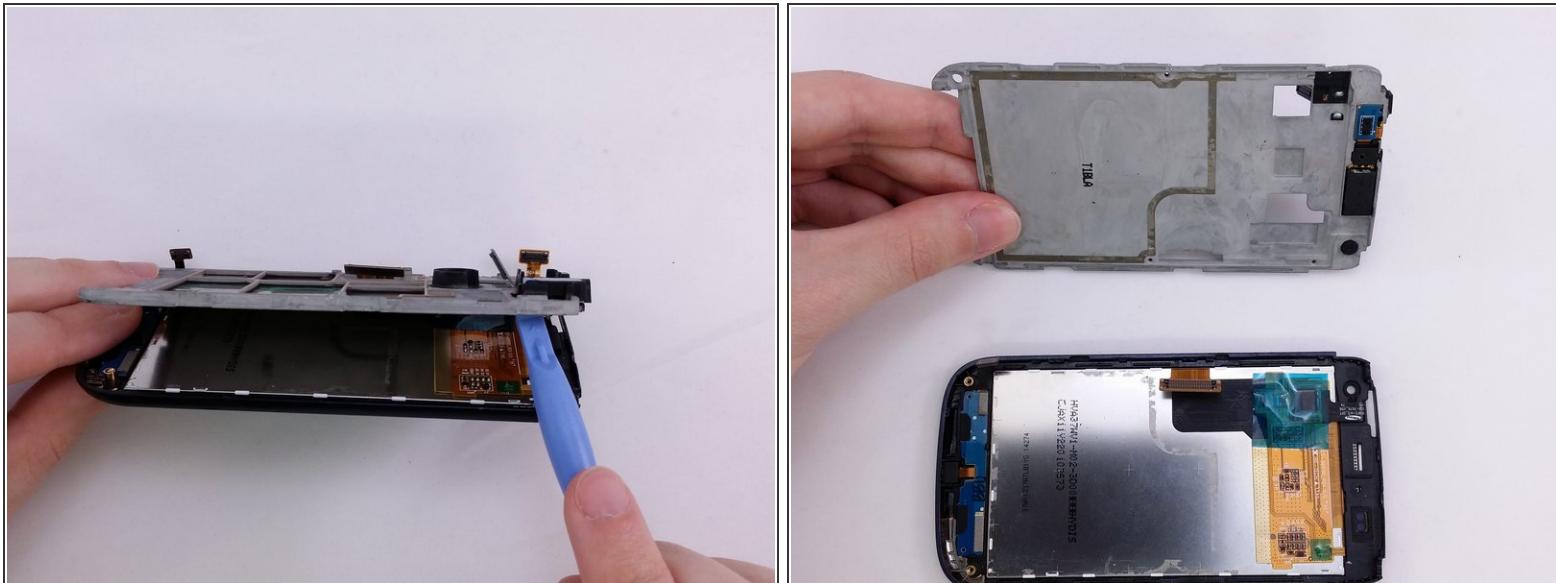


- Insert a plastic opening tool in opening.
- Use plastic opening tool to pry around the edge of support panel to free it from front assembly.

## Step 19

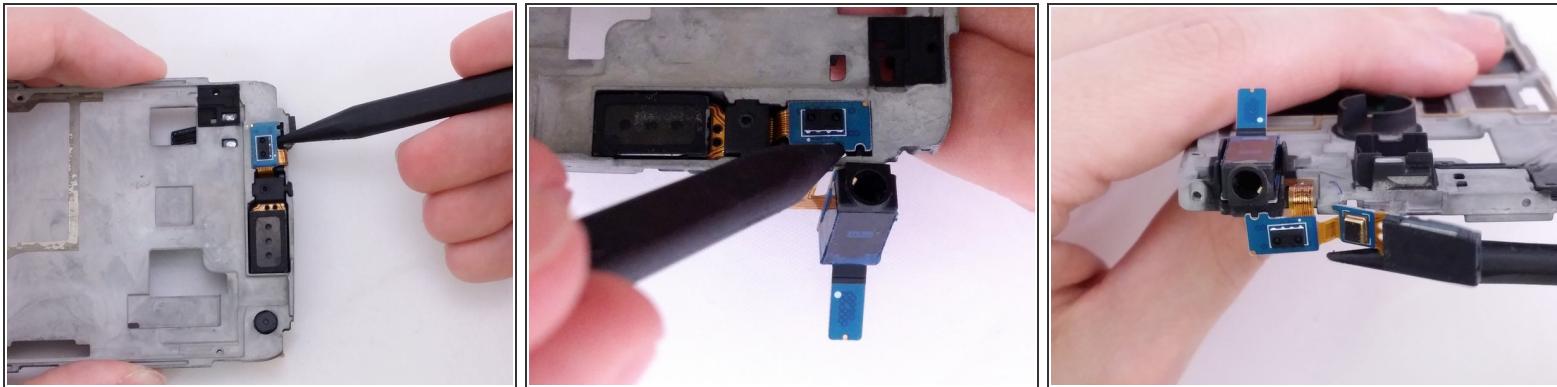

- Insert the pointed end of a spudger into gap.
- Lift spudger away from support plate to remove headphone component.

## Step 20

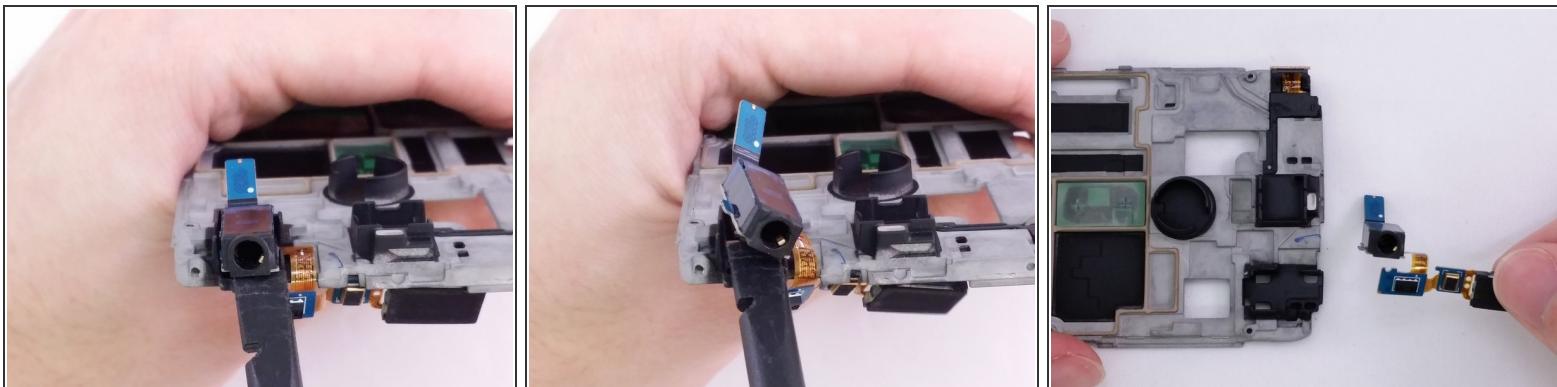

- Use the flat end of the spudger to remove headphone jack component from rectangular housing.

To reassemble your device, follow these instructions in reverse order.