



Samsung Galaxy S4 Mini headphone jack Replacement

Written By: Peter Hübner



 **TOOLS:**

- [New Item \(1\)](#)

 **PARTS:**

- [New Item \(1\)](#)

Step 1 — Headphone jack



- Press and hold the END key to power the phone down.

Step 2



- Remove the back cover of the cell phone using a plastic opening tool.

Step 3




- Pry the battery out using a plastic opening tool.

Step 4




- Using tweezers, remove the SIM card and SD card by sliding it towards the bottom of the device.

Step 5

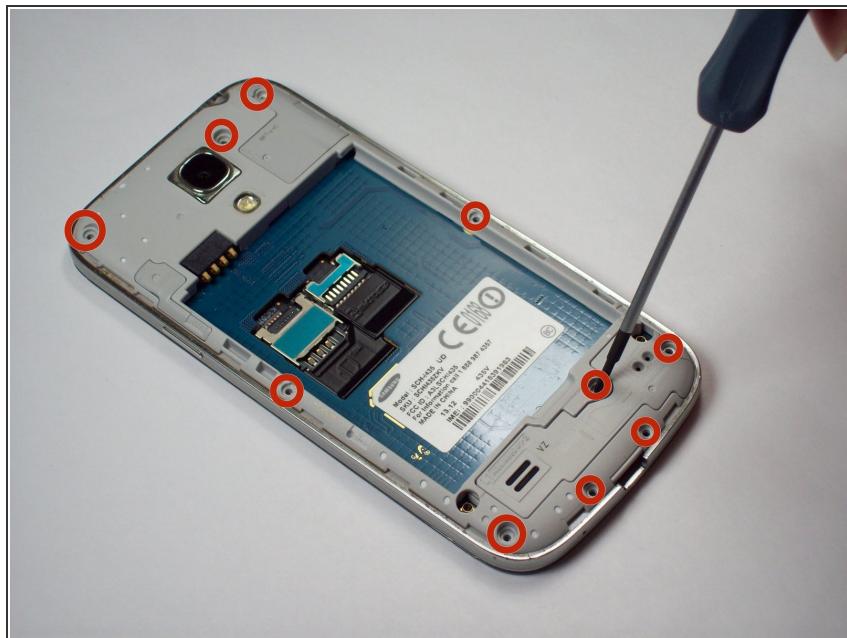


- Remove the 10 4.0 mm Phillips screws on the back of the phone using the #00 Phillips screwdriver.

Step 6

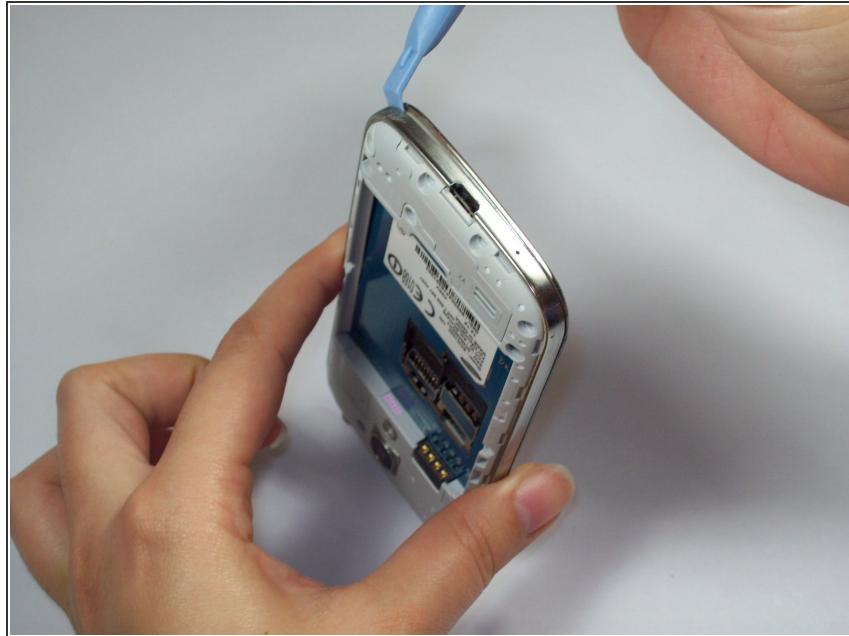


- Starting at the USB port, slide a plastic tool around the perimeter of the phone between the rear housing and frame. As you work your way around the edge you will feel the clips release.

Step 7

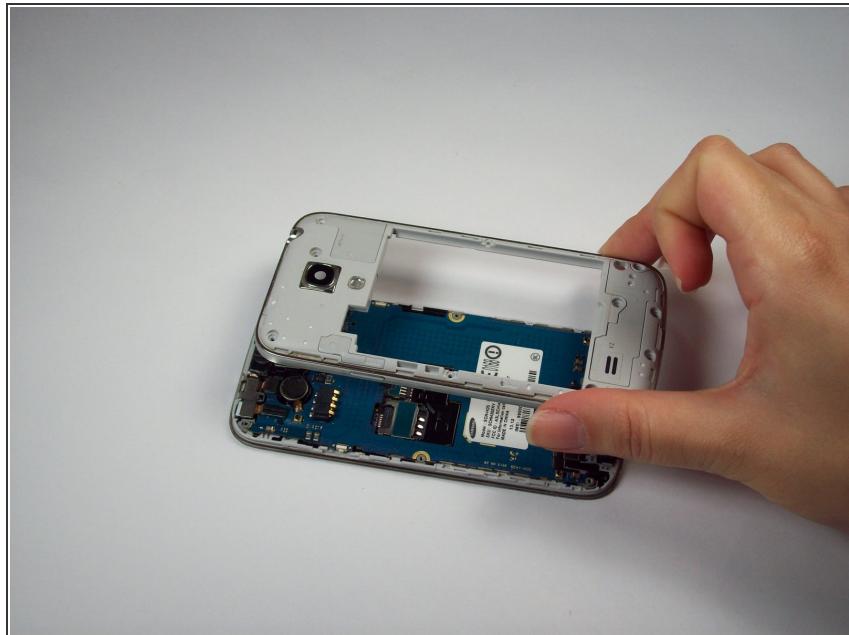


- Carefully separate the rear housing and the mid-frame to reveal the inside of the phone.

Step 8

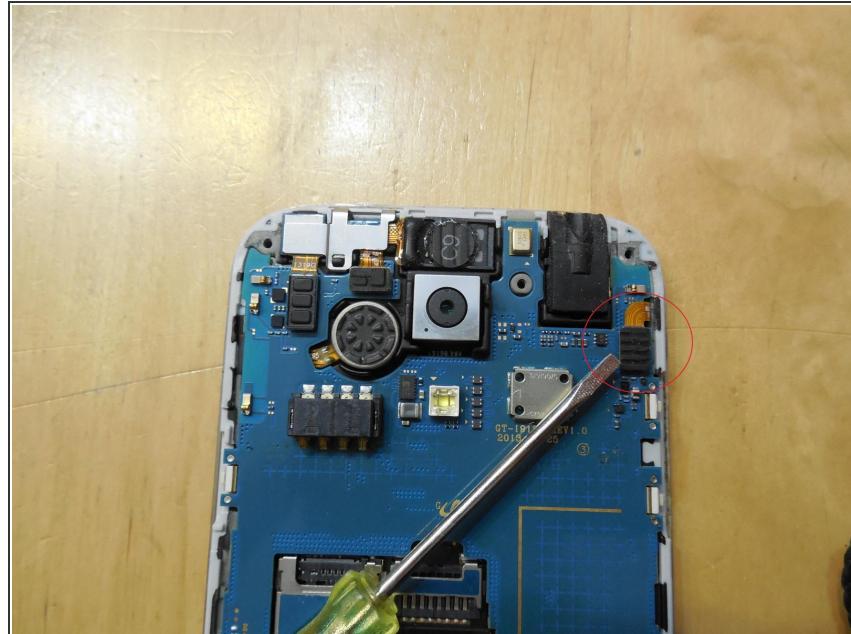

- Remove the flexcable.

Step 9

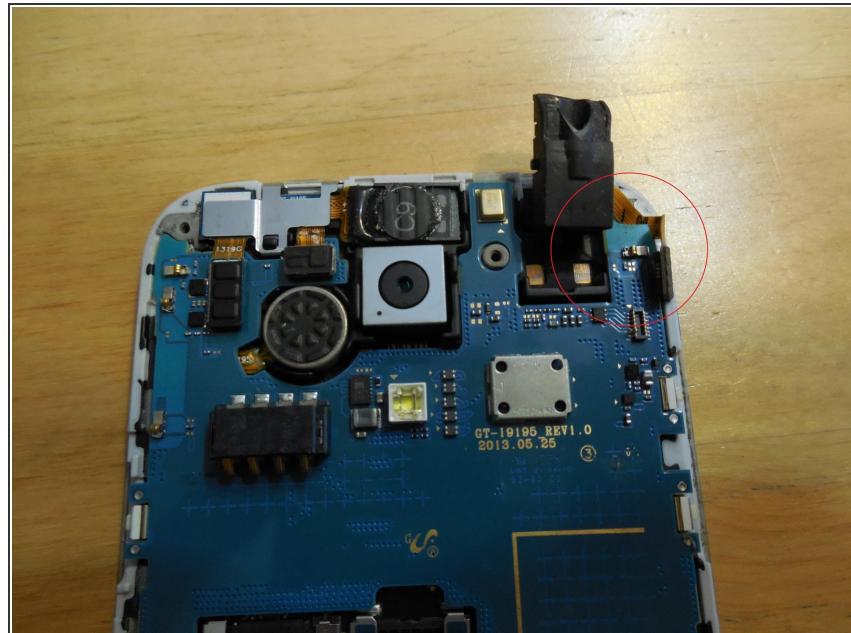

- Lift the corner of the PCB and remove the headphone jack.

Work the steps in the reverse order to assemble your device again.