



# Sanyo-PM 8200 Back Casing Replacement

Prerequisite Only

Written By: Cassandra Stavros



 **TOOLS:**

- [Tri-wing Screwdriver](#) (1)
- [Tweezers](#) (1)
- [Spudger](#) (1)
- [Push Pin](#) (1)

## Step 1 — Back Casing




- Use a push pin or tweezers to remove the neoprene screw-cover located on the upper, left corner of the back casing.

## Step 2



- Unscrew all four, 5mm Tri-Wing screws.

## Step 3

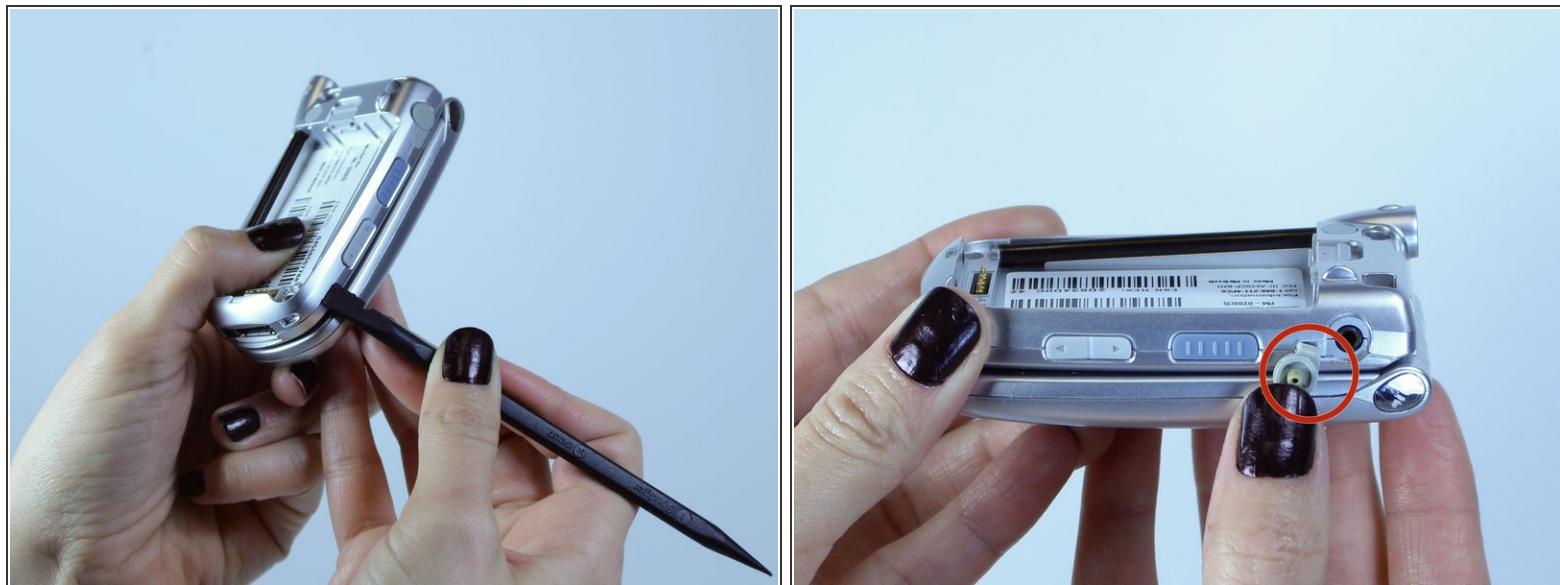

- Pry the back casing off the device using a spudger. Work your way along the edges to completely separate the back casing from the device.

⚠ This step may require extra force. But too much force could break the back casing.

- Remove the headphone jack cover when separating the back casing. The headphone jack is located on the opposite side of the antenna.

To reassemble your device, follow these instructions in reverse order.