




Shark Navigator Motherboard Replacement

This guide will instruct you on how to find and replace a broken circuit board in the vacuum.

Written By: Mara

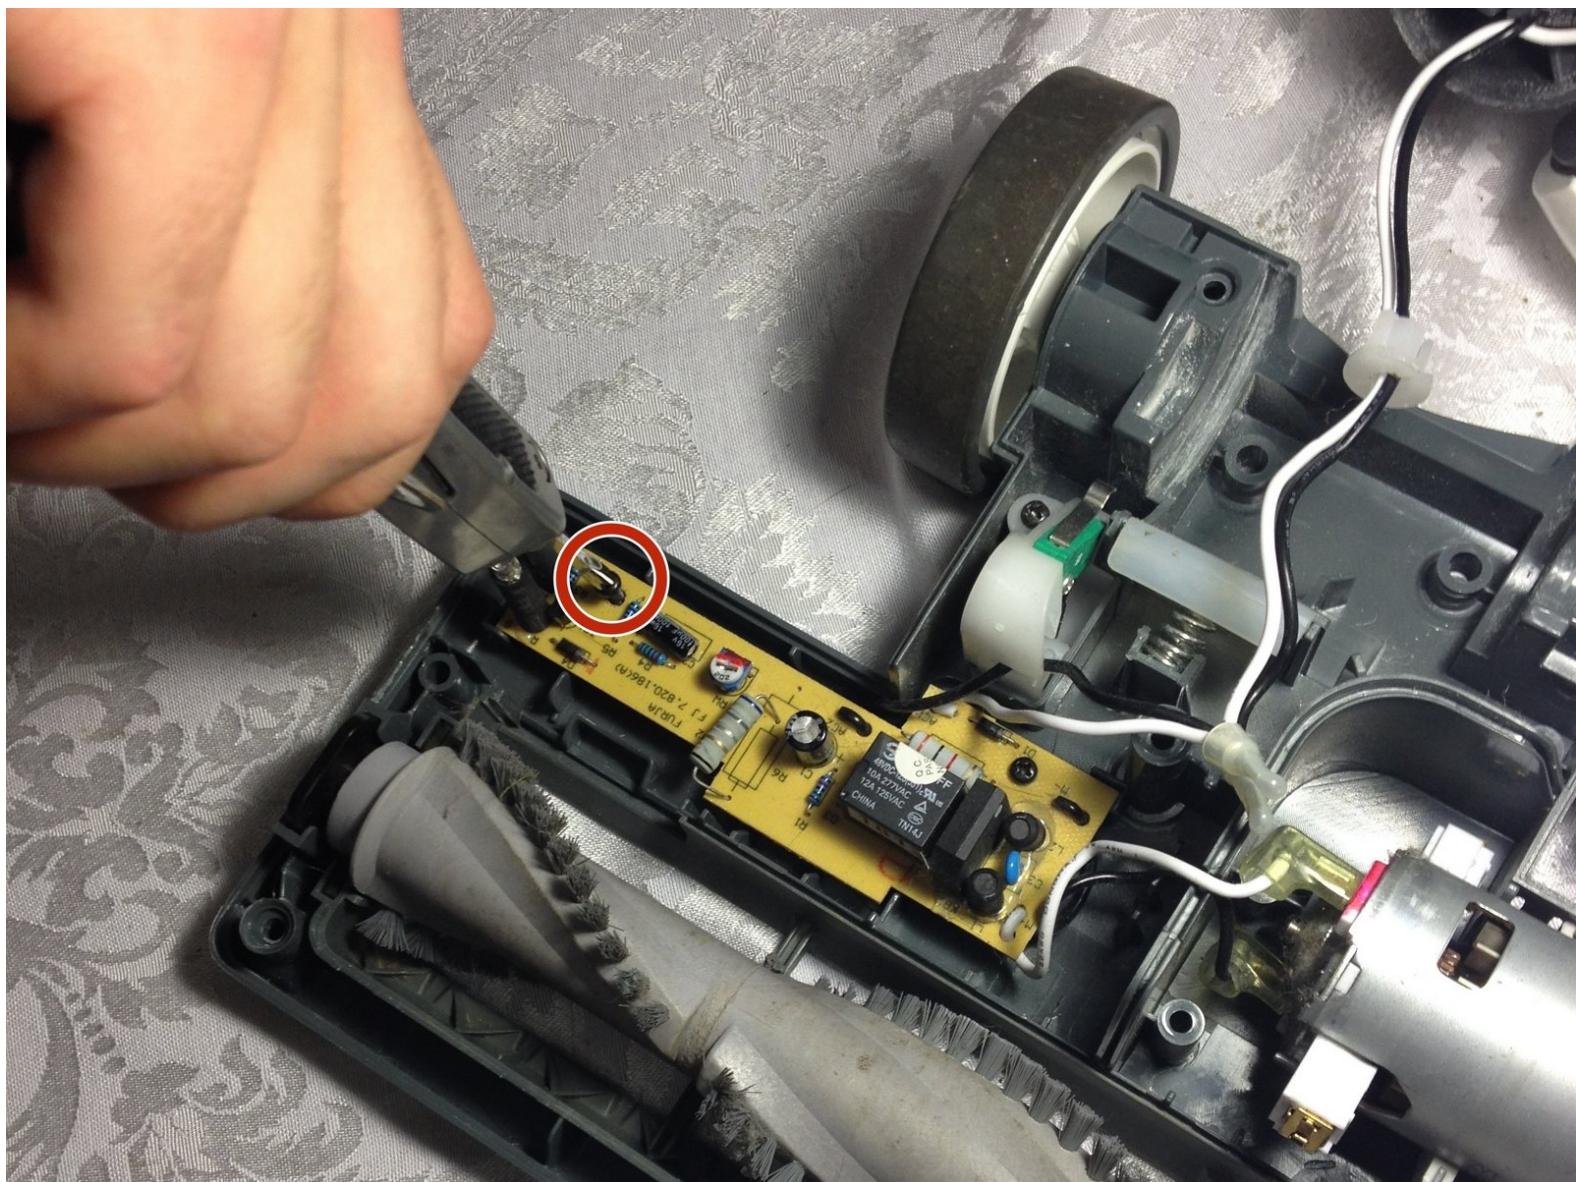

 **TOOLS:**

- **Spudger** (1)
- **Phillips #1 Screwdriver** (1)

Step 1 — Roller Brush Compartment




- Pop out the two small wheels located on the front end of the bottom of the roller brush compartment.

Step 2




- Remove the 10 Phillips screws located on the bottom of the roller brush compartment. (Two of these screws are located under the wheels from the previous step.)
 The screws have varying lengths, so keep track of where each one goes for reassembly.

Step 3

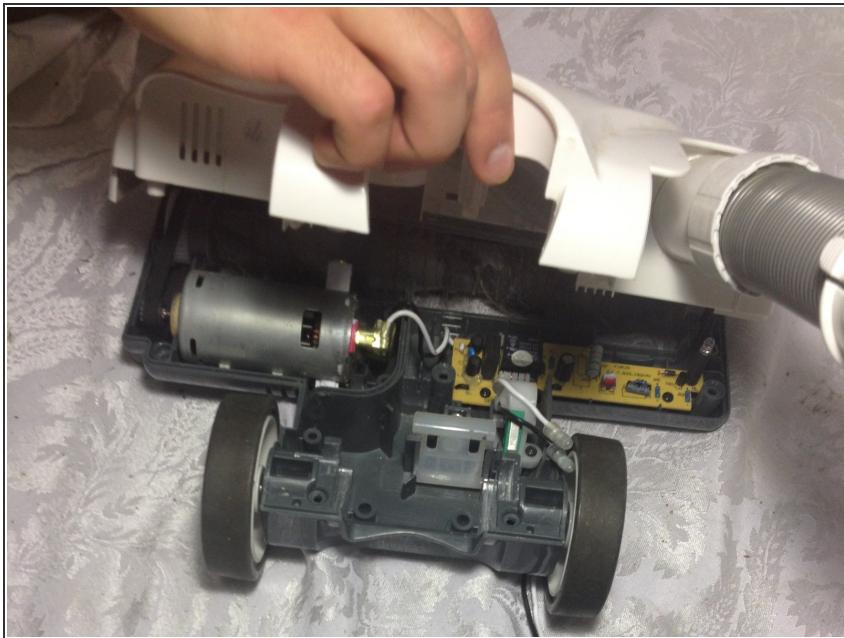


- Remove the white plastic cover to expose the roller compartment underneath.

Step 4 — Motherboard

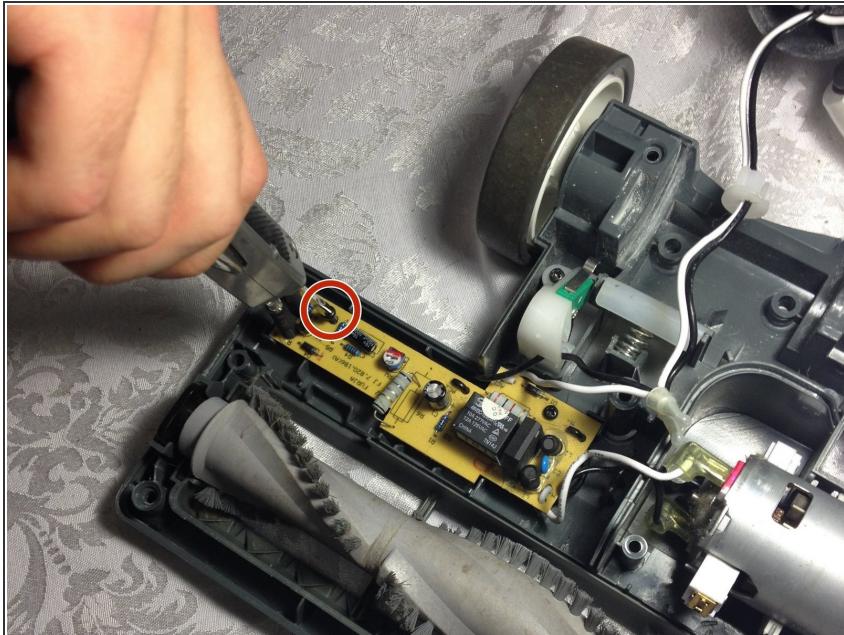

- There is one screw at the edge of the circuit board. Unscrew the circuit board before attempting to take it out.

Step 5

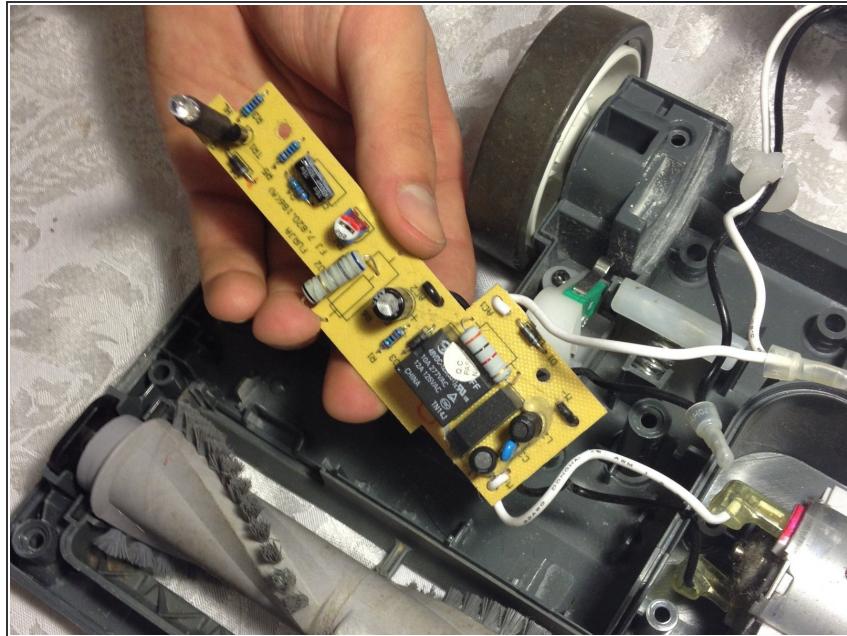

- Take out the circuit board and replace with a new one. It may be better to allow a professional to re-wire the circuit board to the vacuum.

To reassemble your device, follow these instructions in reverse order.