



# Skullcandy UPROCK Earpiece Wiring Replacement

This guide shows how to repair a wire found in an earpiece to regain sound for the Skullcandy UPROCK S5URFZ-390.

Written By: Kayla Robinson



This document was generated on 2019-09-23 07:13:42 PM (MST).

## INTRODUCTION

The wires in headphones are an essential part. If sound is not generating from one speaker, the problem may be from a rip or break in the wires found within the earpiece. This guide shows you how to repair a broken wire inside the earpiece for the Skullcandy UPROCK S5URFZ-390.

### TOOLS:


- Phillips #0 Screwdriver (1)
- Soldering Workstation (1)

## Step 1 — Earpiece Wiring




- Remove the cushion from the ear piece.

## Step 2

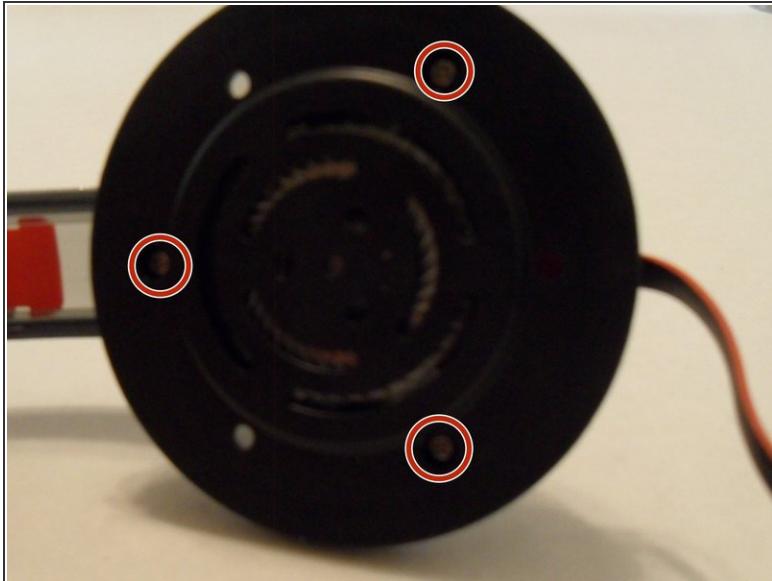


- Use a Phillips #0 to unscrew three 3.4MM screws from the earpiece.

## Step 3

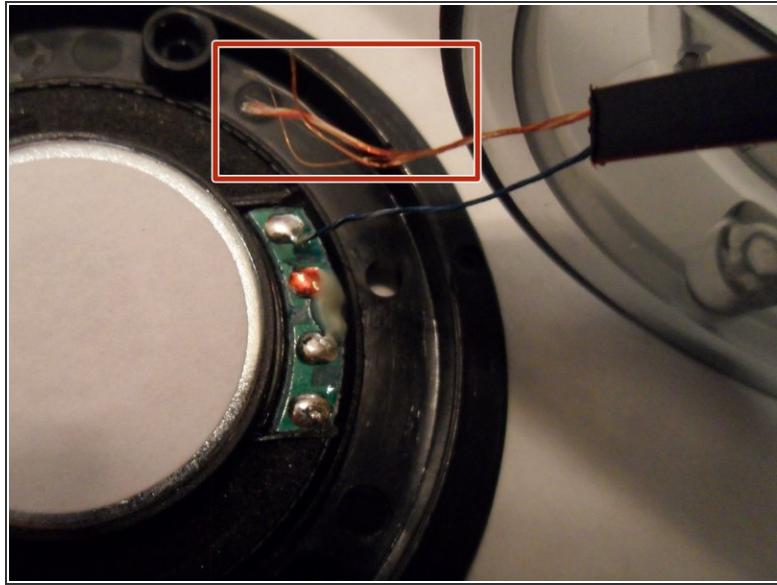

- Find the wires connected to the speaker and check if they are intact.

## Step 4

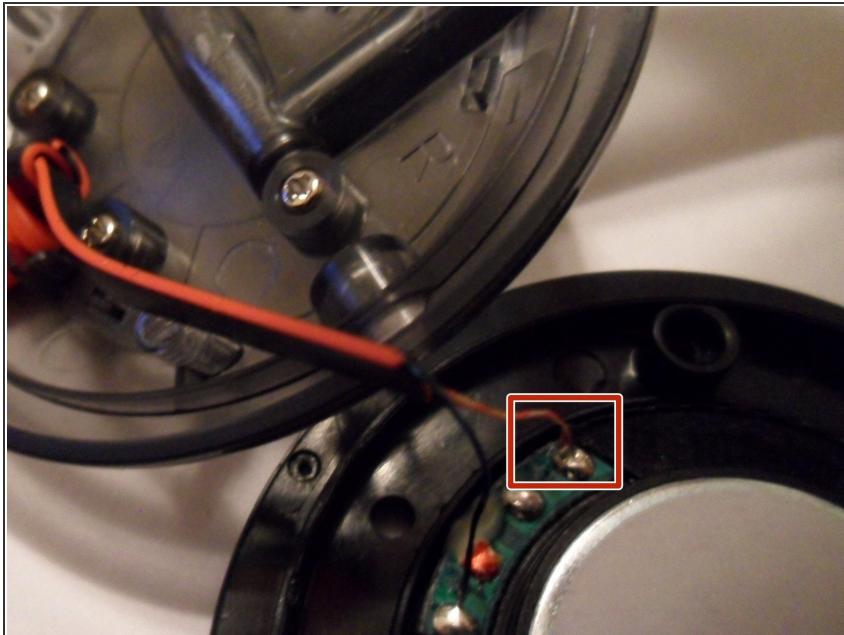

- If a wire is broken, use a soldering iron to reattach it to the speaker.
- To learn how to solder, read the [How To Solder and Desolder Connections Guide](#).
- After soldering is complete, the wires should look like this.