




Sony Xperia T2 Ultra Dual Audio Jack Replacement

No audio? Replace the headphone jack!

Written By: Christina Wojaczyk

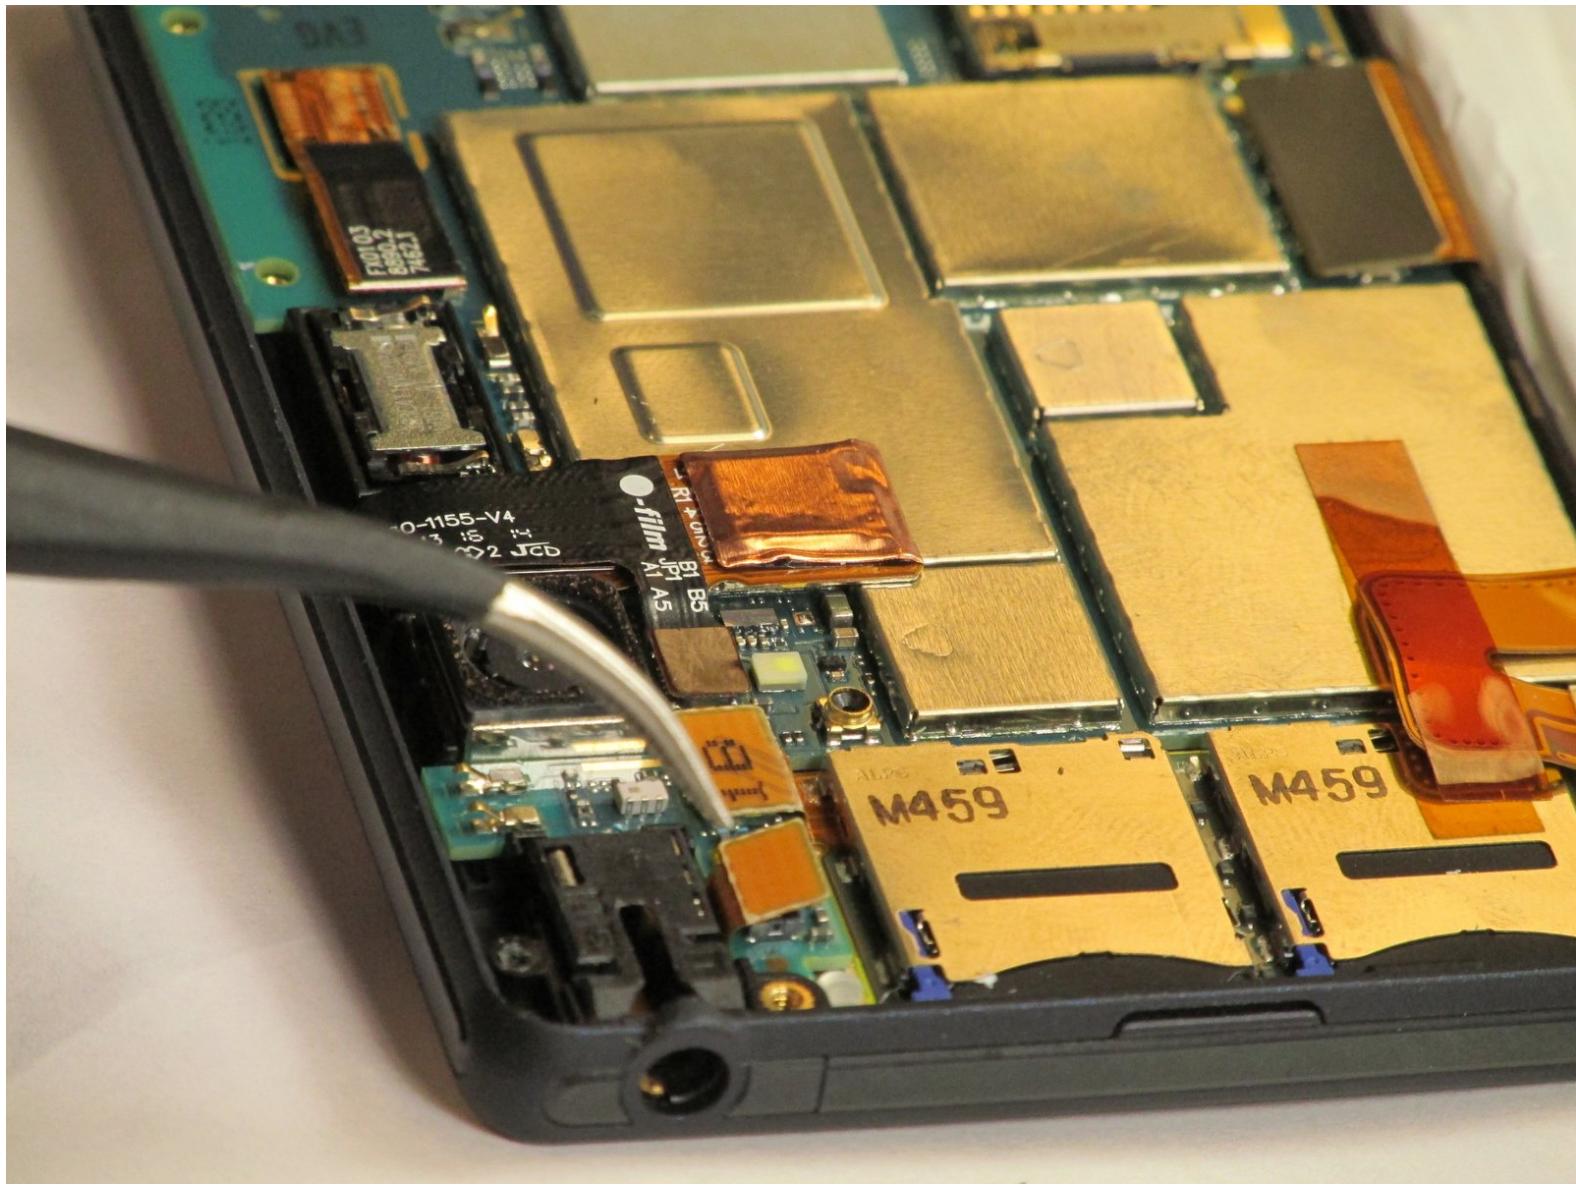


INTRODUCTION

This guide can be used to replace the headphone jack.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Rear Case

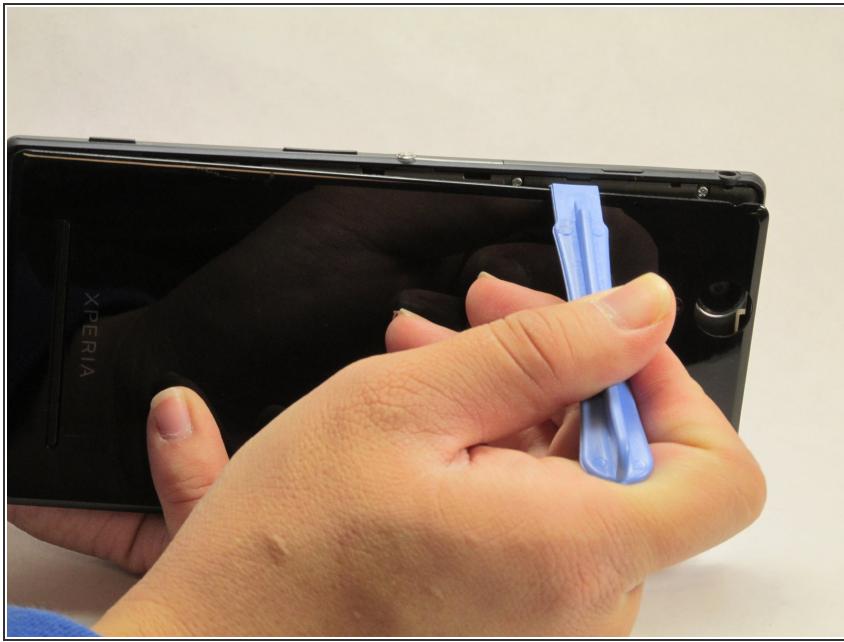


- Using the spudger, pry open the back cover by starting alongside the edge of the back cover.

Step 2




- Once the part of the back cover has been opened up. Slide the spudger to pry completely detach the cover from the phone.

Step 3 — Removing the internal cover

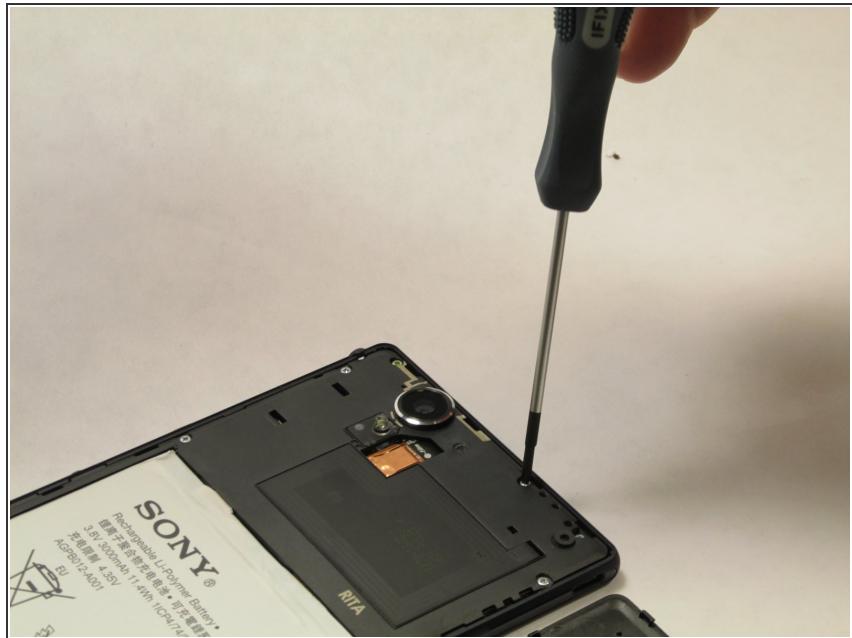


- Using the Phillips #00 Precision screwdriver, take out 8 silver screws (3.15mm) and 5 gold screws (3.9mm) for a total of all the screws attached to the flat plate. 3 of the gold screws are located at the top of the phone and the other 2 screws are located at the bottom of the phone.

Step 4

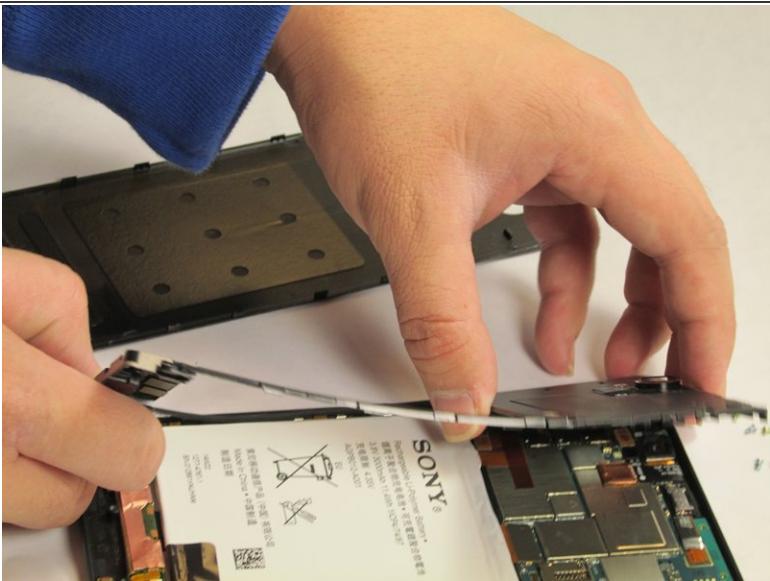


- To remove the internal cover, use the plastic spudger tool and pry the cover from the phone as shown in the picture.

Step 5 — Removing chip

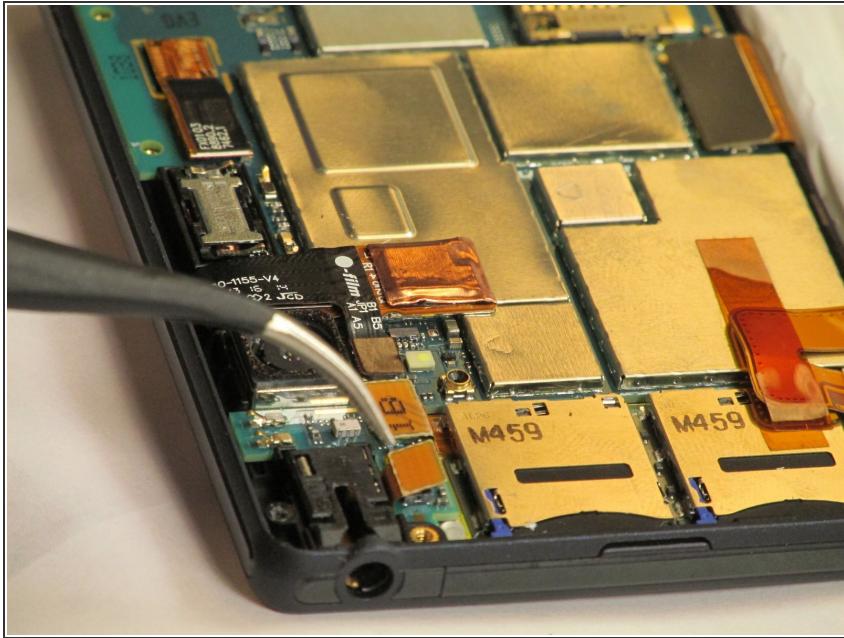

- Using tweezers, locate the audio jack as shown and pull out the chip connected to the motherboard.

Step 6 — Remove audio jack

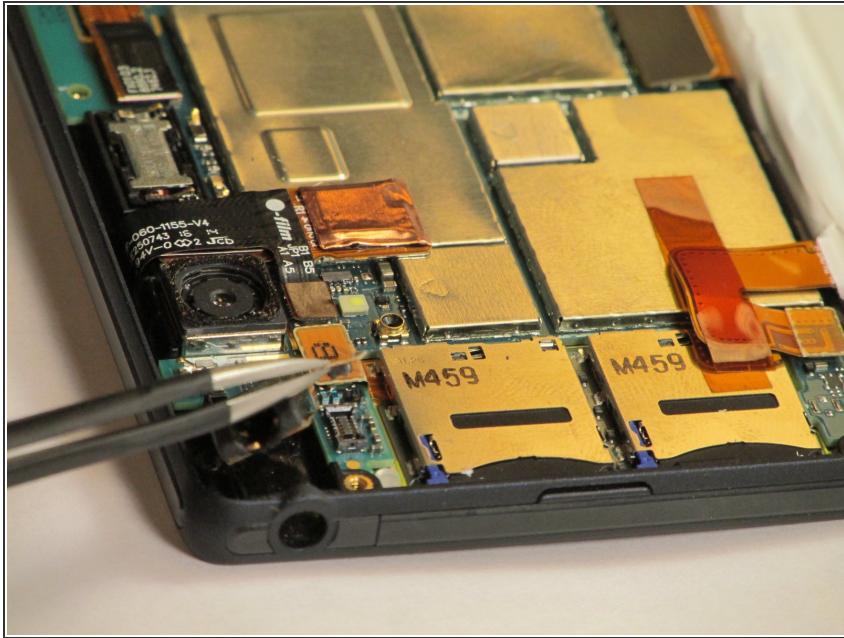

- Carefully remove the audio jack by using the tweezers and pull firmly straight out of the motherboard.

To reassemble your device, follow these instructions in reverse order.