




# VTech CS6719-2 Screen Replacement

This is a guide to replacement the screen of the VTech CS67192 phone.

Written By: Joshua Woodward

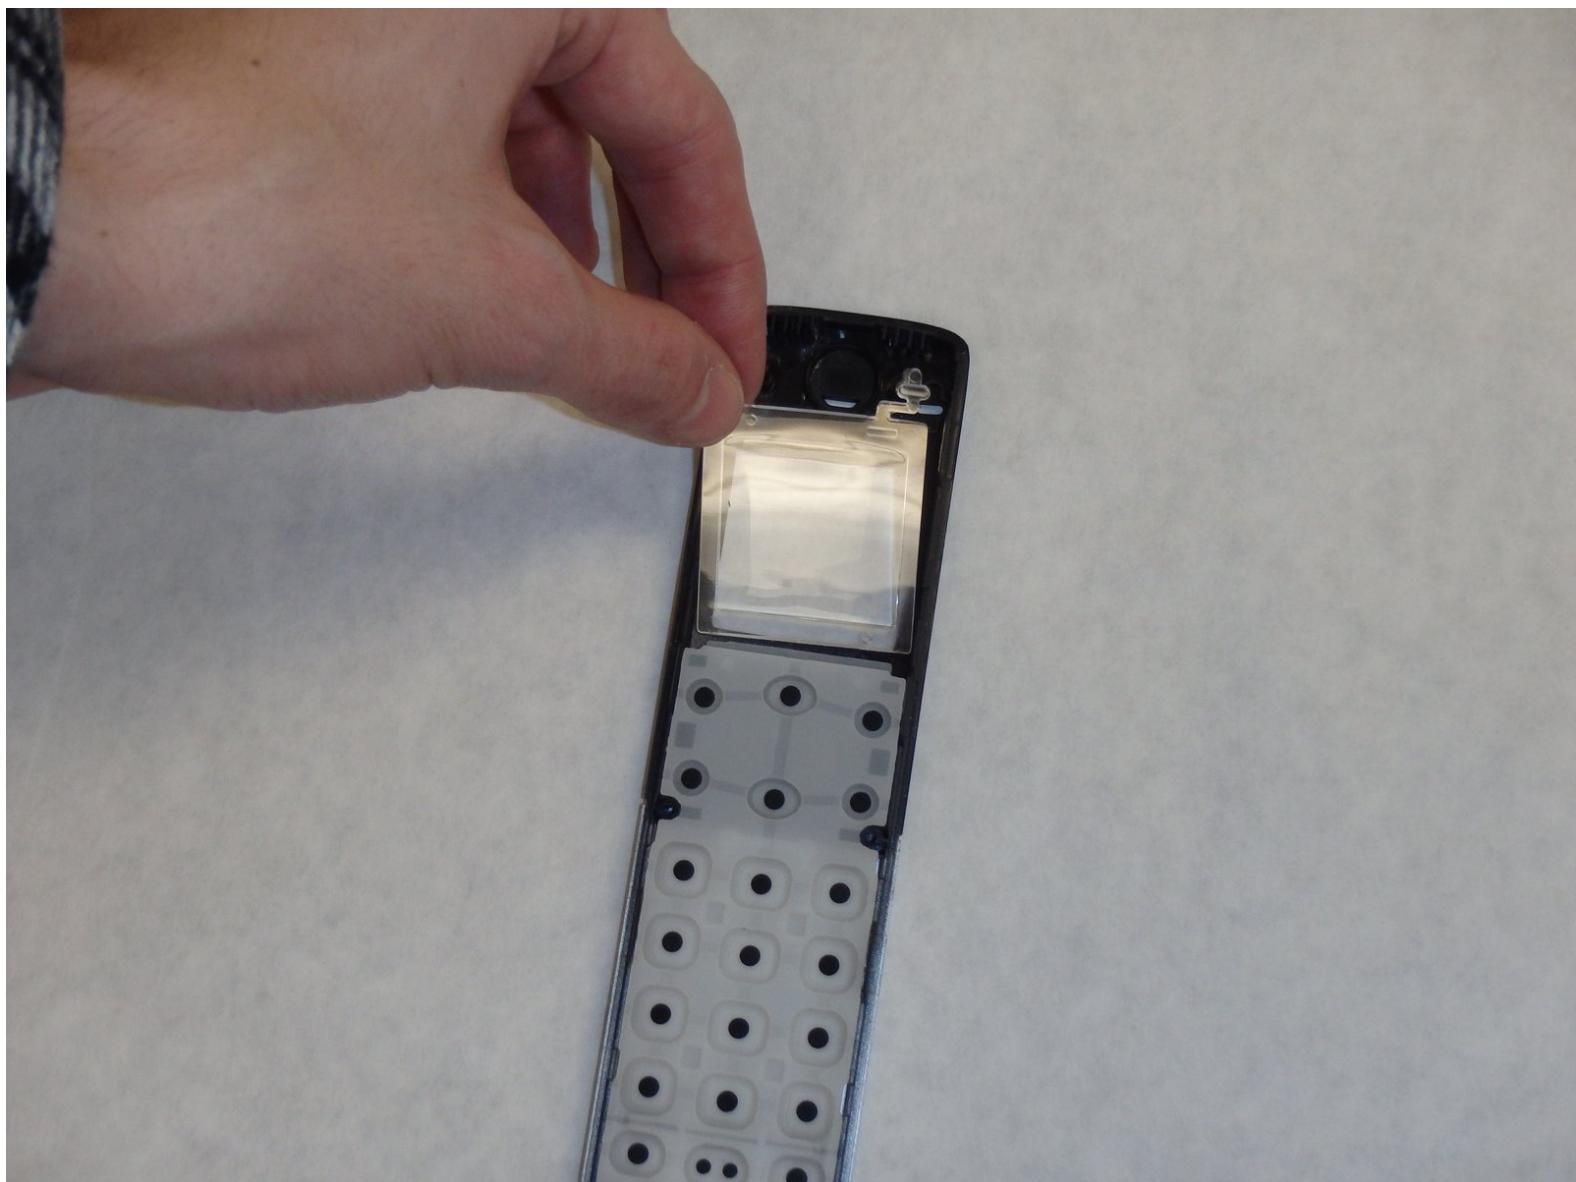


## INTRODUCTION

During this guide, the back of the phone and the circuit board will need to be taken off to access the plastic screen.

### **TOOLS:**


- **Phillips #0 Screwdriver** (1)
- **Heavy-Duty Spudger** (1)

## Step 1 — Battery

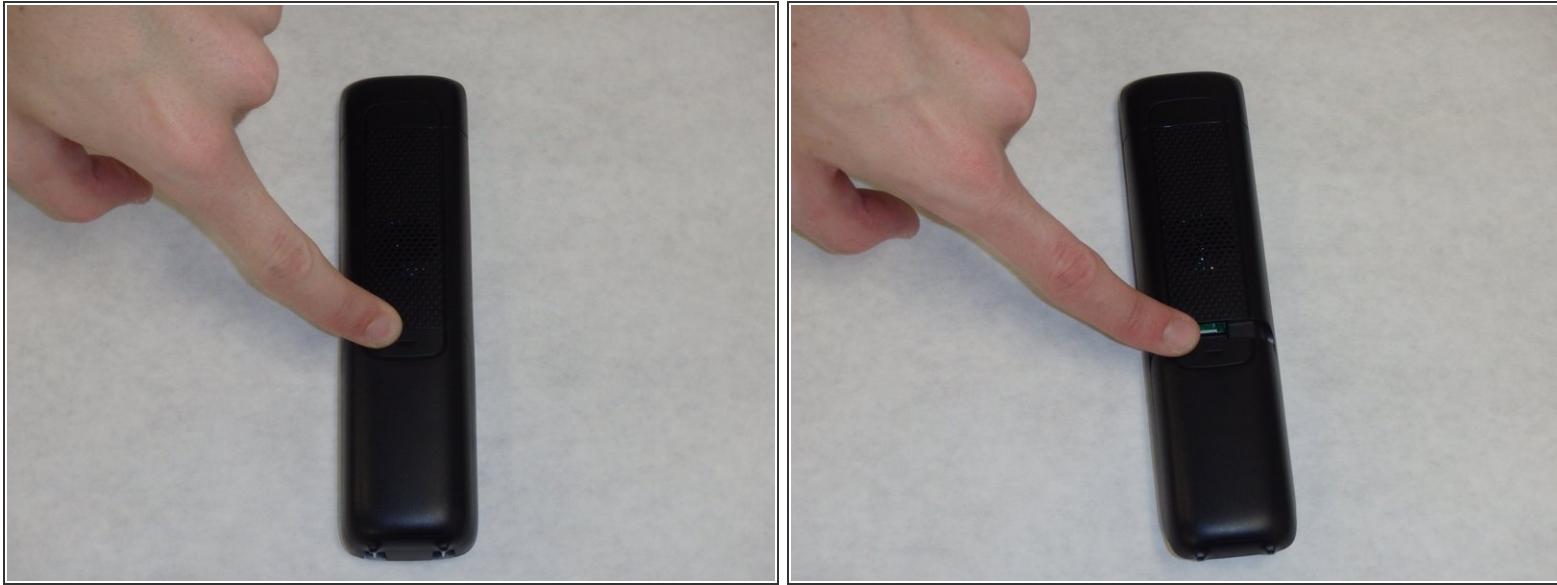


- Push down on the battery cover in the direction of the arrow located on the back of the phone.

## Step 2

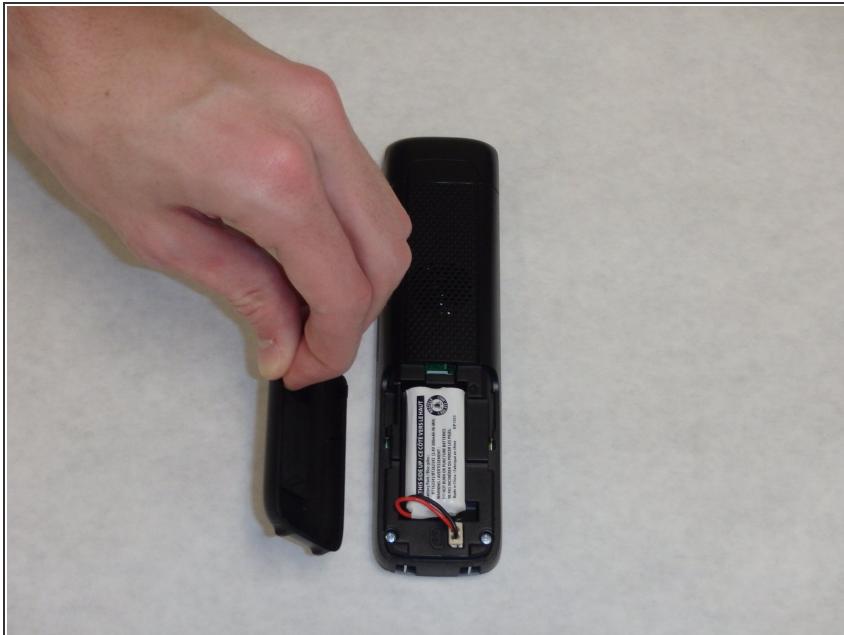

- Pull the battery cover off of the back of the phone.

## Step 3

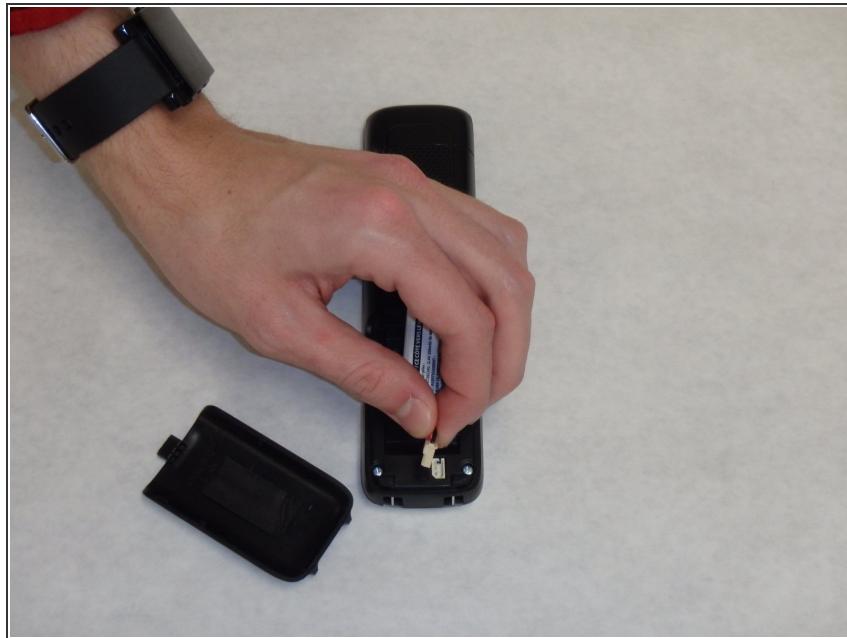


- Unplug the battery input cable.

## Step 4




- Lift the battery out of the back of the phone.

## Step 5 — Circuit Board

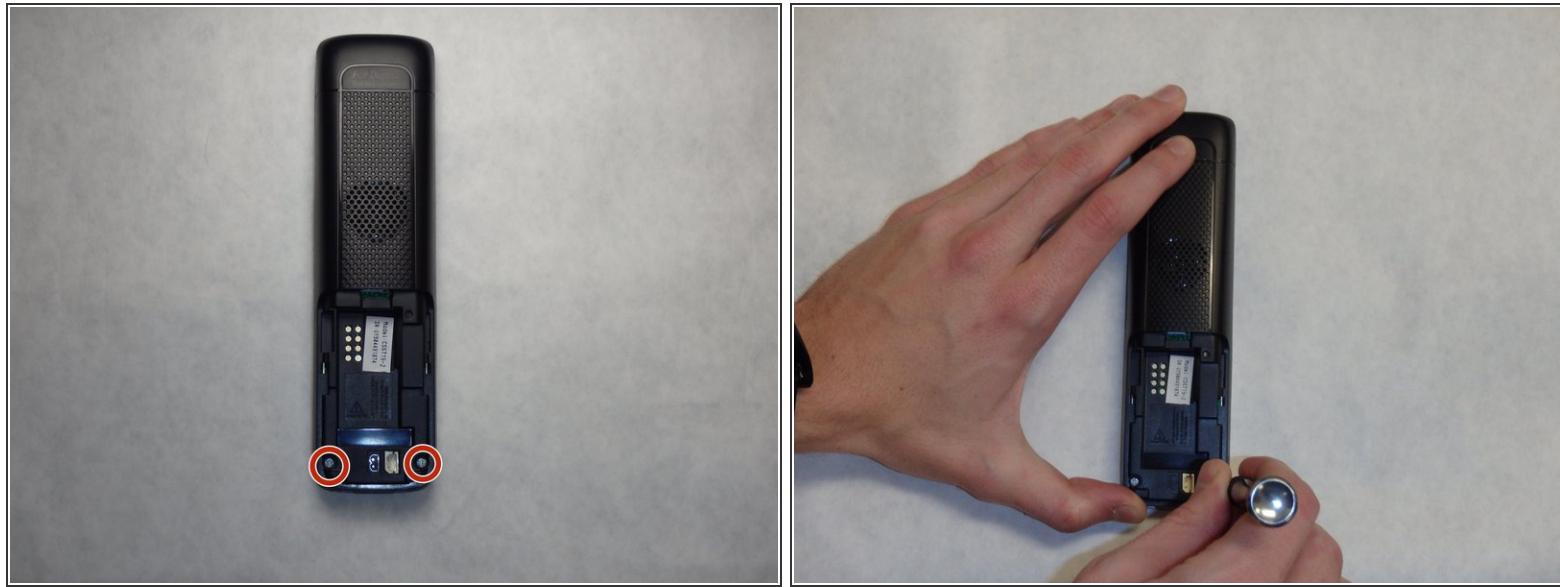

- Remove the two 9mm screws on the back side with a Phillips #0 screwdriver.

## Step 6

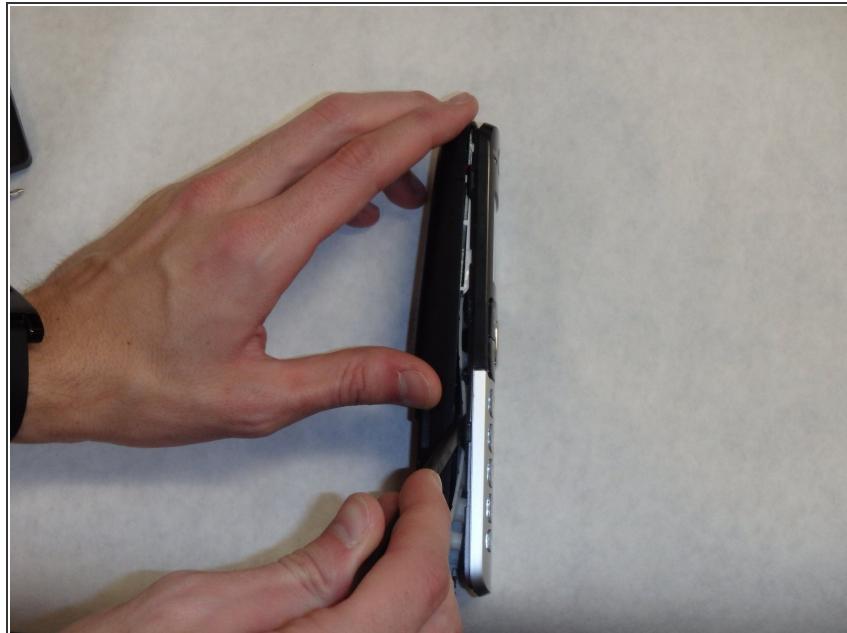


- Use the plastic opening tool and spudger to pry the back side of the phone off.

## Step 7



- Remove the two 9mm screws located inside the back cover at the top.

## Step 8 — Screen

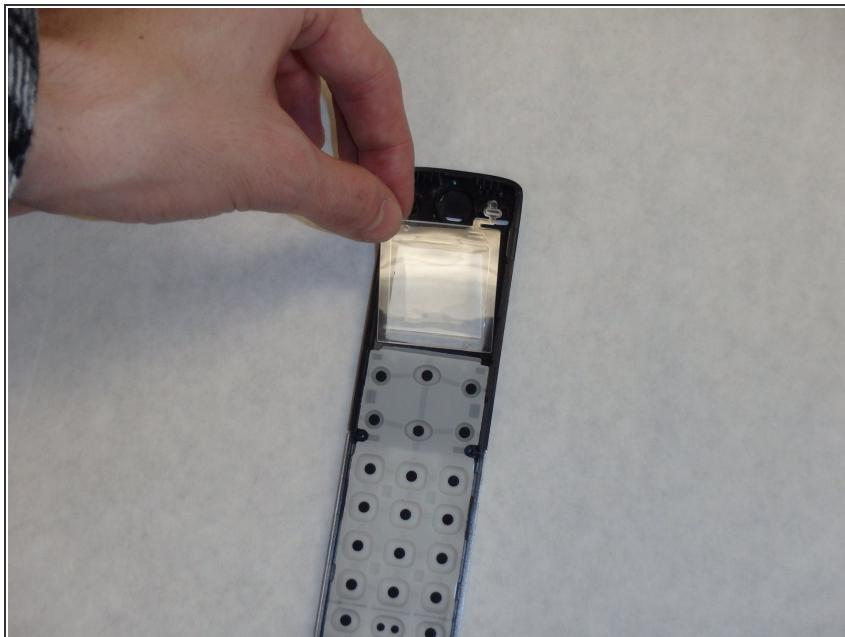

- Remove the plastic screen.

To reassemble your device, follow these instructions in reverse order.