




VTech CS6719-2 Circuit Board Replacement

This is a prerequisite guide for taking the back of the phone as well as the circuit board.

Written By: Benjamin Field

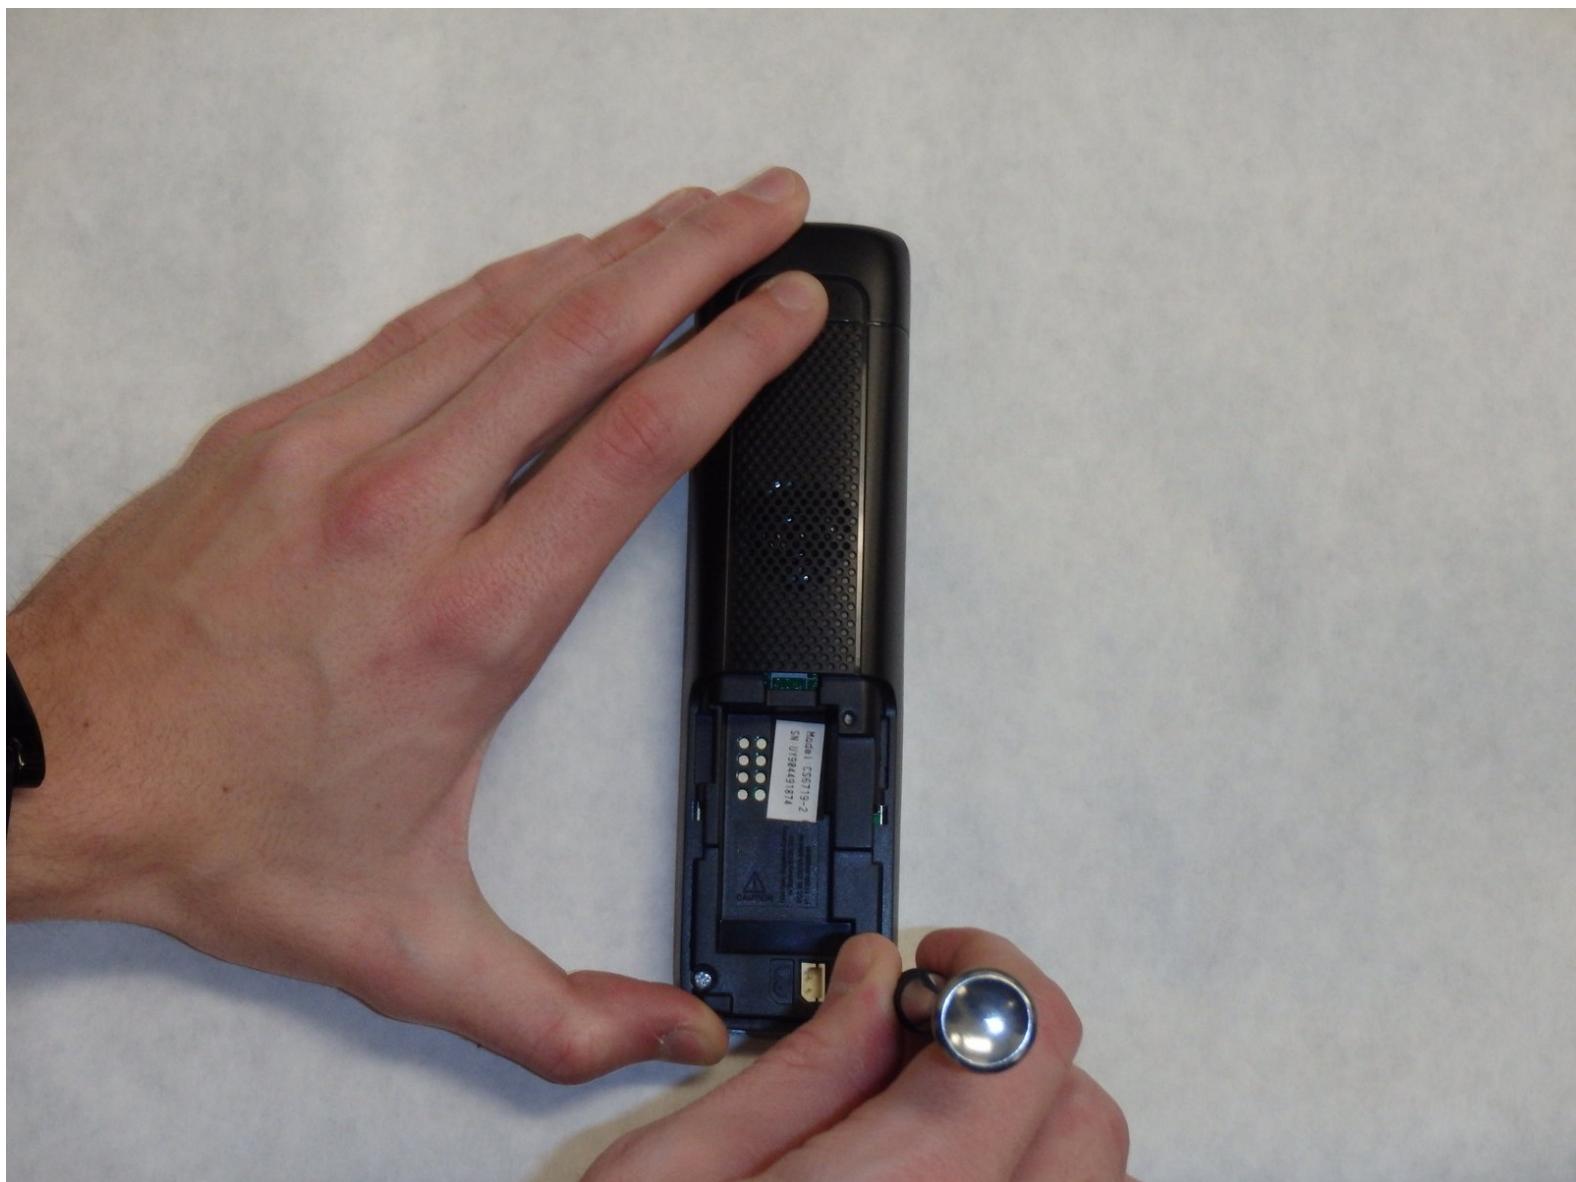

INTRODUCTION

During this guide, the back of the phone will be taken off by using the spudger. Then the circuit board will be detached by unscrewing two screws.

TOOLS:


- Heavy-Duty Spudger (1)
- Phillips #0 Screwdriver (1)

Step 1 — Battery




- Push down on the battery cover in the direction of the arrow located on the back of the phone.

Step 2

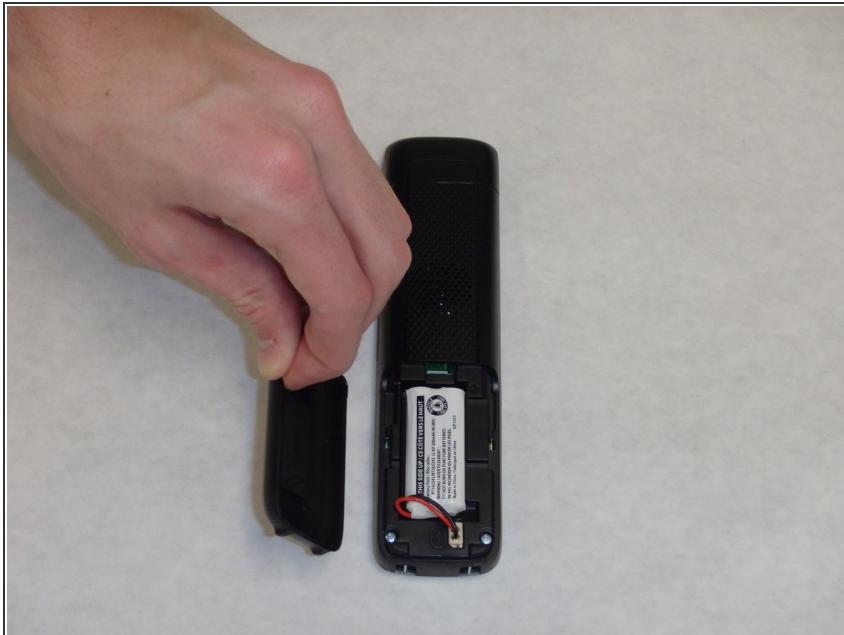

- Pull the battery cover off of the back of the phone.

Step 3

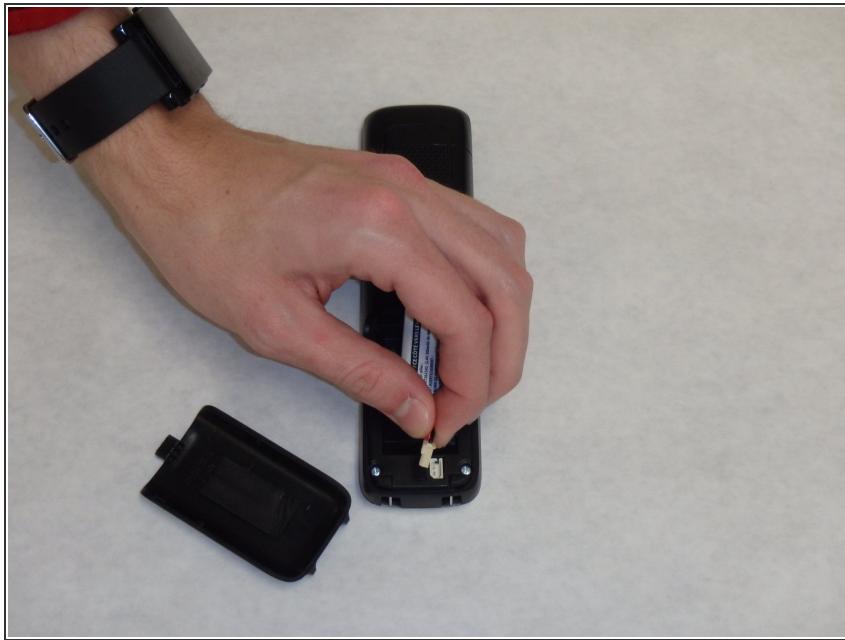


- Unplug the battery input cable.

Step 4



- Lift the battery out of the back of the phone.

Step 5 — Circuit Board

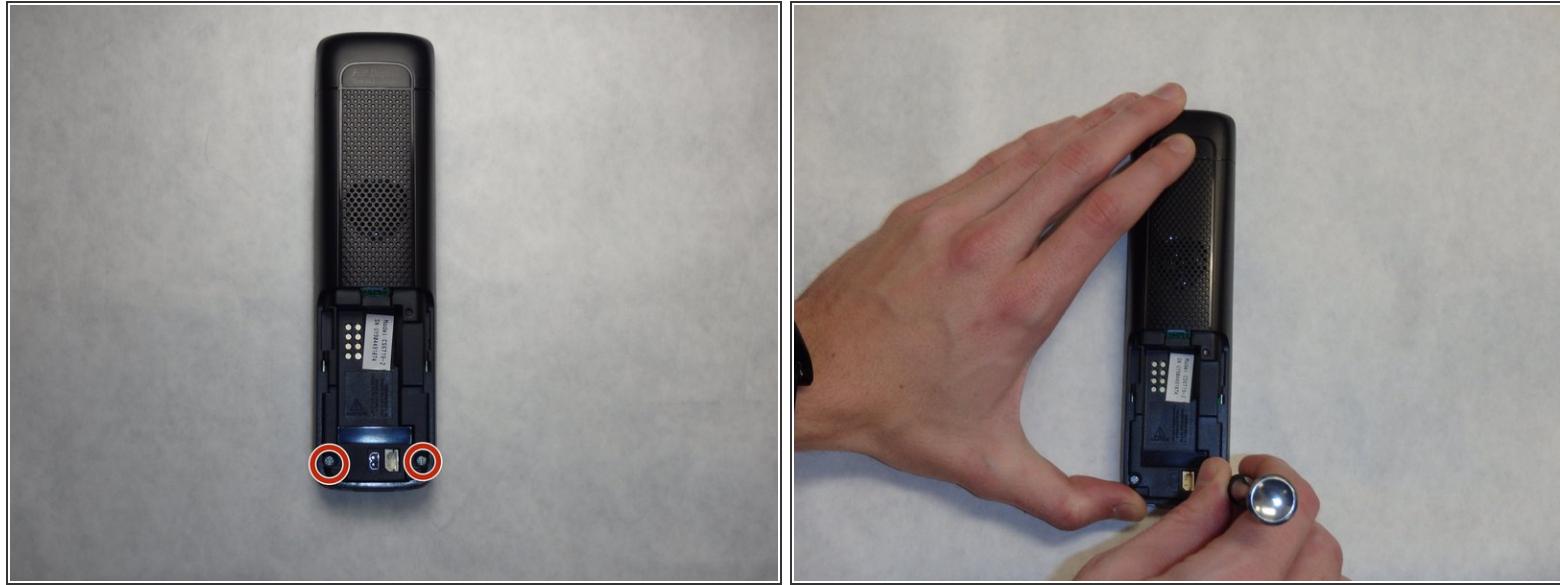


- Remove the two 9mm screws on the back side with a Phillips #0 screwdriver.

Step 6



- Use the plastic opening tool and spudger to pry the back side of the phone off.

Step 7

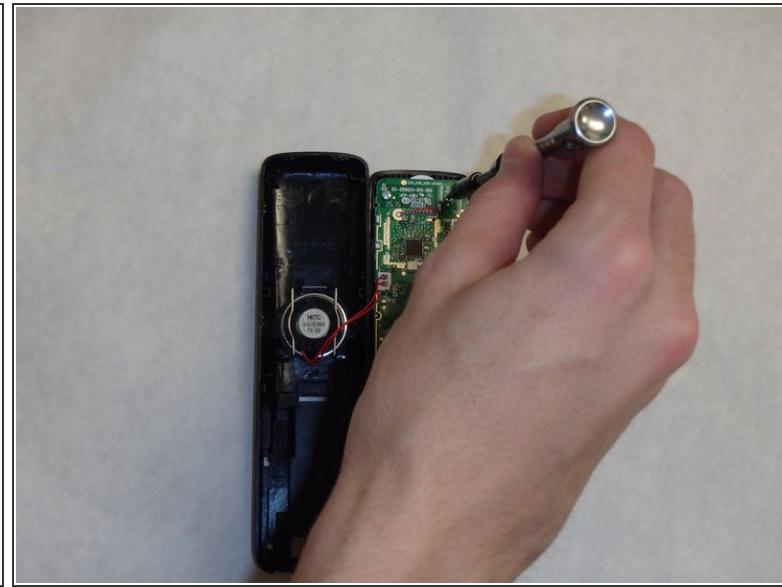

- Remove the two 9mm screws located inside the back cover at the top.

To reassemble your device, follow these instructions in reverse order.