




# Verizon Ellipsis 10 Motherboard Replacement

How to remove and replace the Verizon Ellipsis 10 motherboard. Model number: QTAIR7.

Written By: Marco Bellutta

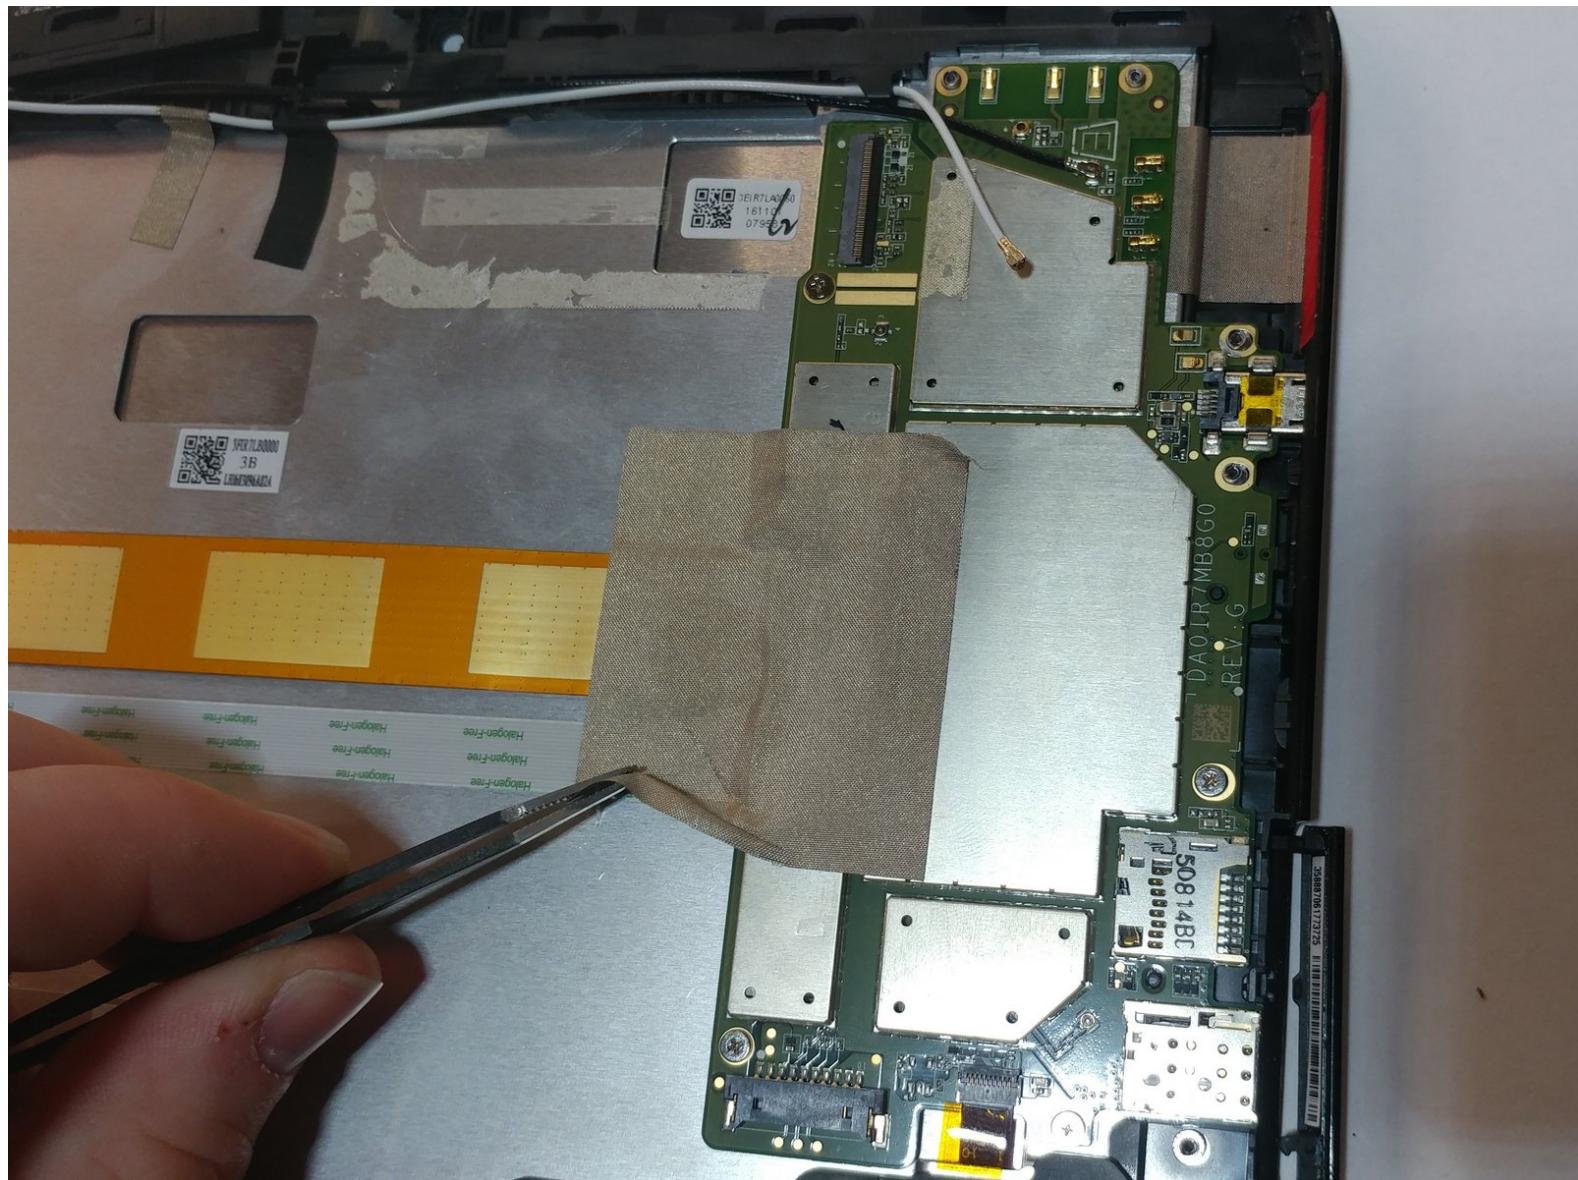

## INTRODUCTION

This guide is designed to provide you with simple steps to remove and replace the Verizon Ellipsis 10 Motherboard.

### TOOLS:

- [Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Tweezers \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)

## Step 1 — Back Cover




- Open the SD/SIM card cover to start prying off the back cover.

## Step 2



- Start using the iFixit Opening Tool in the SD/SIM area to release the clips holding the back panel on.

## Step 3

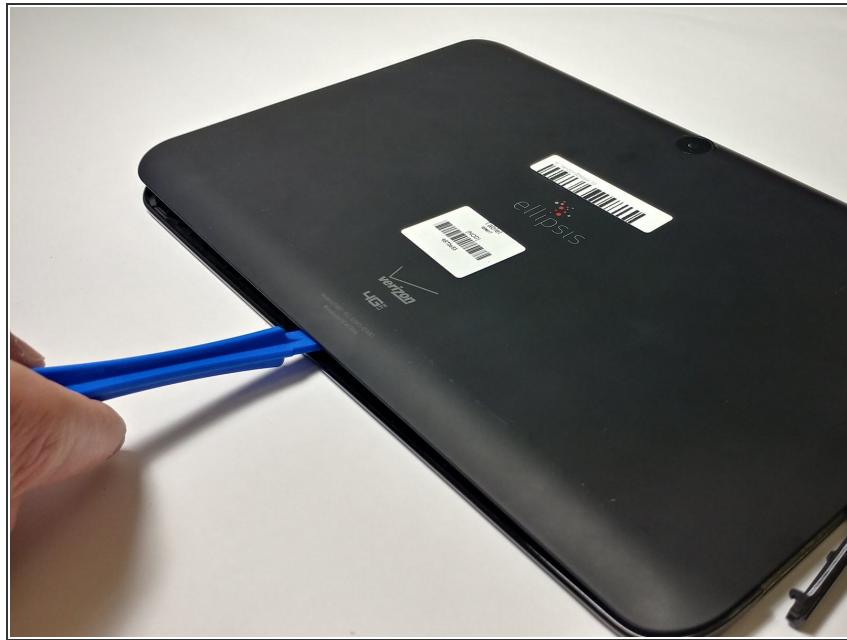

- Follow along the edge of the device to undo all of the retaining clips.

## Step 4




- Once all the clips are undone, the back panel should come off with little effort.

## Step 5 — Battery




- Remove the bottom piece of tape securing the battery making sure you are not peeling up anything else in the process.

## Step 6

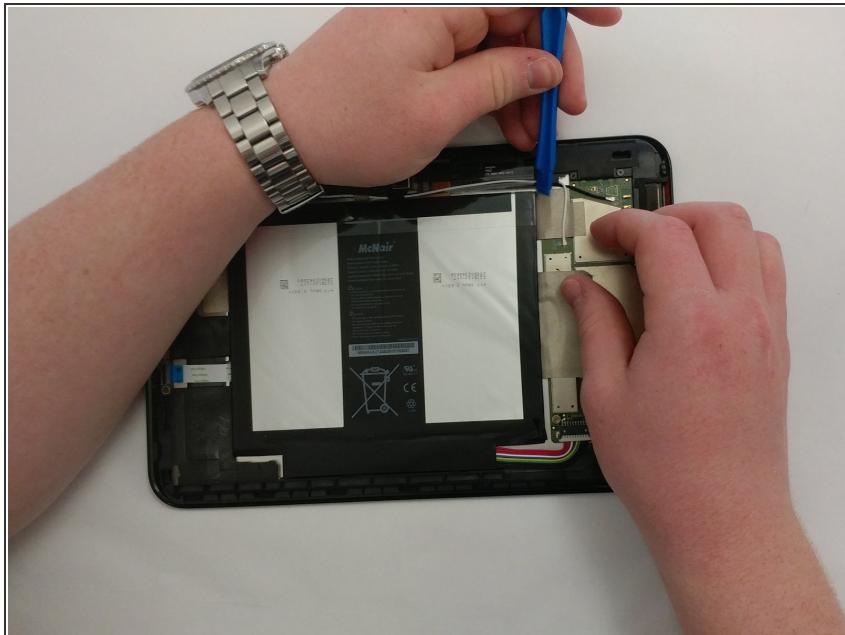

- Remove the top piece of tape. You can use the iFixit opening tool to get a hold on it.

## Step 7

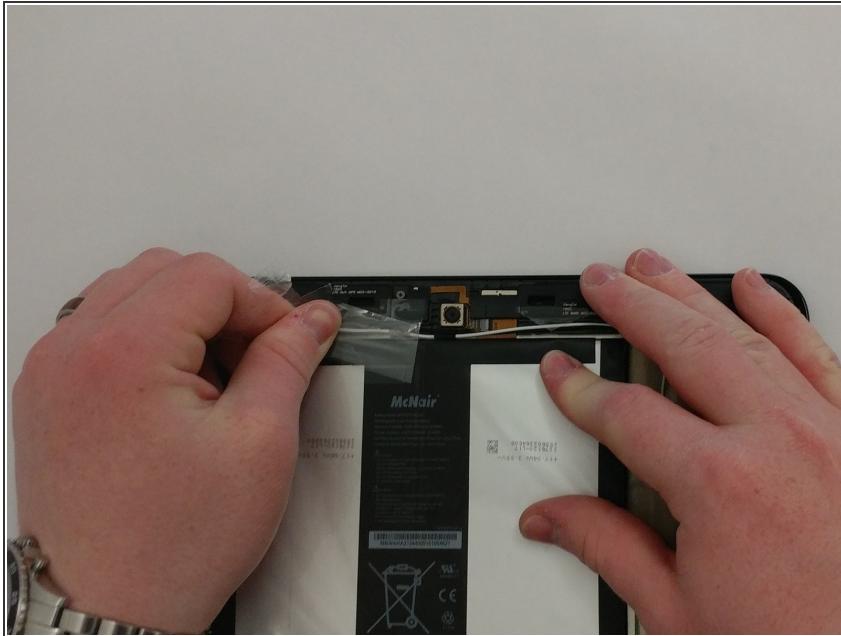


- Once you have a hold on the tape, carefully remove it making sure you aren't damaging the battery in the process.

## Step 8




- Unplug the battery power connector by sliding the white plastic plug down away from the board.

## Step 9

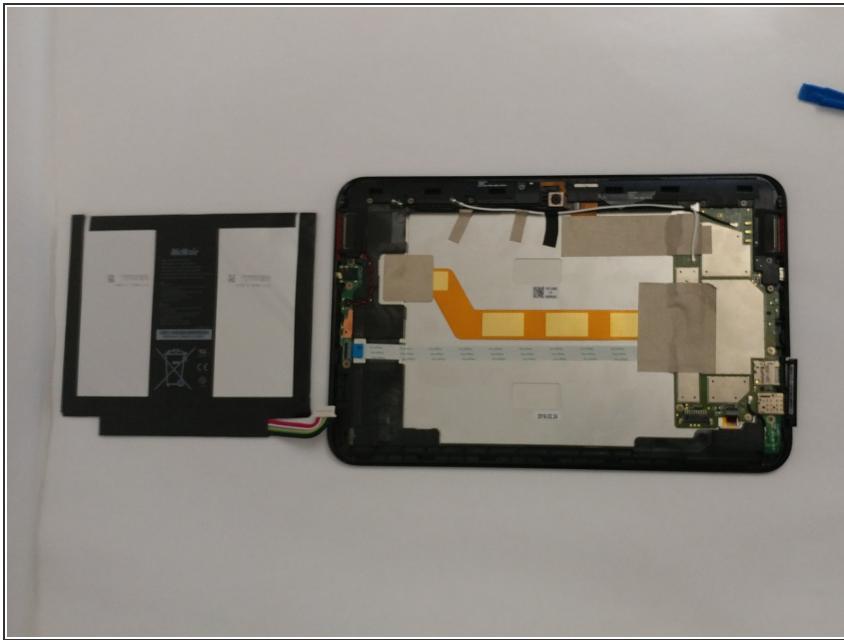


- The battery should be free to come out of the device. Make sure not to bend or damage the battery.

## Step 10 — Camera

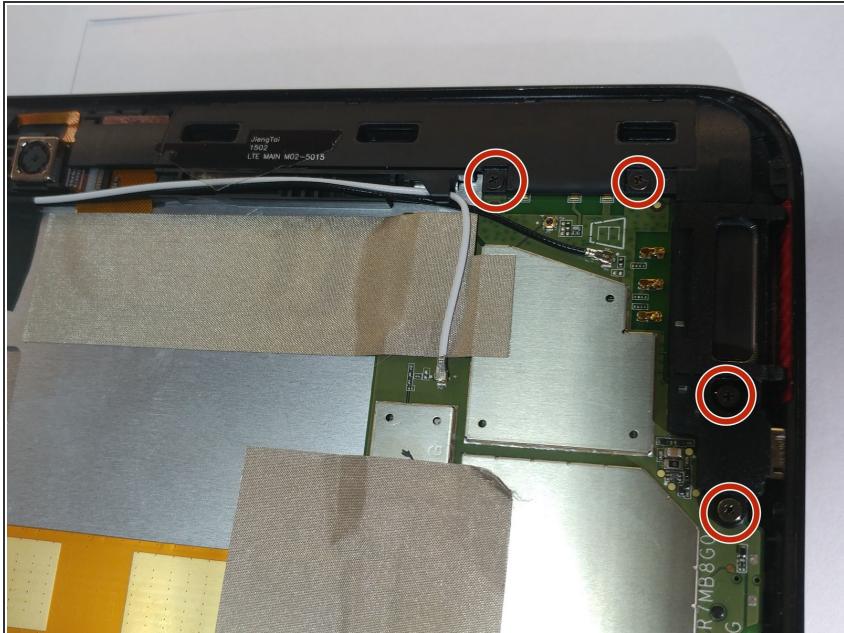

- Remove 4 M1.5 screws holding in the labeled LTE module.

## Step 11

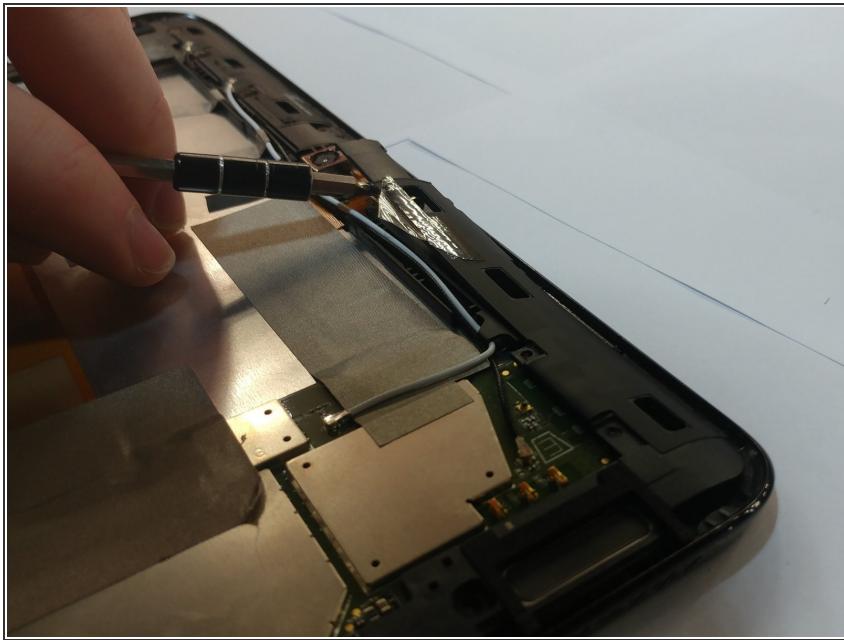


- Use a nylon spudger to pry up the module.
- *(i)* It's held in with some clips so there will be a little bit of resistance.

## Step 12



- Remove the 4 M1.5 screws holding in the labeled auxiliary LTE/GPS module.
- The module should come up with a little resistance.

## Step 13

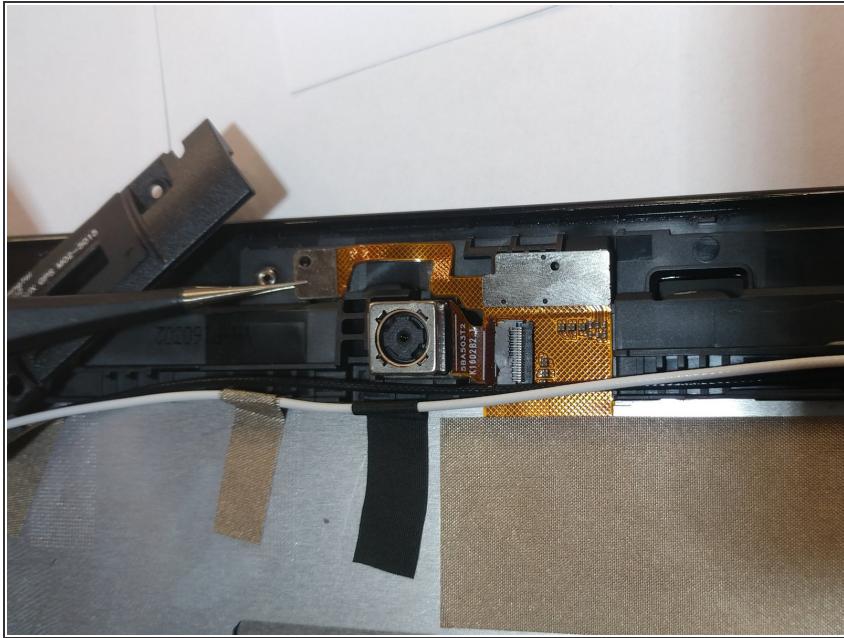


- Use a pair of tweezers to lift up the front camera off its locating post.

## Step 14




- Remove the non-conductive tape covering the camera ribbon cable.
- You may need to remove the white antenna cable to remove the tape.

## Step 15

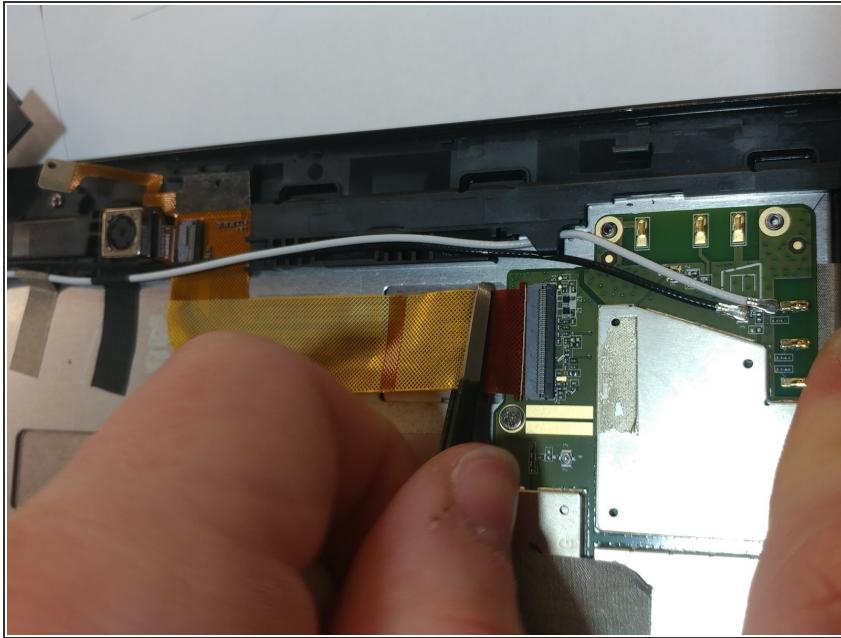


- Carefully unplug the ribbon cable from the motherboard.

## Step 16

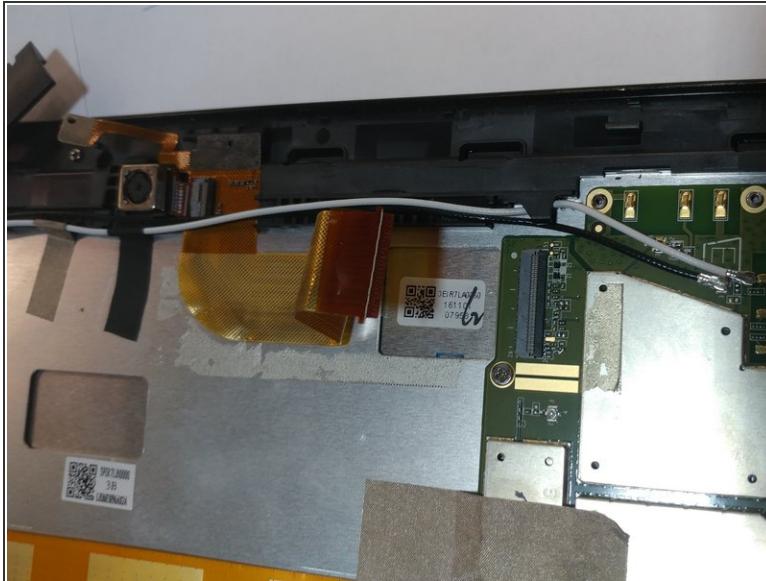


- Peel up the ribbon cable carefully as it is glued to the device.
- After having peeled up the cable, the cameras should be free to come out of the device.

## Step 17 — Motherboard

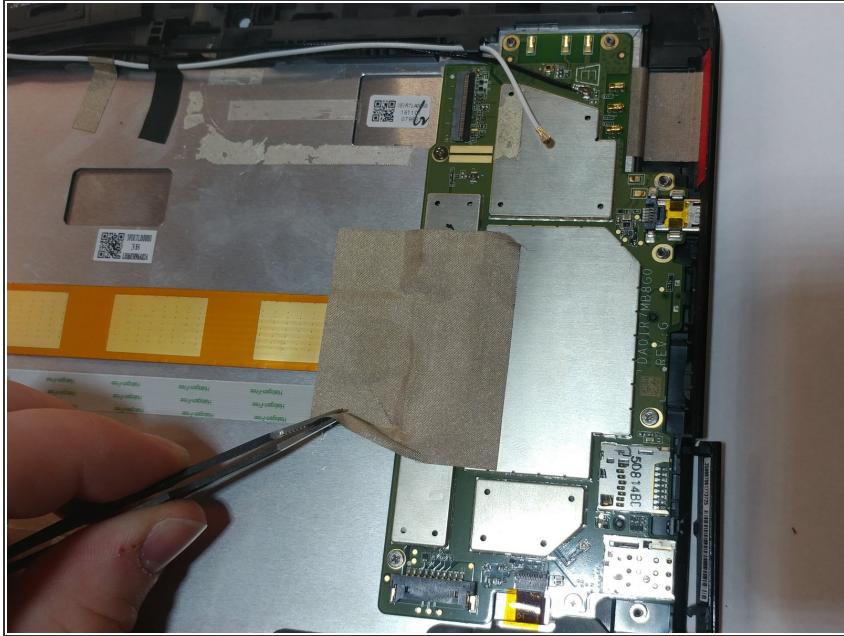

- Remove the non-conductive tape covering two ribbon cables.

## Step 18

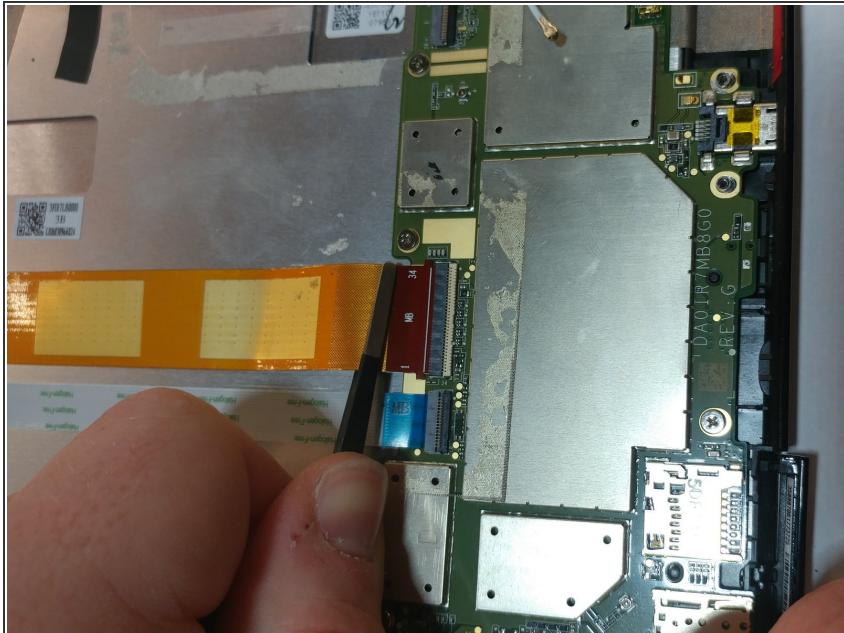

- Gently unplug both the orange and white ribbon cables.

## Step 19



- Use tweezers to pry/disconnect both the black and white antenna cables from the top of the motherboard.

## Step 20



- Unplug the last ribbon cable from the bottom of the motherboard.

## Step 21



- Remove all M1.5 screws holding in the motherboard.

## Step 22



- Once all screws are removed, the motherboard should easily come off the device without any resistance.

To reassemble your device, follow these instructions in reverse order.