




X-street Lamborghini Murcielago LP670-4 SV Steering Column Replacement

Prerequisite Only

Written By: Liam Martinez

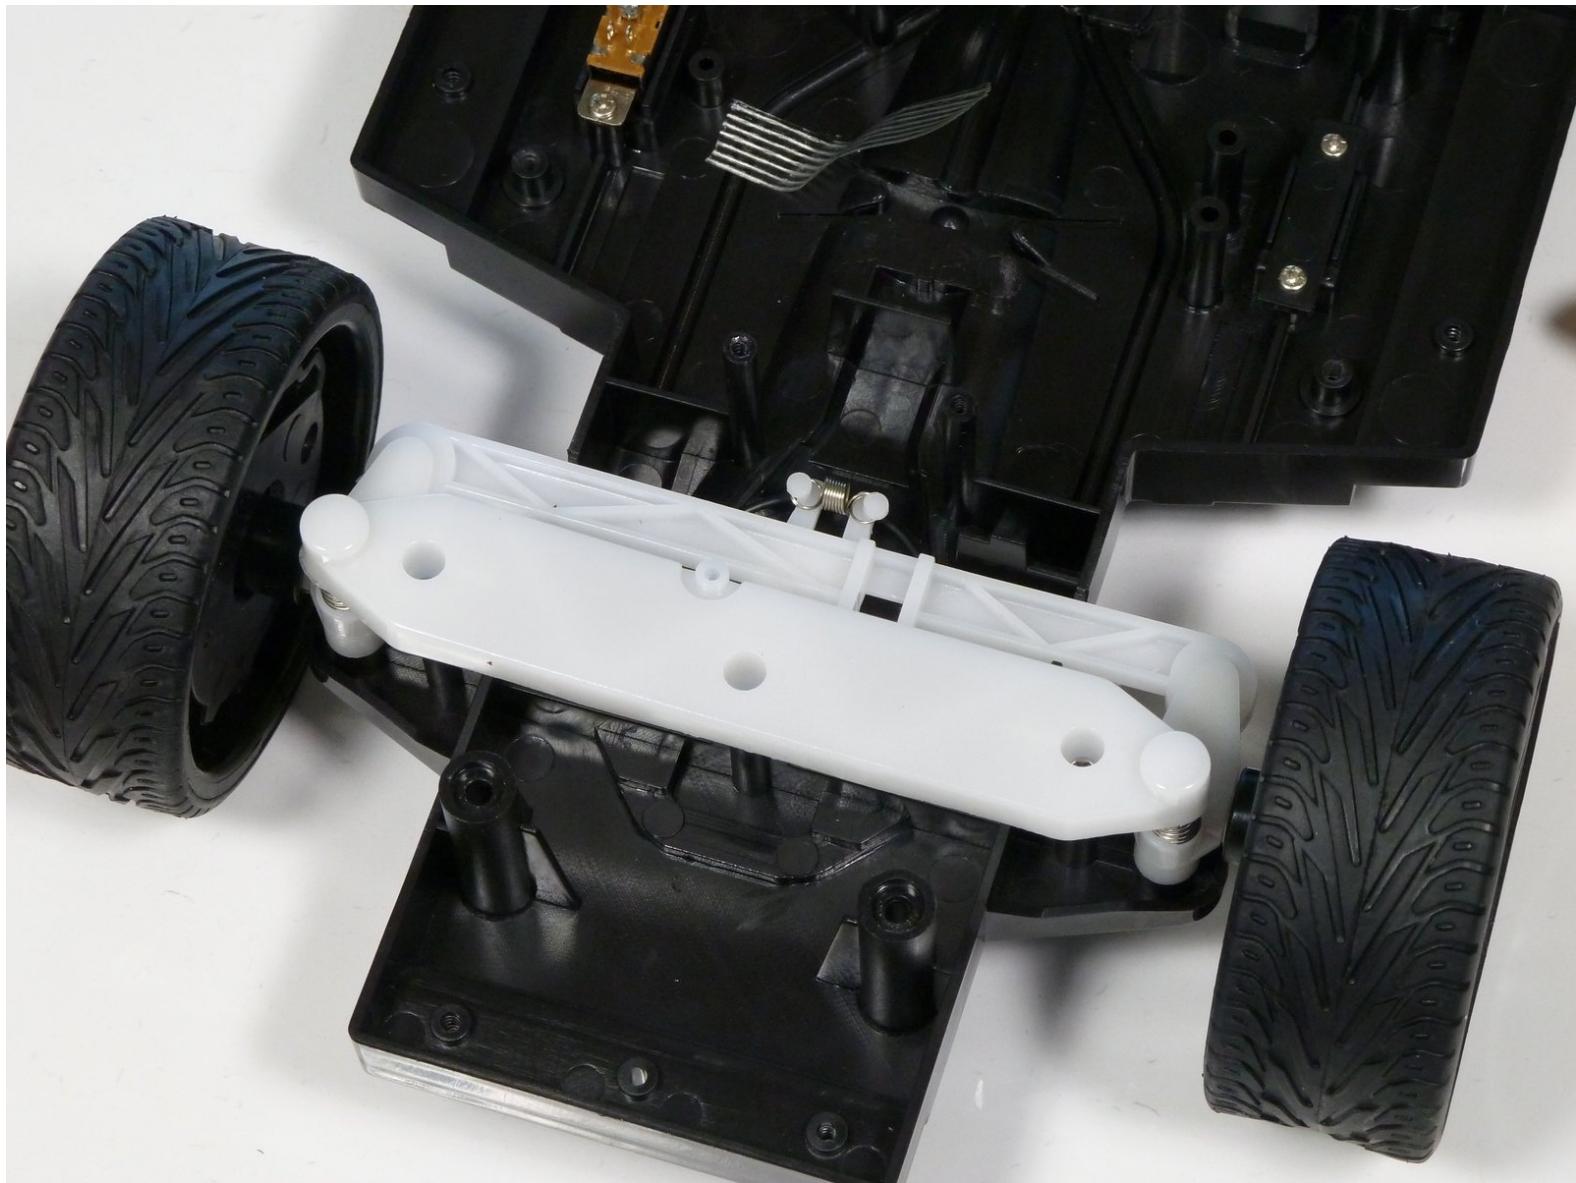

INTRODUCTION

Prerequisite Only

TOOLS:


- [Phillips #00 Screwdriver](#) (1)

Step 1 — Battery



- Unscrew the two 2.5mm Phillips #00 screws from the middle of the car.
- Unclip the two clips to remove the battery cover.

Step 2

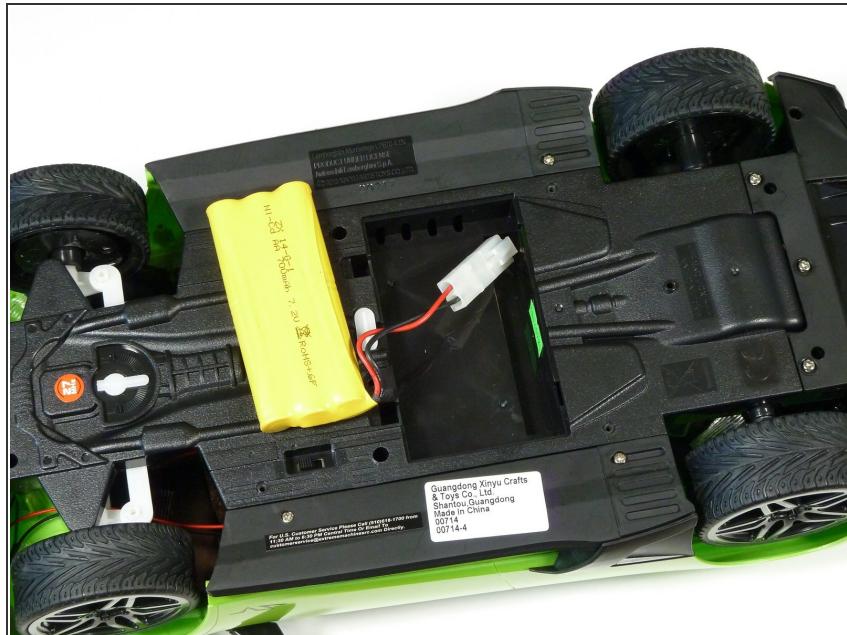


- Unplug the battery by pushing on the clip.

Step 3 — Underbody



- Unscrew the two 2.5mm Phillips #00 screws from each side

Step 4

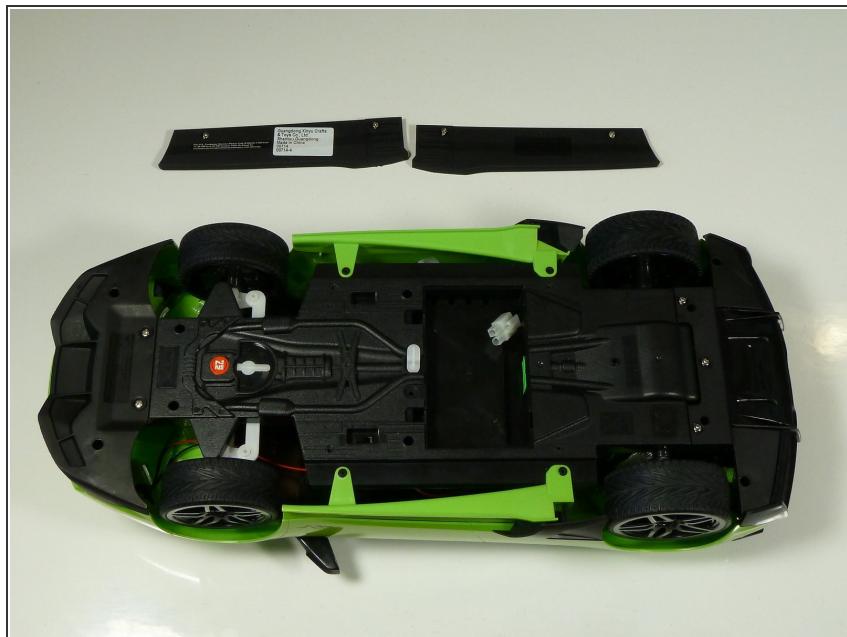

- Remove the side skirt covers on each side of the car.

Step 5



- Lift up and remove the two side skirts.

Step 6




- Unscrew the two 2.5mm Phillips #00 screws from the front skirt of the car.

Step 7



- Lift the front part of the underbody and pull it out from the main underbody.


Step 8

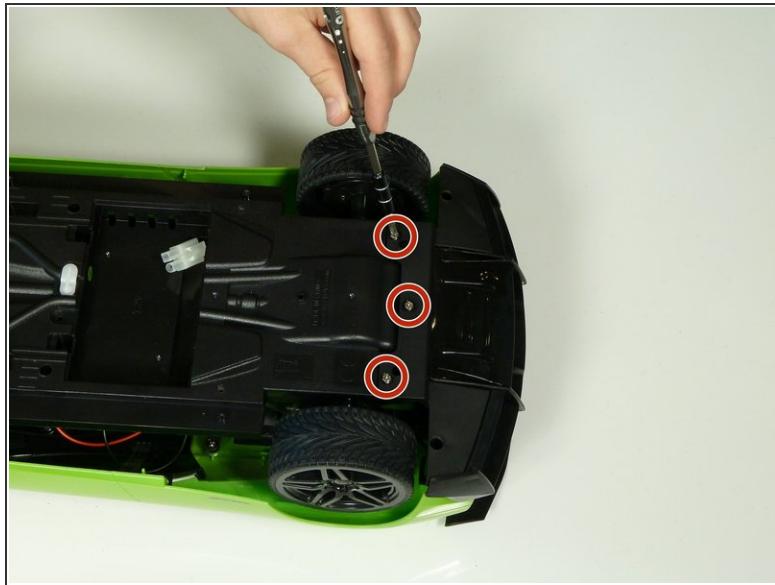

- Unscrew the remaining seven 9mm Phillips #00 screws from the underbody of the car.


(i) The second image shows a closer view of the rear three screws

Step 9

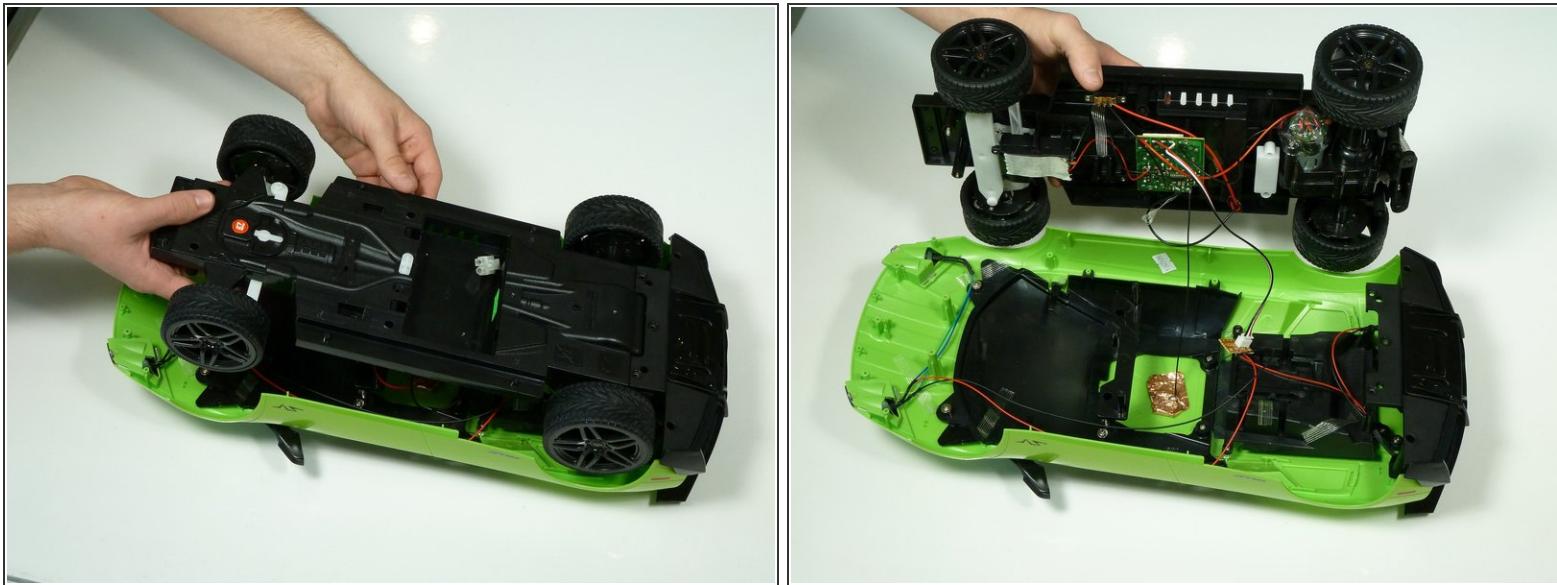


- Lift the main underbody from the shell of the car.
- Lift up the body to expose the wiring and hardware underneath.

Step 10

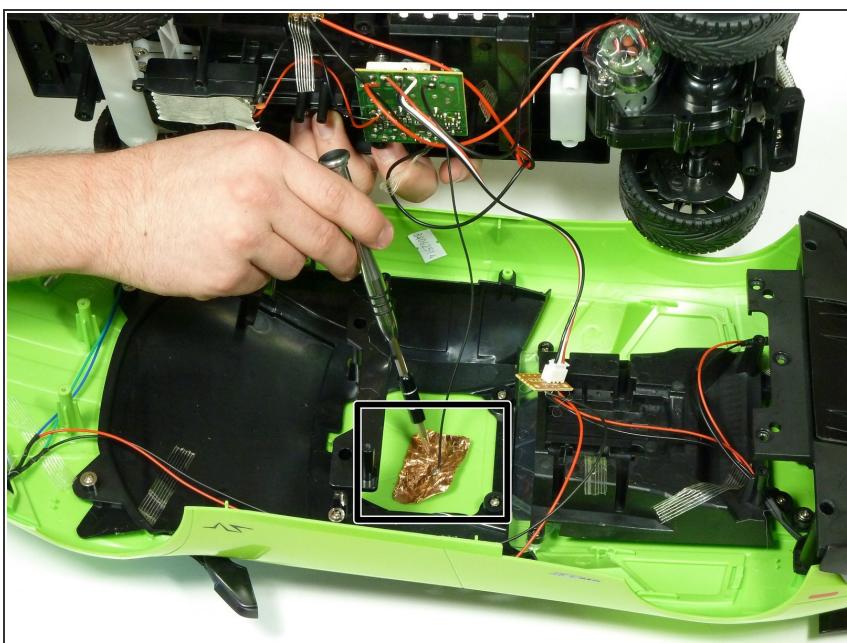


- Remove the reflective sticker from the top of the body.

Step 11

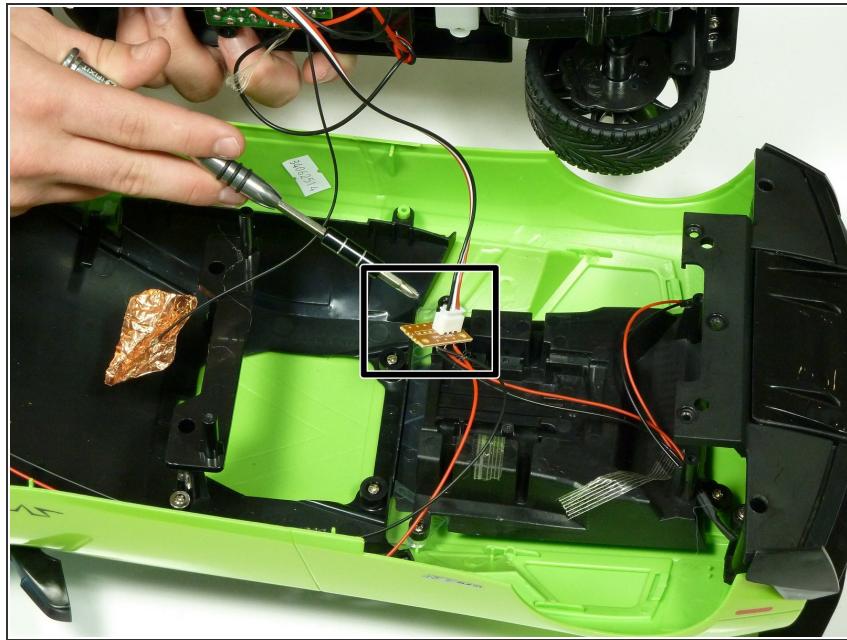

- Unplug the wire connector.

Step 12 — Steering Column

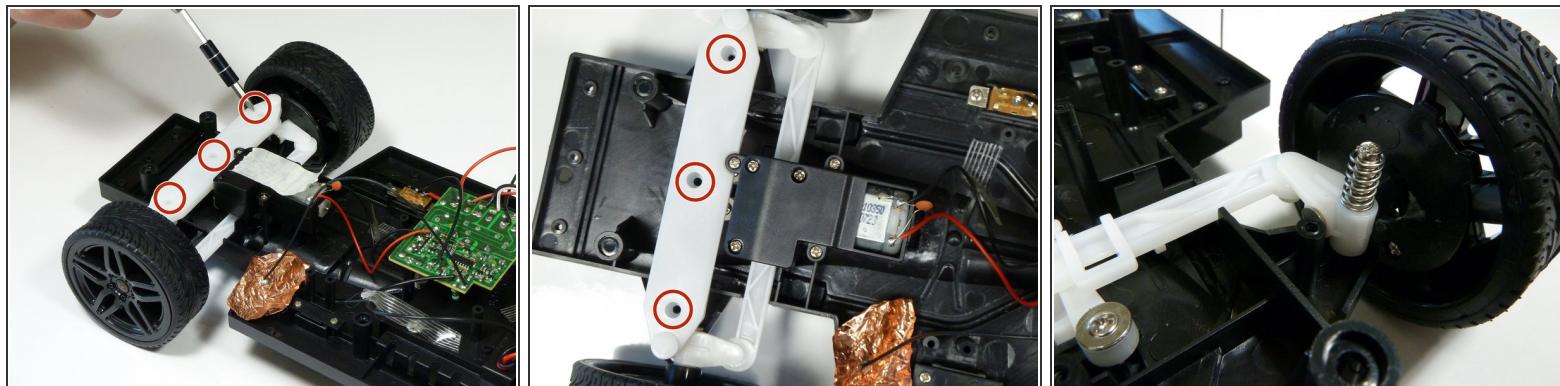

- Unscrew the three 2.5mm Phillips #00 screws from the white steering column.

⚠ After removing the three screws, the steering column will pop out of position because of the springs underneath. To reassemble, put the springs back together as shown in picture #3.

To reassemble your device, follow these instructions in reverse order.