



Xiaomi Redmi Note Midframe Replacement

This guide will show how to remove the plastic shield that covers the motherboard and charging port.


Written By: Zongyi Li



 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)

Step 1 — Battery

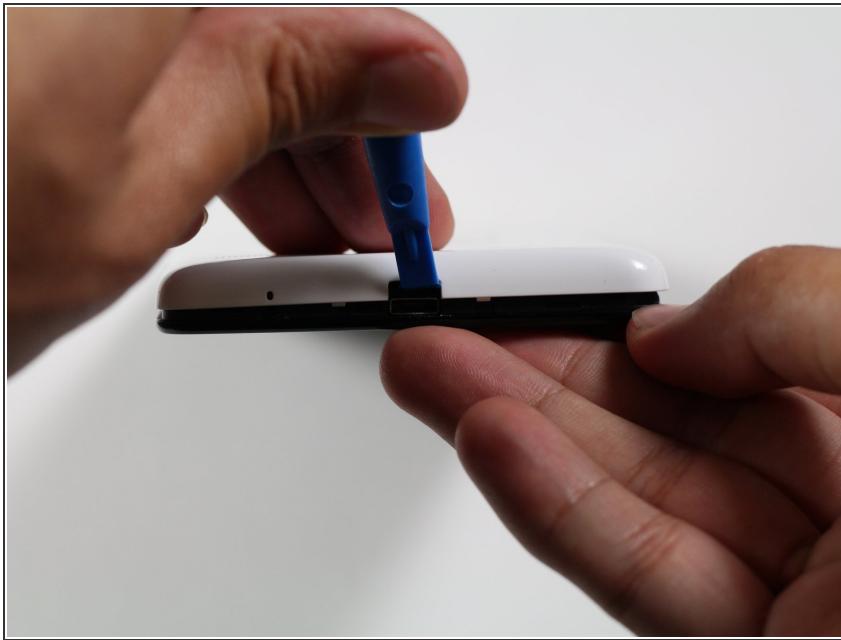

- ⓘ Make sure the Xiaomi Redmi Note is powered off before removing the battery.
- Insert the plastic opening tool between the charging port and the rear case.
- Pry the end of the rear case up from the charging port.

Step 2




- Run the plastic opening tool along the seam on the side of the phone to remove the rear casing.

Step 3




- Locate the indentation at the bottom of the battery.
- Place a finger in the indentation and lift up to remove the battery.

Step 4 — Midframe

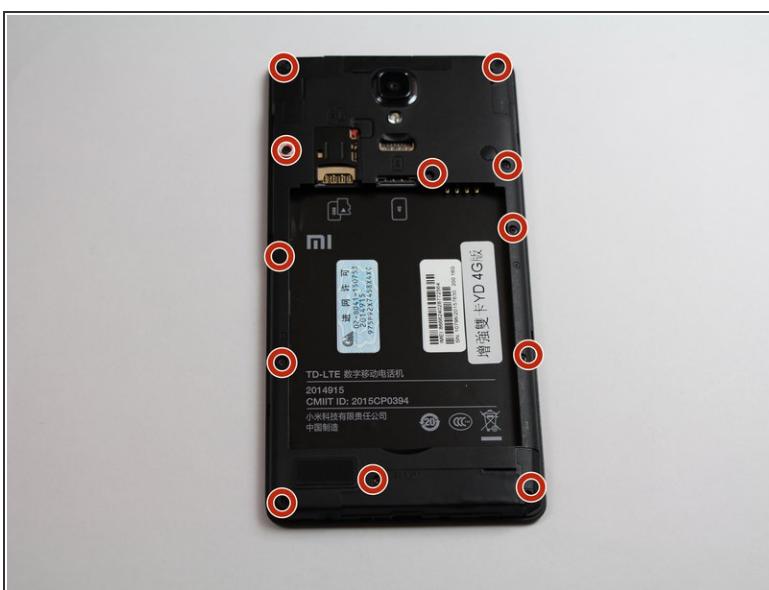

- Remove twelve 3.5mm Phillips #00 screws from the midframe.

Step 5

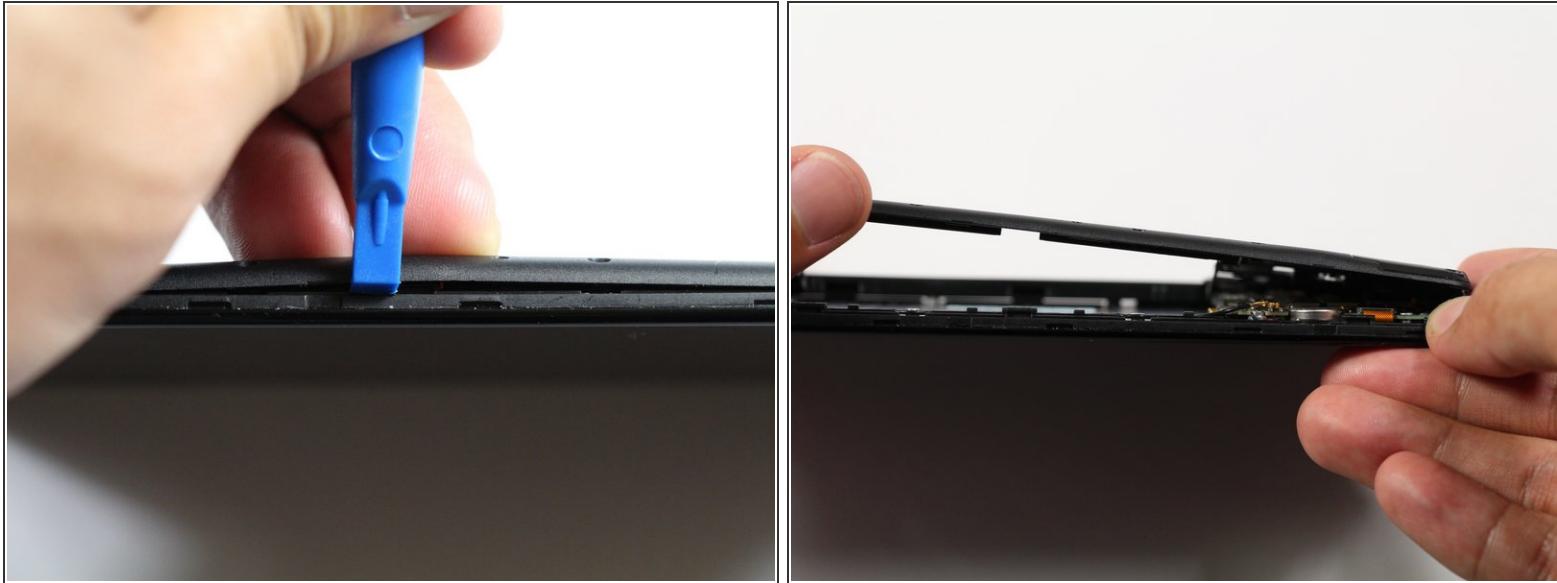

- Insert a plastic opening into the seam between the midframe and the bottom frame of the phone.
- Run the plastic opening tool along the seam.
- Pry up the midframe with the plastic opening tool.
- Once the midframe has been sufficiently lifted with the tool, place a hand underneath the edge to lift the entire component out of the frame.

ⓘ There will be snapping sounds as the clips on the midframe disconnect from the phone.

To reassemble your device, follow these instructions in reverse order.