




# ZTE Awe Headphone Jack Replacement

Replace your audio jack in the ZTE Awe if your ears and brain are no longer in musical heaven.

Written By: Jennifer DeMeo

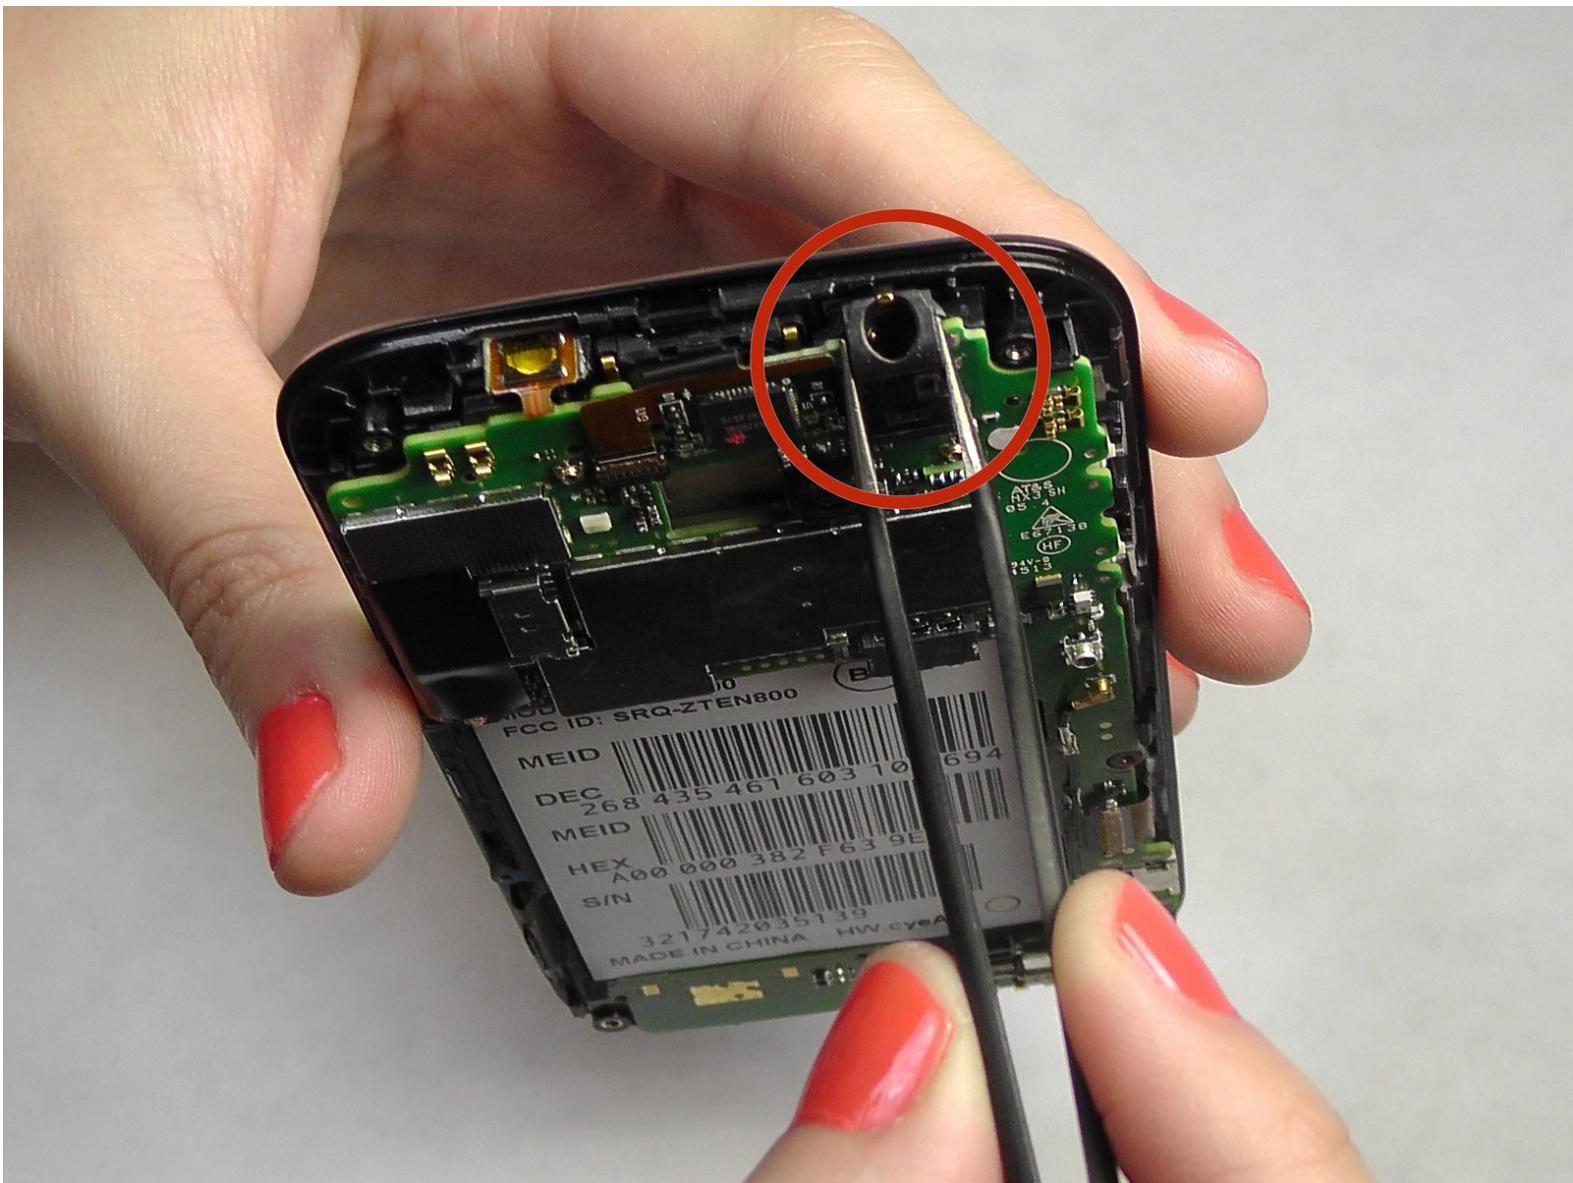

## INTRODUCTION

Be cautious when replacing the audio jack-- it is fragile and breaks easily. Tweezers are the optimal tool to use in order to remove and replace the audio jack.

### TOOLS:

- [Tweezers](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Essential Electronics Toolkit](#) (1)

## Step 1 — Remove the back cover



- Remove the back cover of the phone to expose the phone's mid-frame.

## Step 2 — Remove battery



- Pry the battery up and out of the phone.

## Step 3 — Unscrew the phone's mid frame




- Use the Phillips Head 00 screw driver to unscrew the seven 0.1mm screws from the phone's mid frame.

## Step 4 — Separate the mid frame and the digitizer




- Wedge the flat end of the spudger between the mid frame and the digitizer.

## Step 5 — Expose the motherboard

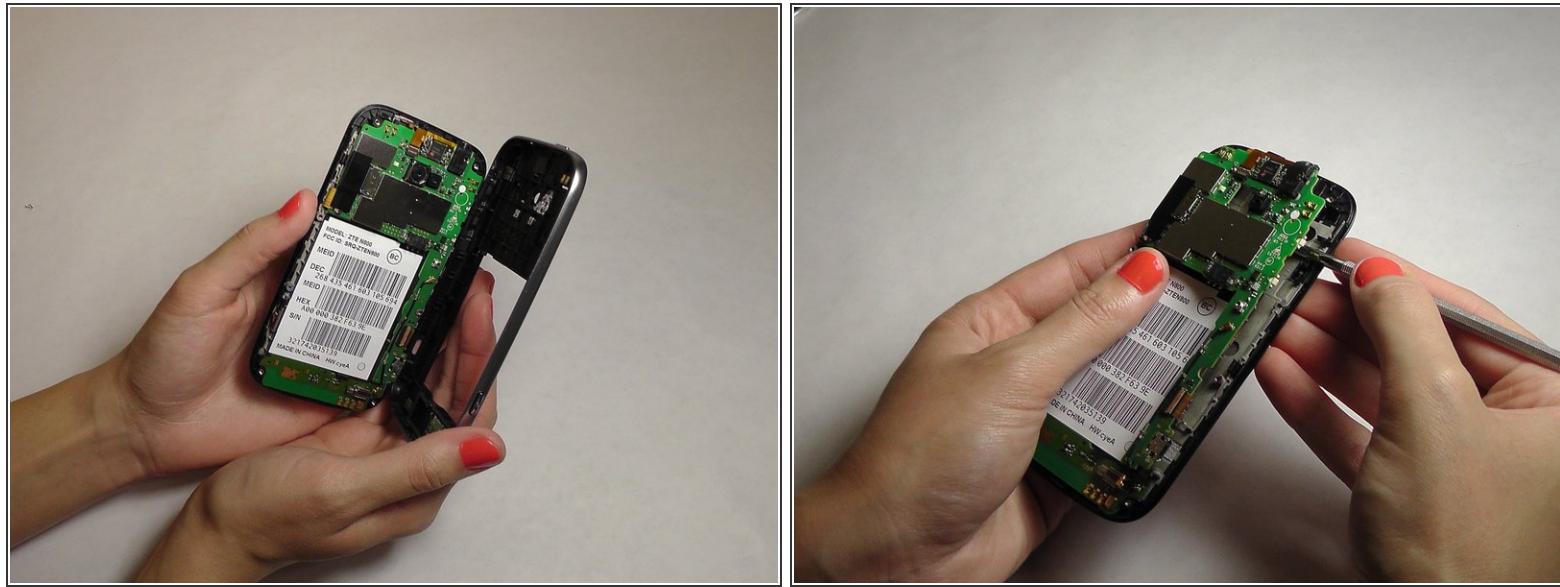

- Gently pry the mid frame away from the rest of the phone to expose the motherboard.

## Step 6 — Remove the audio jack

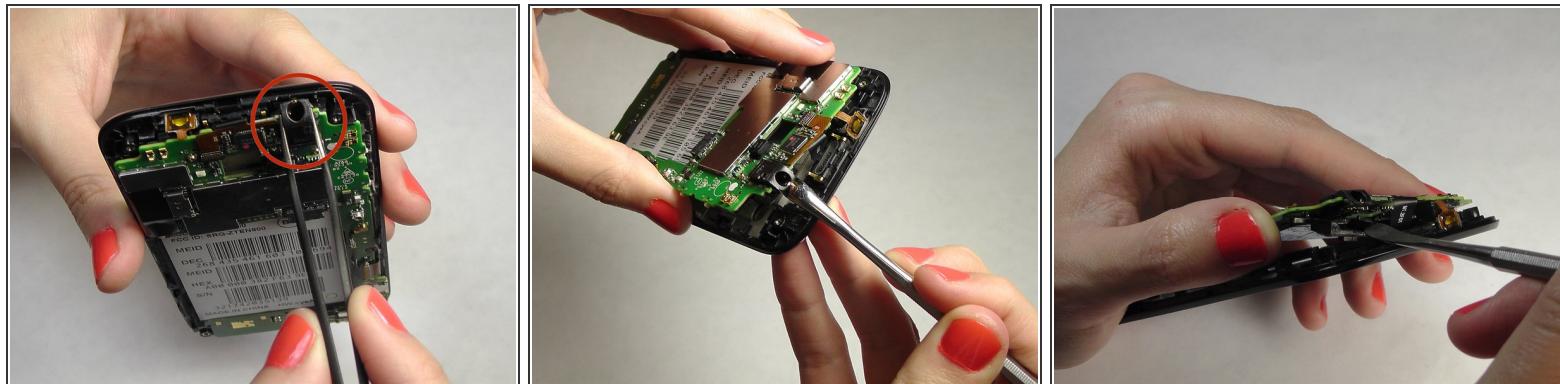

- Locate the audio jack at the upper right hand corner of the device.
- Use the metal spudger to pry the motherboard away from the device.
- Use the metal spudger to unfasten the audio jack and pull it away from the motherboard.

To reassemble your device, follow these instructions in reverse order.