



# ZTE Axon Teardown

The whole teardown video of the ZTE new flagship phone AXON.

Written By: Alex Lin



# INTRODUCTION

A video step teardown of the ZTE Axon.

## TOOLS:

- Essential Electronics Toolkit (1)


## Step 1 — ZTE Axon Teardown



Copyright © 2015 ZTE CORPORATION

- Remove the card tray, upper and lower back covers.

## Step 2

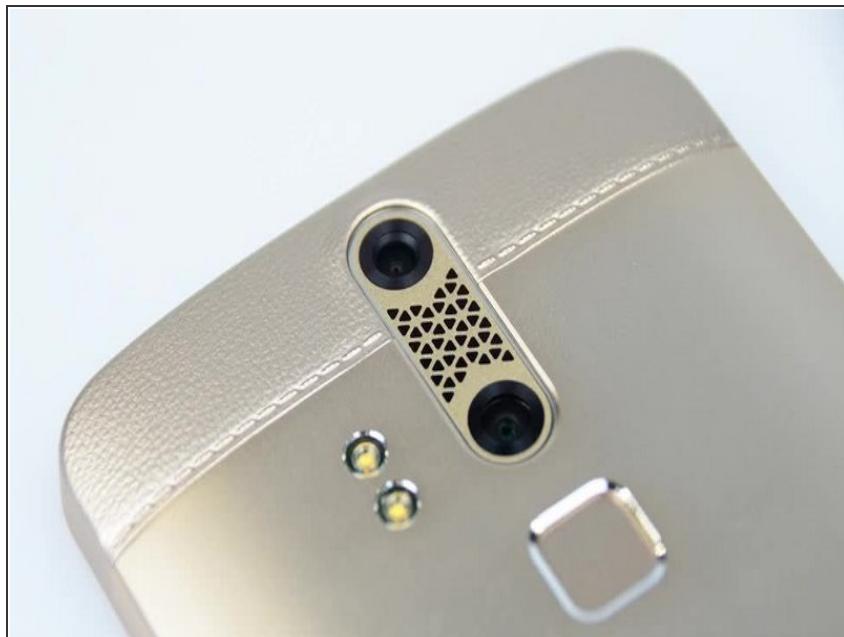


- The back covers and screw locations.

## Step 3



- Remove the screws securing the back housing assembly.

## Step 4

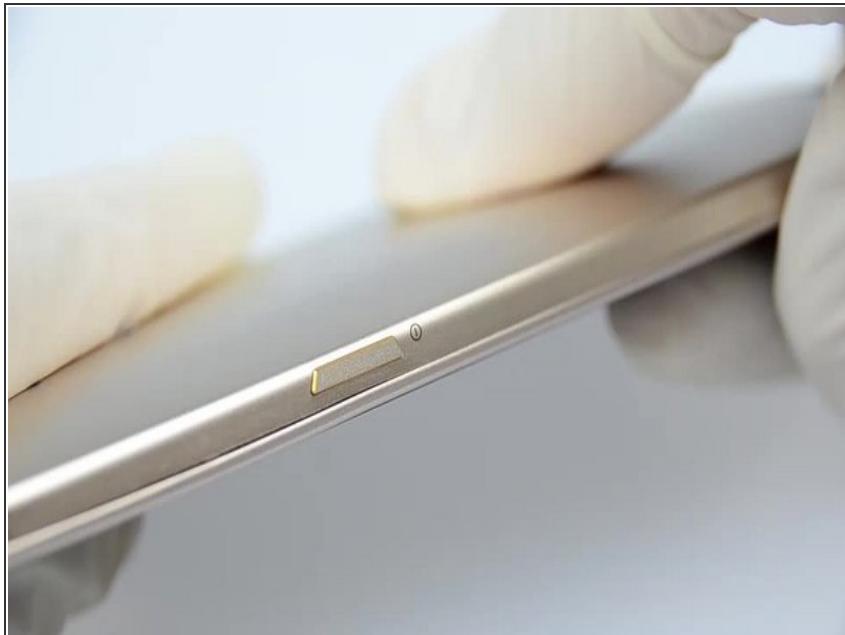

- Open the back housing assembly.

## Step 5




- Remove the back housing assembly.

## Step 6




- Remove the fingerprint sensor and flash sub-board.

## Step 7

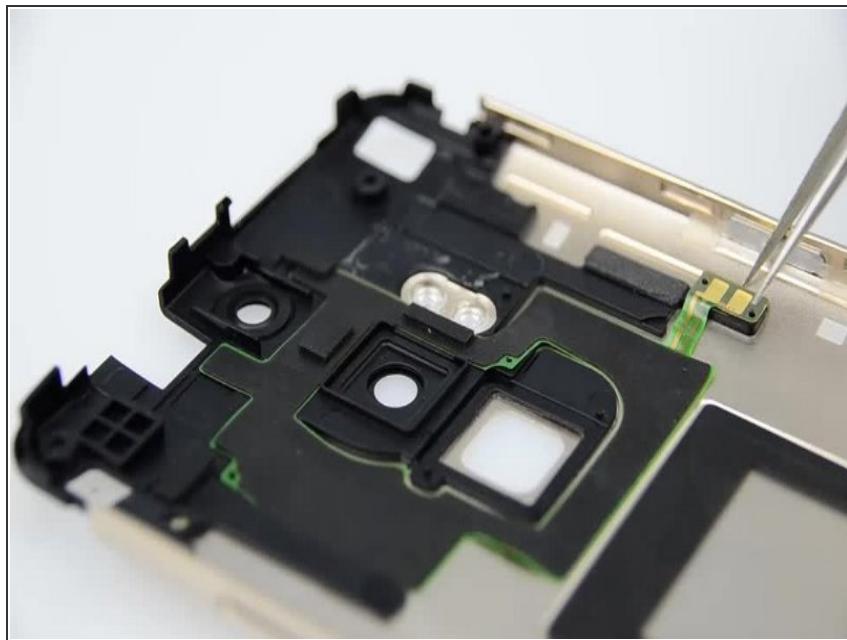

- Remove the NFC sensor.

## Step 8

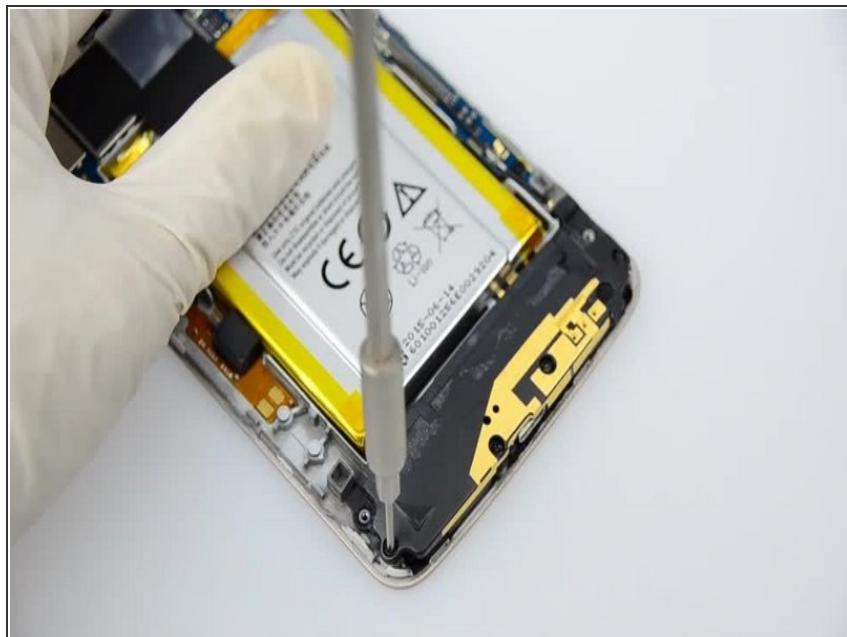

- Remove the speaker box.

## Step 9



- Free the front camera and disconnect the connectors.

## Step 10



- Free the RF cable and remove the screws securing the mainboard.

## Step 11



- Remove the mainboard. The CPU, RAM and ROM of AXON.

## Step 12



- Remove the earpiece speaker, back camera and vibrator unit.

## Step 13



- Remove the battery.

## Step 14



- The heat pipe radiator. Remove the sub-board.

## Step 15

- Composing of AXON, part 1.



## Step 16

- Composing of AXON, part 2. The end.

