


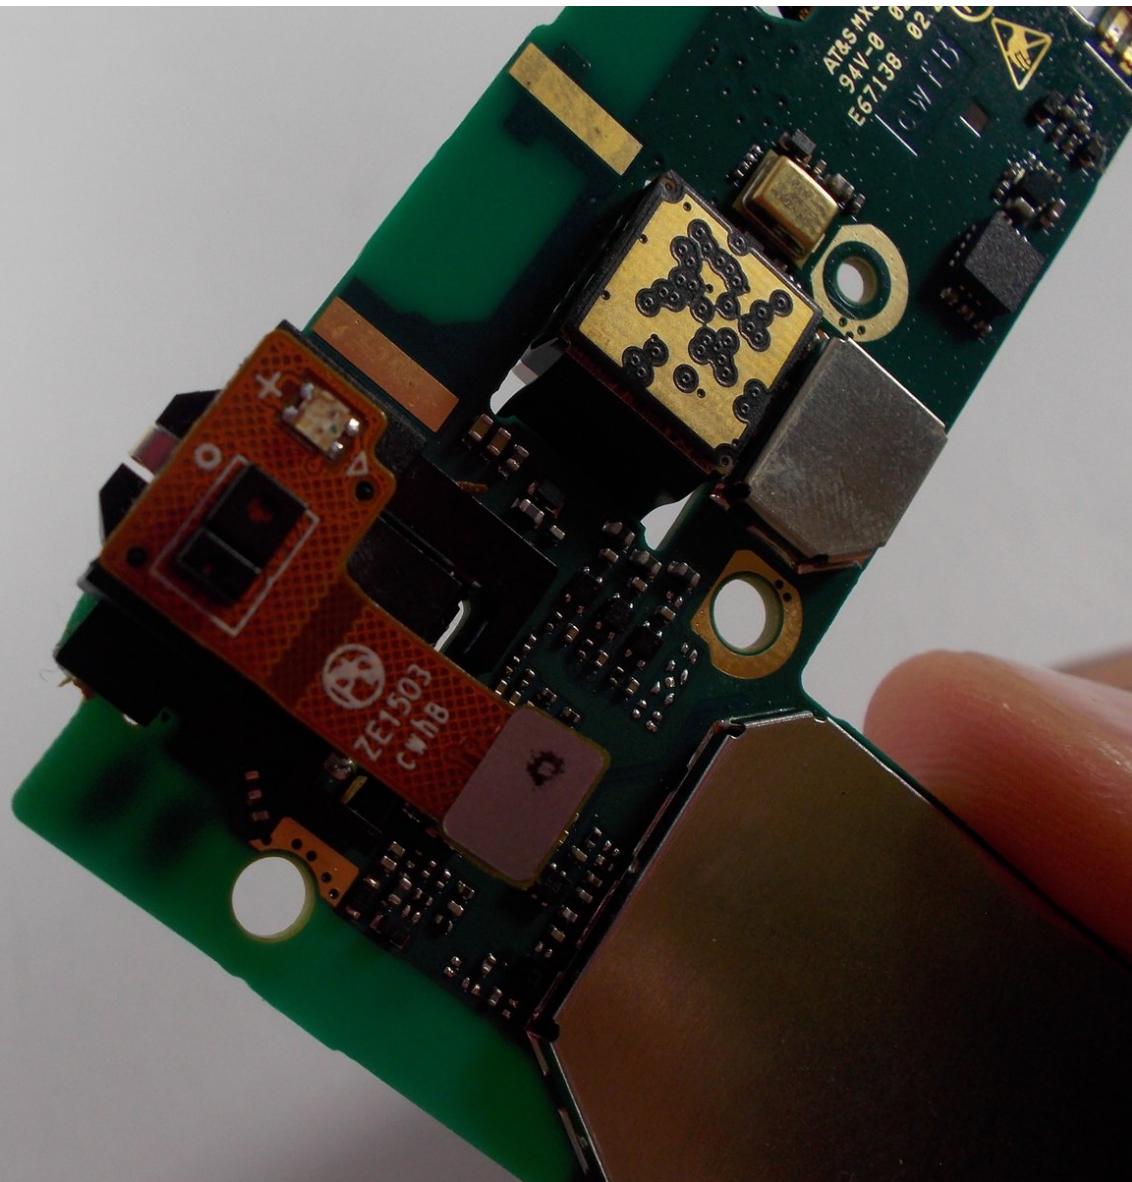

ZTE Speed Headphone Jack Replacement

Nowadays every phone has the ability to connect to headphones, consequently also resulting in there often being problems. Getting to the headphone jack is a quick and simple process.

Written By: Garrett Barry



INTRODUCTION

Everyone likes to listen to music right? Then we need to learn how to get to the headphone jack if it needs to be fixed.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #000 Screwdriver](#) (1)

Step 1 — Motherboard




- Pull off back cover at bottom right corner.

Step 2



- Remove the seven 3.175mm Phillips head screws from the inner back located at the top, upper-middle-right, middle-right, lower-right, and bottom.

Step 3

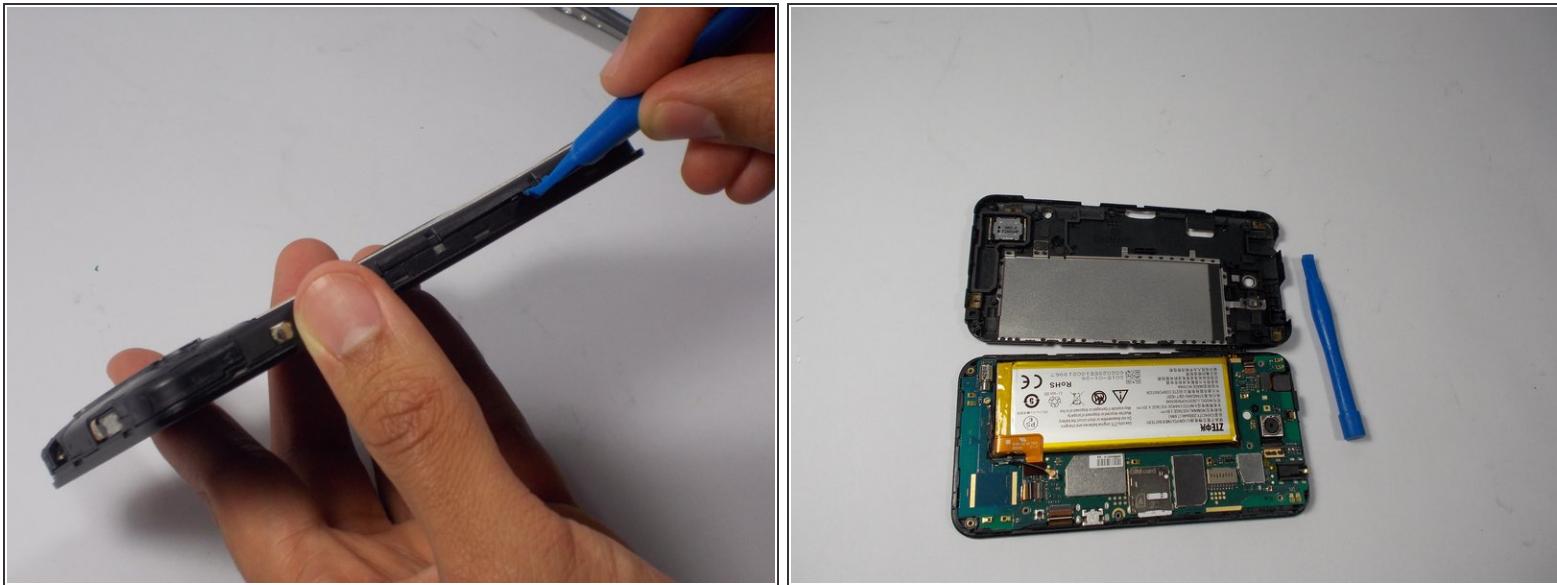

- With the plastic opening tool the spudger, gently pry off the inner back.
- Be careful not to pry it off too hard, as it is just a plastic covering.

Step 4




- Remove the one 2.381mm Phillips head screw from the motherboard located in the upper-middle part of the phone next to the bottom left corner of the back camera.

Step 5





- Using the spudger, gently pry up all ZIF connectors
- ZIF connectors have a tiny tab that needs to be flipped up in order to safely remove the cable
- Using same spudger, gently pry up the orange flat top connector

Step 6

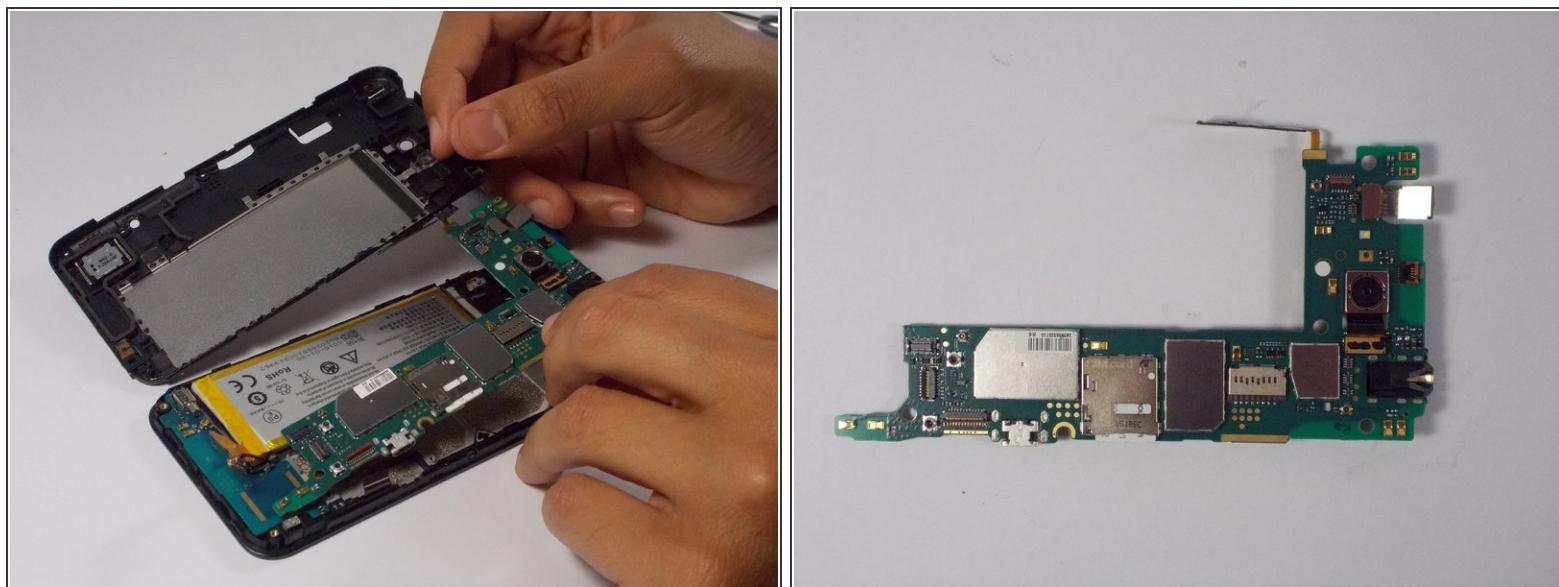

- Carefully take off motherboard.

Step 7 — Headphone Jack

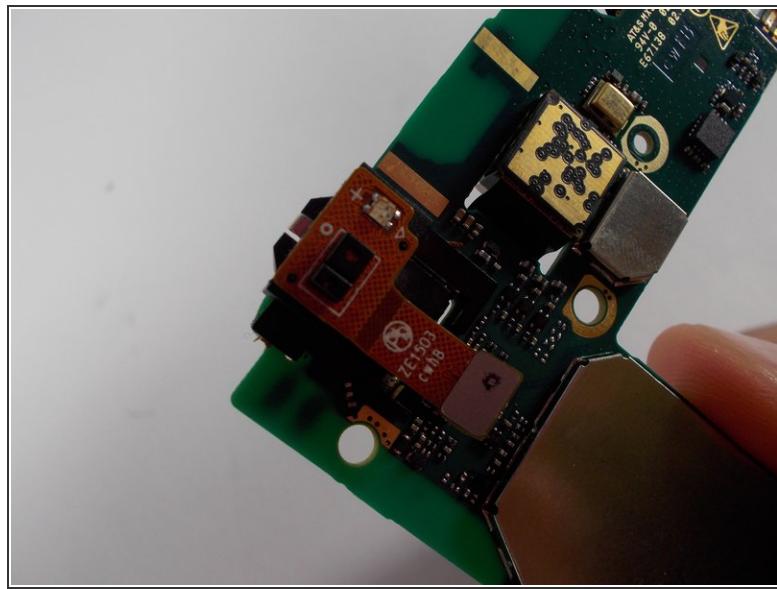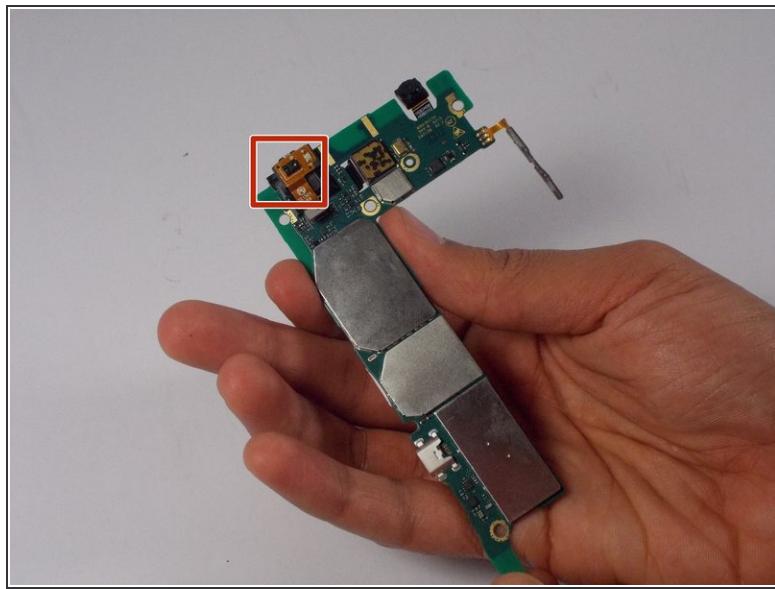

- Flip over motherboard to locate headphone jack circuit.

To reassemble your device, follow these instructions in reverse order.