




iMac Intel 21.5" EMC 2308 Hard Drive Prereq

This is a prereq only guide

Written By: Andrew Bookholt

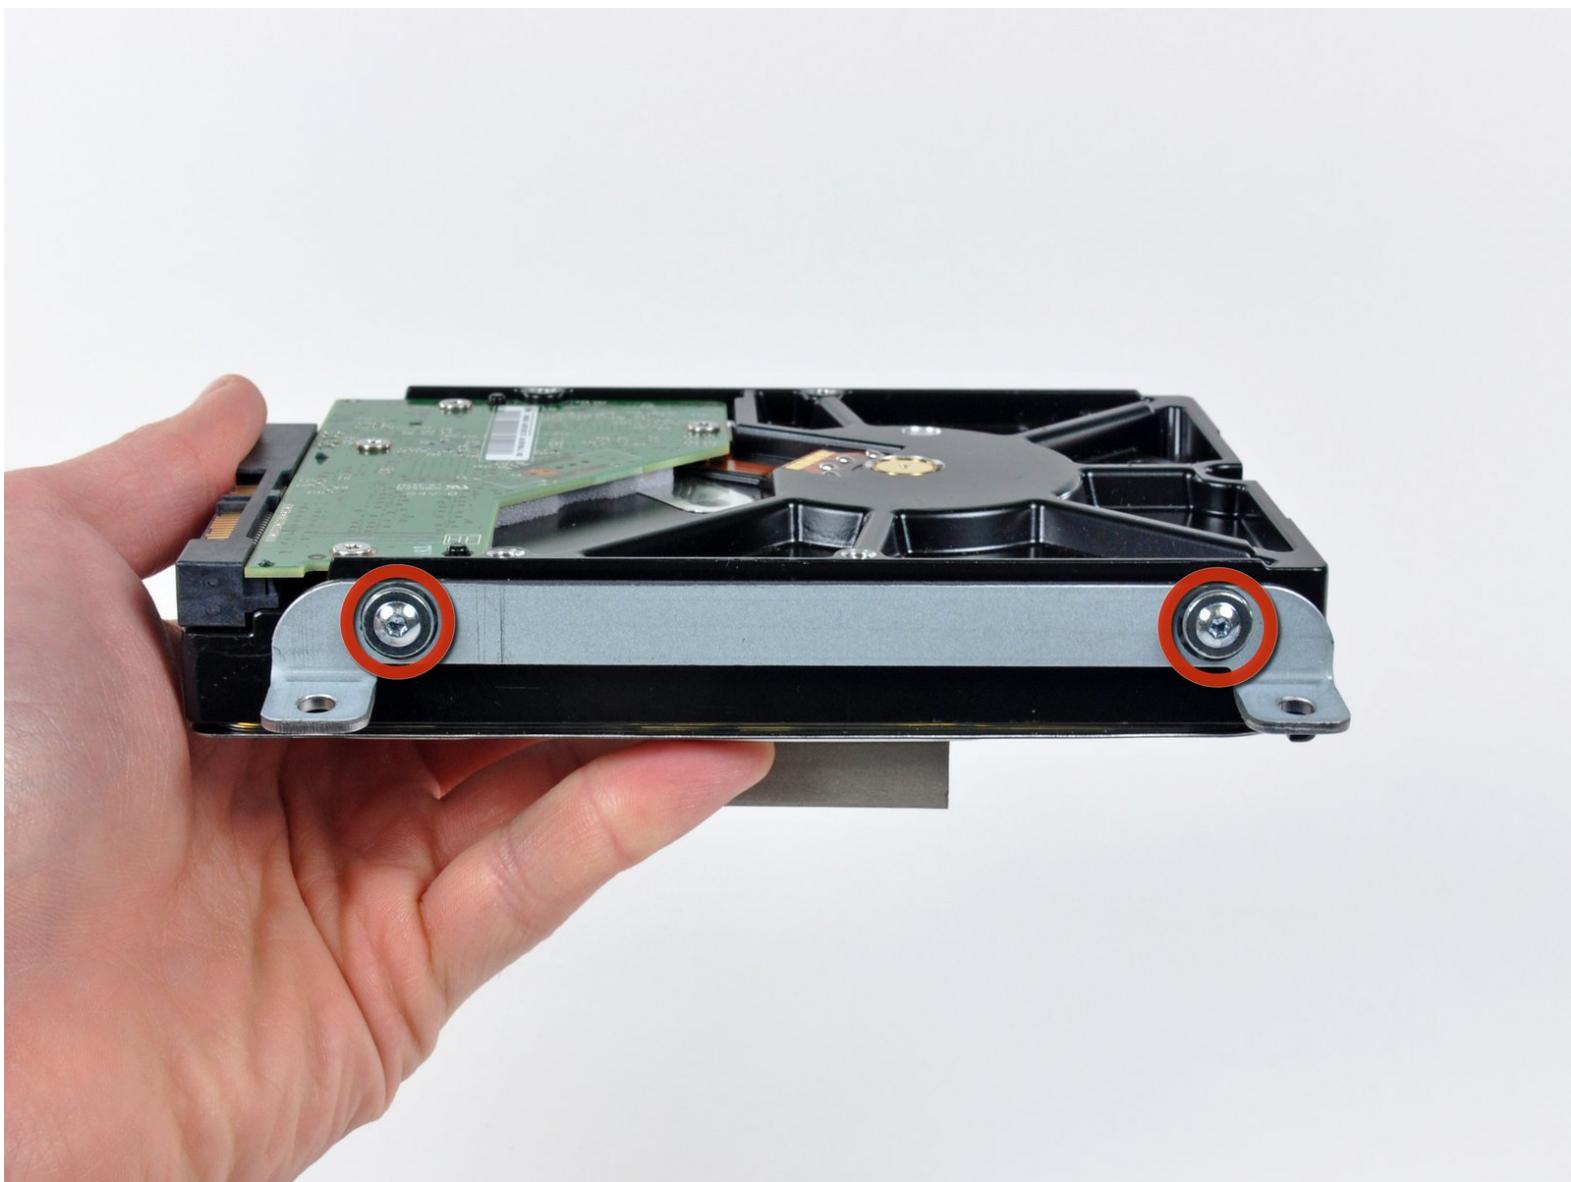

INTRODUCTION

Prereq only guide


TOOLS:

- Heavy-Duty Suction Cups (Pair) (1)
- Spudger (1)
- T10 Torx Screwdriver (1)
- T8 Torx Screwdriver (1)

PARTS:

- iMac Intel 21.5" and 27" Late 2009-Mid 2010 SSD Upgrade Bundle (1)
- Universal Drive Adapter (1)
- 1 TB SATA Desktop Hard Drive (1)
- 2 TB SATA Desktop Hard Drive (1)
- 3 TB SATA Desktop Hard Drive (1)
- 4 TB 3.5" Hard Drive (1)
- 2 TB SSD Hybrid 3.5" Hard Drive (1)
- 1 TB SSD Hybrid 3.5" Hard Drive (1)
- 4 TB SSD Hybrid 3.5" Hard Drive (1)

Step 1 — Hard Drive

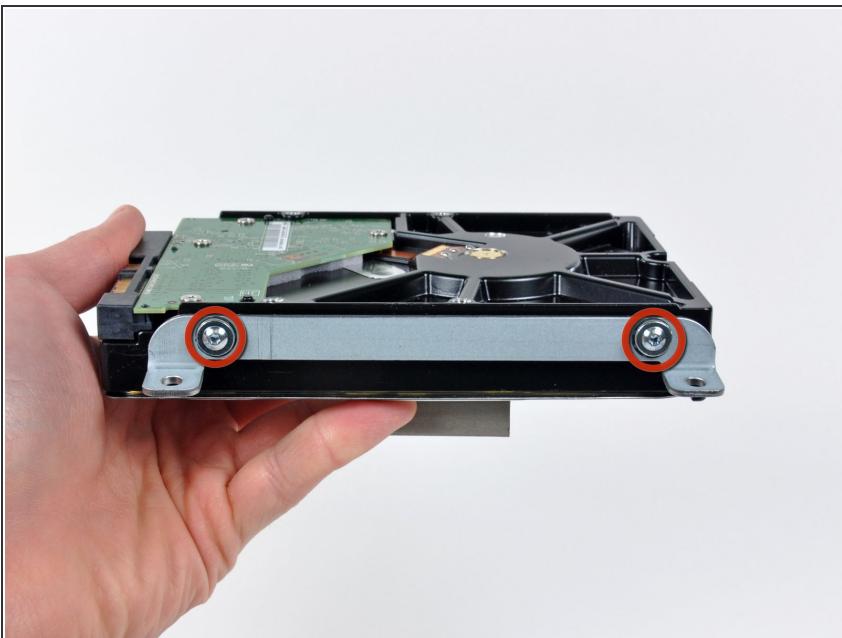

- Remove the two T8 Torx screws securing the upper bracket to the hard drive.
- Remove the upper bracket from the hard drive.

Step 2



- Remove the two T8 Torx pins from the other side of the hard drive.

Step 3



- Carefully peel off the piece of EMI foam attached to the front of the hard drive.

 Don't forget to transfer this to your new hard drive.

To reassemble your device, follow these instructions in reverse order.