



# iMac Intel 21.5" EMC 2428 Hard Drive Replacement

Prereq only guide.

Written By: Walter Galan



# INTRODUCTION

Prereq only guide


## TOOLS:

- Heavy-Duty Suction Cups (Pair) (1)
- Spudger (1)
- T10 Torx Screwdriver (1)
- T8 Torx Screwdriver (1)

## PARTS:

- iMac Intel 21.5" and 27" Mid 2011 SSD Upgrade Bundle (1)
- Universal Drive Adapter (1)  
*Requires you buy this cable*
- iMac Intel 21.5" (EMC No. 2428) Upper Hard Drive Bracket (1)

## Step 1 — Hard Drive

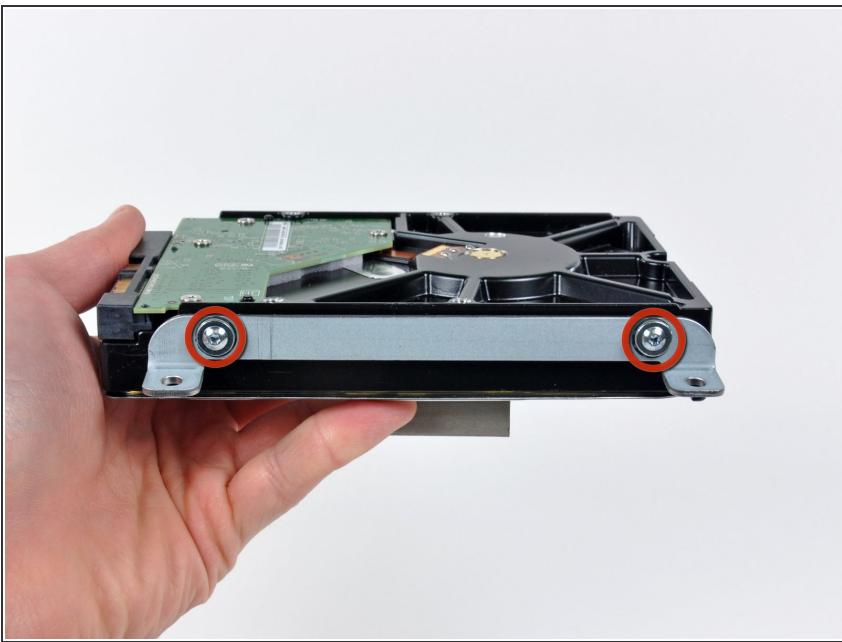

- Remove the two T8 Torx screws securing the upper bracket to the hard drive.
- Remove the upper bracket from the hard drive.

## Step 2



- Remove the two T8 Torx pins from the other side of the hard drive.

## Step 3



- Carefully peel off the piece of EMI foam attached to the front of the hard drive.

 Don't forget to transfer this to your new hard drive.

To reassemble your device, follow these instructions in reverse order.