




iMac Intel 21.5" EMC 2544 Hard Drive Brackets Replacement

Prereq to remove the hard drive brackets.

Written By: Sam Goldheart

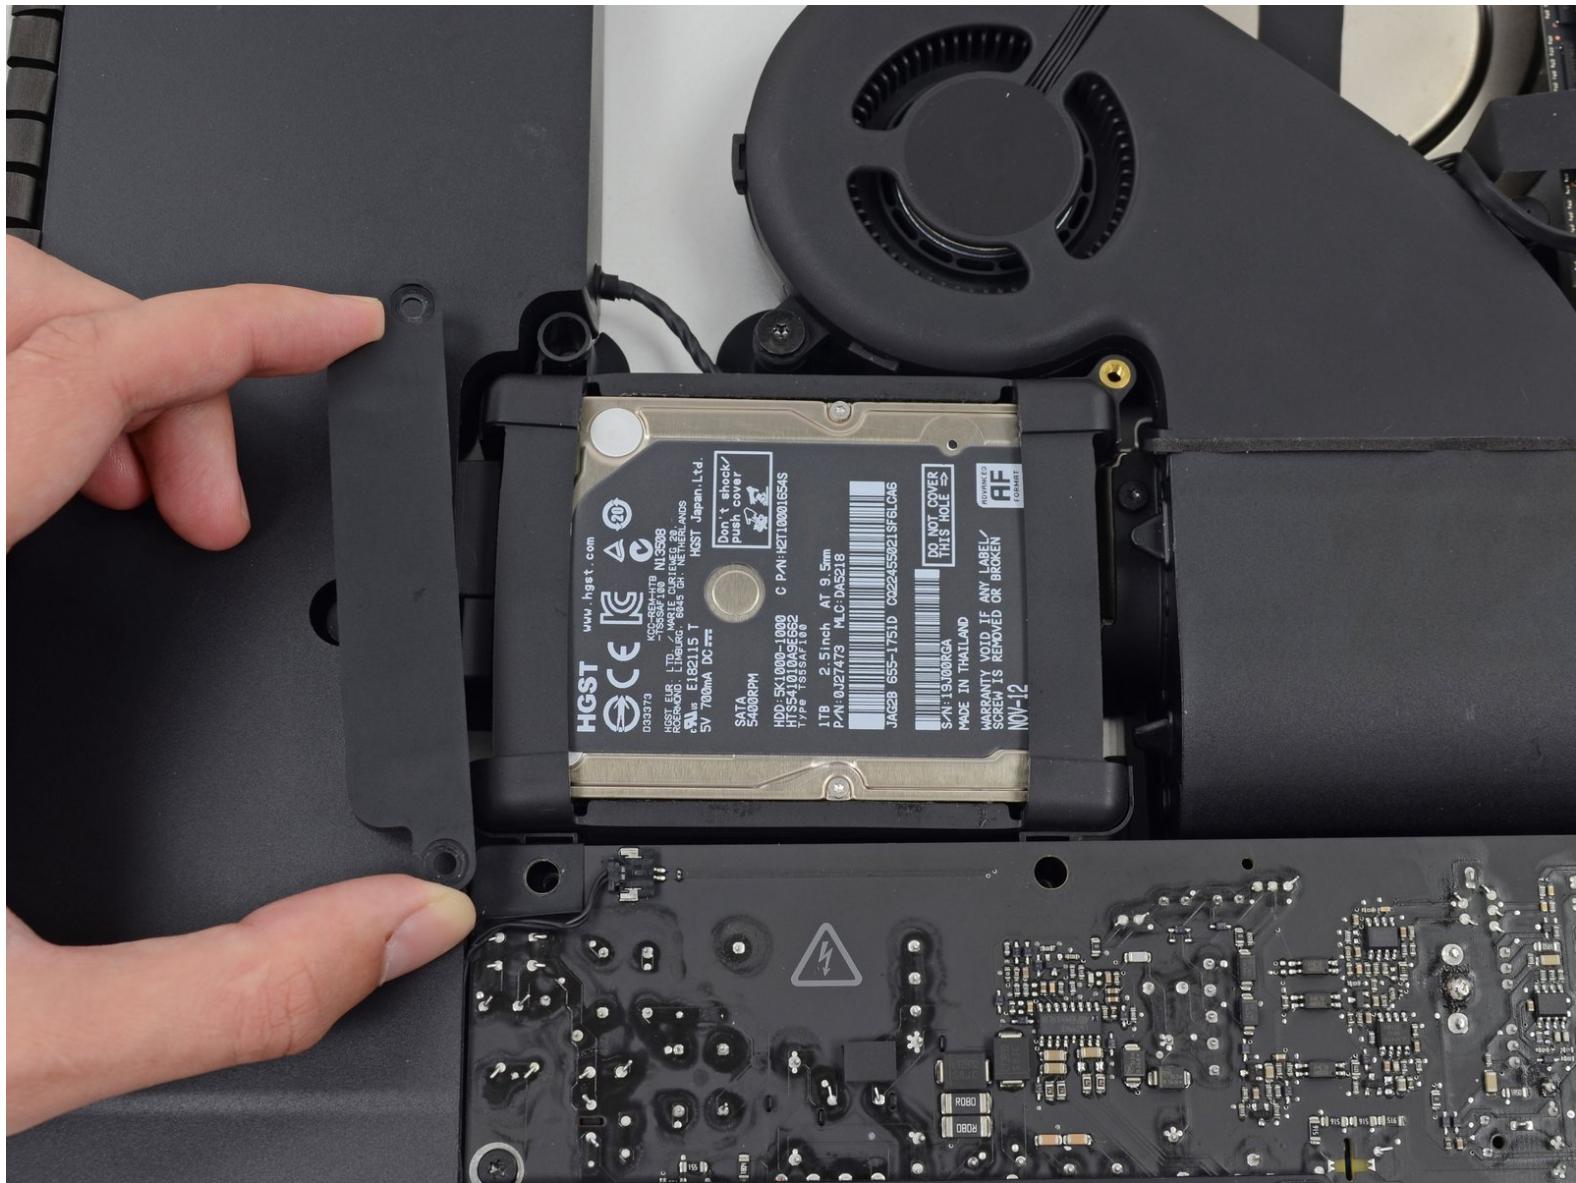

This document was generated on 2019-10-25 05:14:45 AM (MST)

INTRODUCTION

Prereq to remove the hard drive brackets.

TOOLS:

- T10 Torx Screwdriver (1)

Step 1 — Hard Drive Brackets



- Remove the following screws securing the hard drive bracket to the rear enclosure:
 - Two 21 mm T10 Torx screws from the left-hand hard drive bracket.
 - One 9 mm T10 Torx screw.
 - One 27 mm T10 Torx screw.

Step 2



- Remove the left and right hard drive brackets from the iMac.

To reassemble your device, follow these instructions in reverse and use our [Adhesive Strips Guide](#) to reattach the display glass.

