




iMac Intel 21.5" EMC 2805 Fan Replacement

Prereq for removing fan after the hard drive brackets.

Written By: Walter Galan

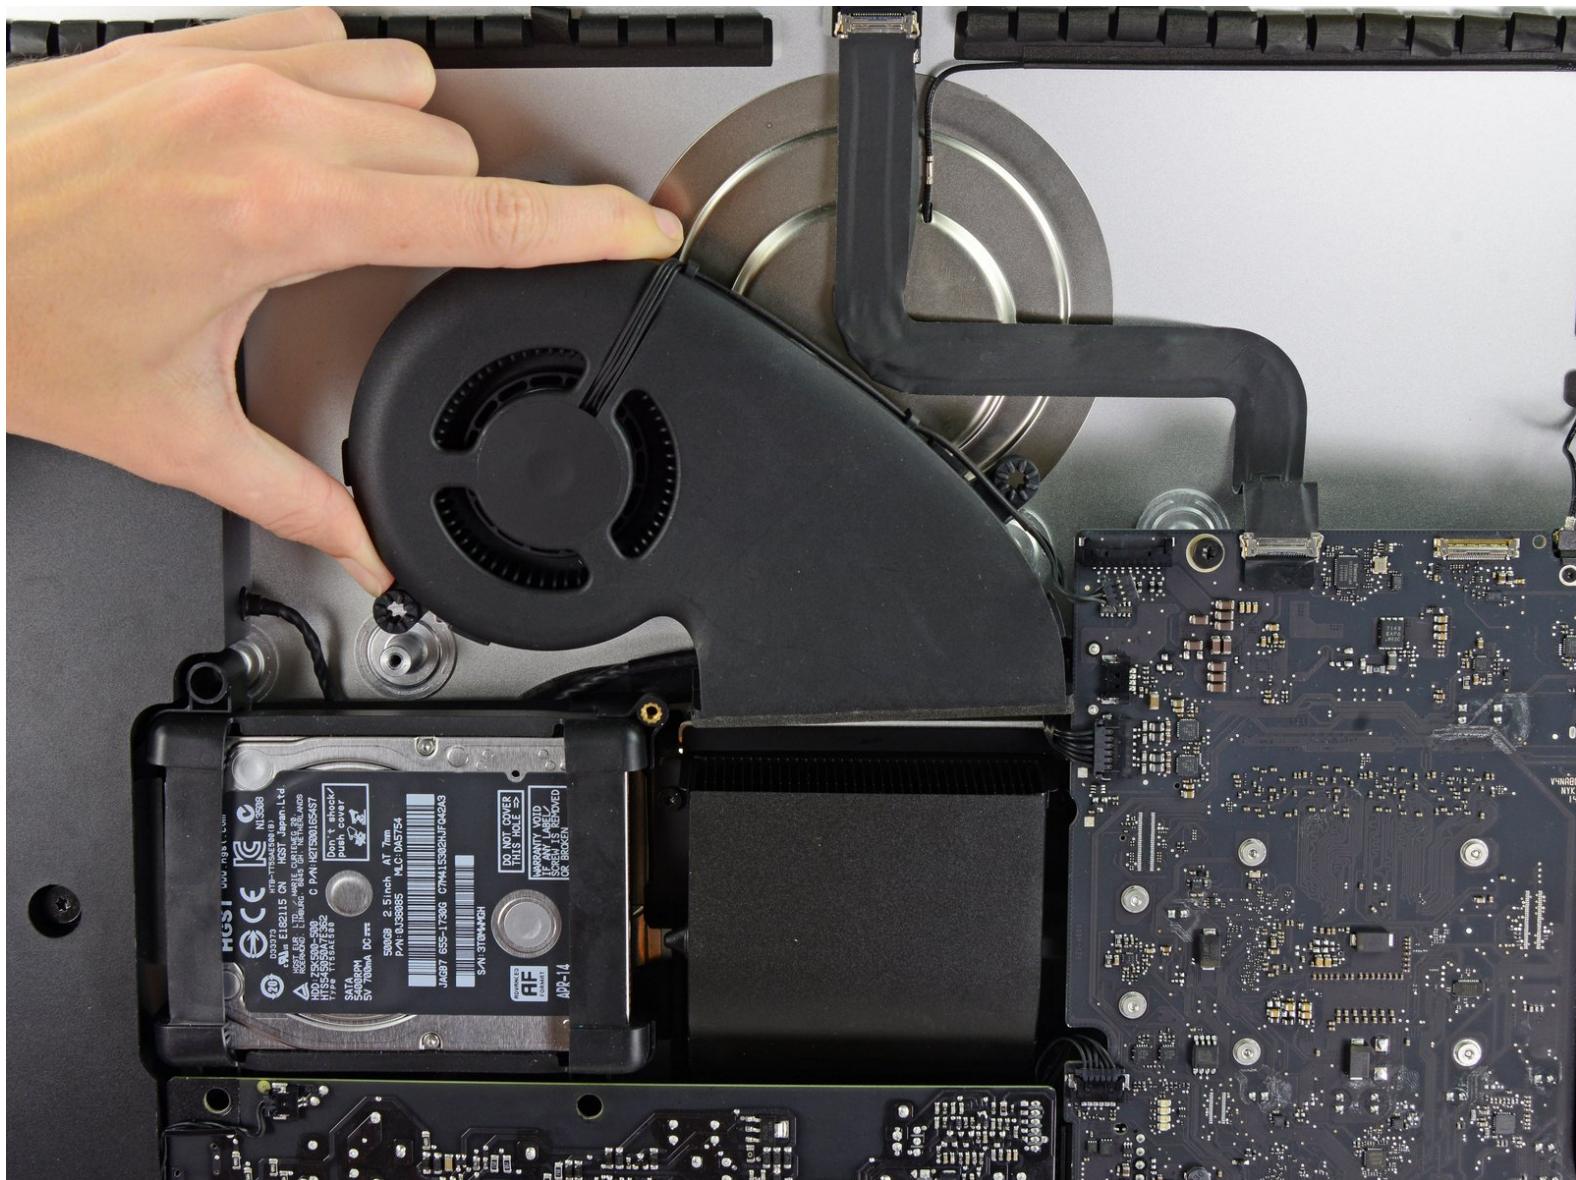



INTRODUCTION

Prereq for removing fan after the hard drive brackets.

TOOLS:


- [Spudger \(1\)](#)
- [T10 Torx Screwdriver \(1\)](#)

Step 1 — Fan

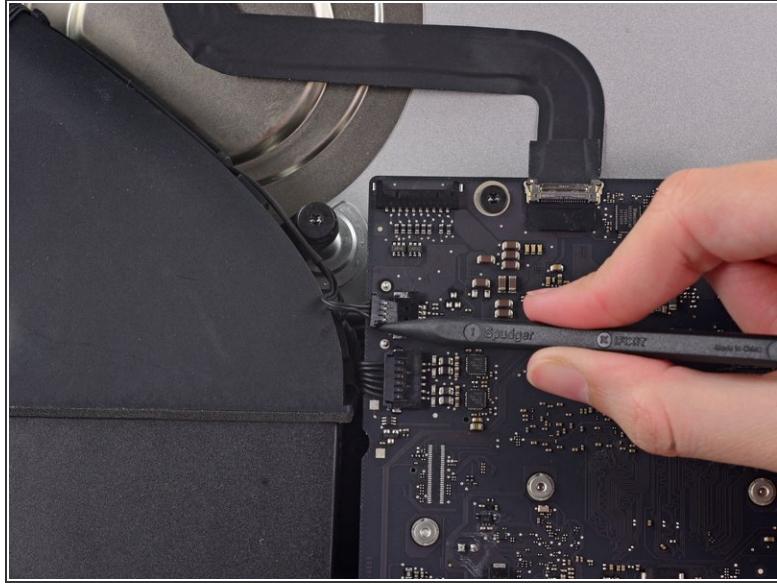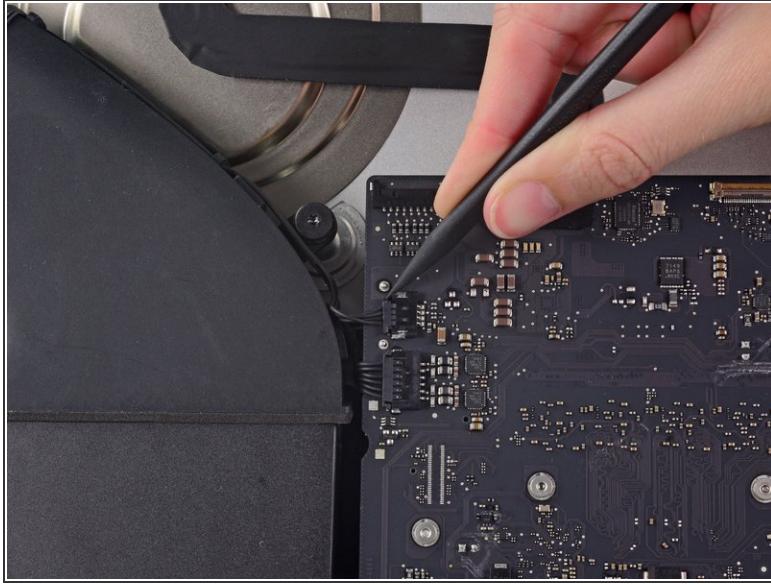


- Use the tip of a spudger to push the fan cable connector out of its socket on the logic board.
- It is recommended to carefully push on both sides of the connector to *walk* it out of its socket.

Step 2

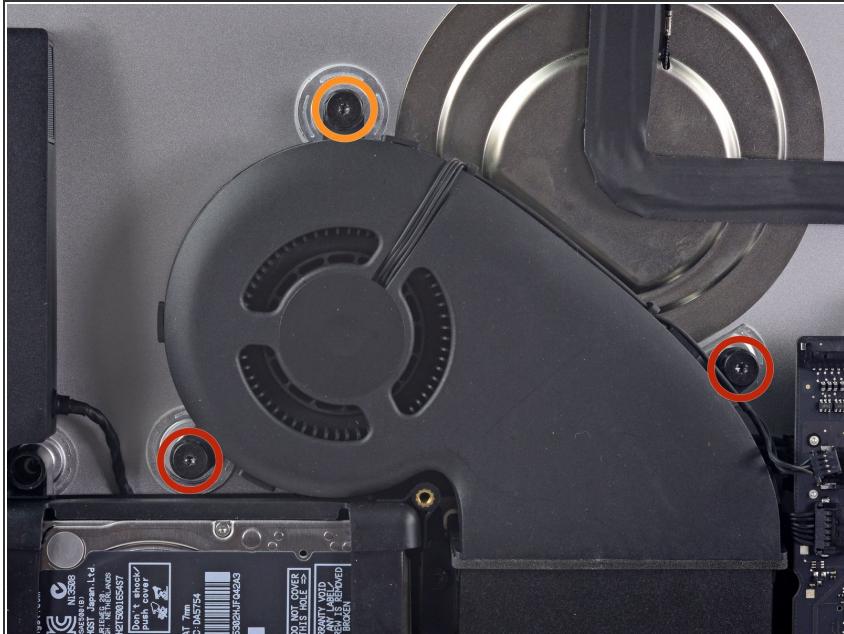

- Remove the following screws securing the fan to the rear enclosure:
 - Two 12.5 mm T10 screws
 - One 9.9 mm T10 screw

Step 3

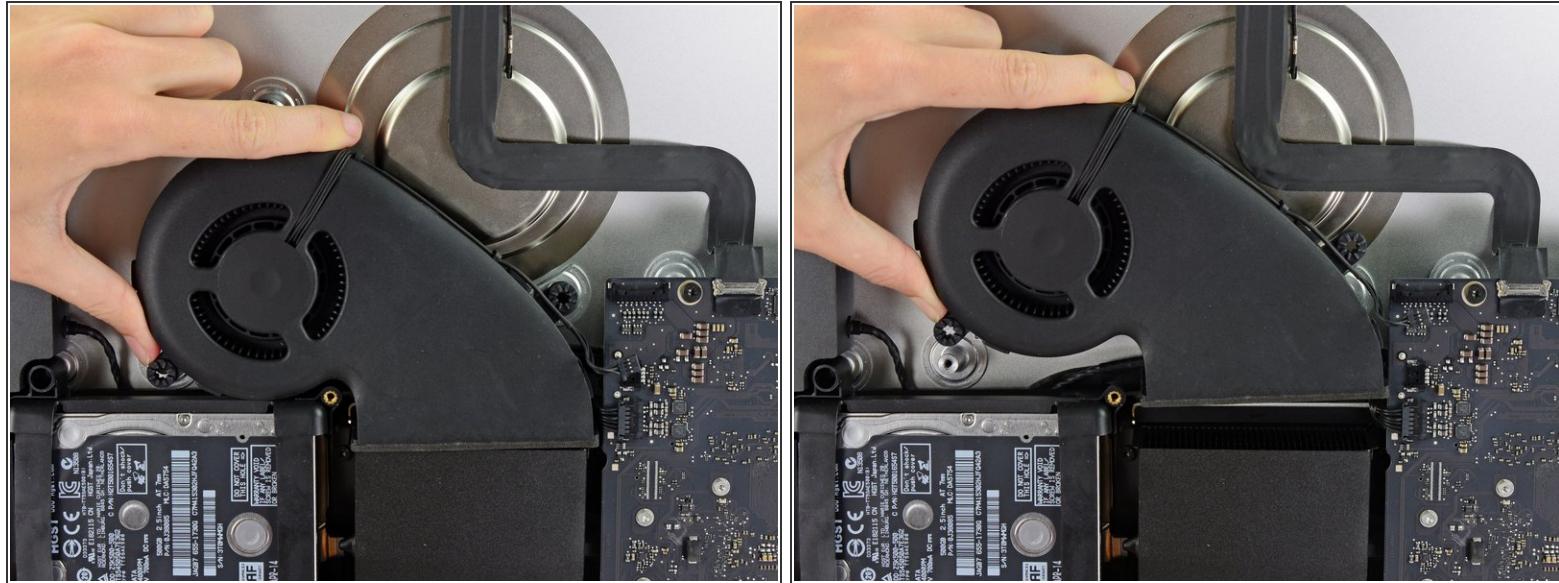

- Lift and remove the fan from the iMac.

To reassemble your device, follow these instructions in reverse order.