



# iMac Intel 21.5" EMC 2805 Hard Drive Tray Replacement

Prereq for removing the hard drive.

Written By: Walter Galan




## INTRODUCTION

Prereq for removing the hard drive.

### TOOLS:


- T10 Torx Screwdriver (1)

## Step 1 — Hard Drive Tray

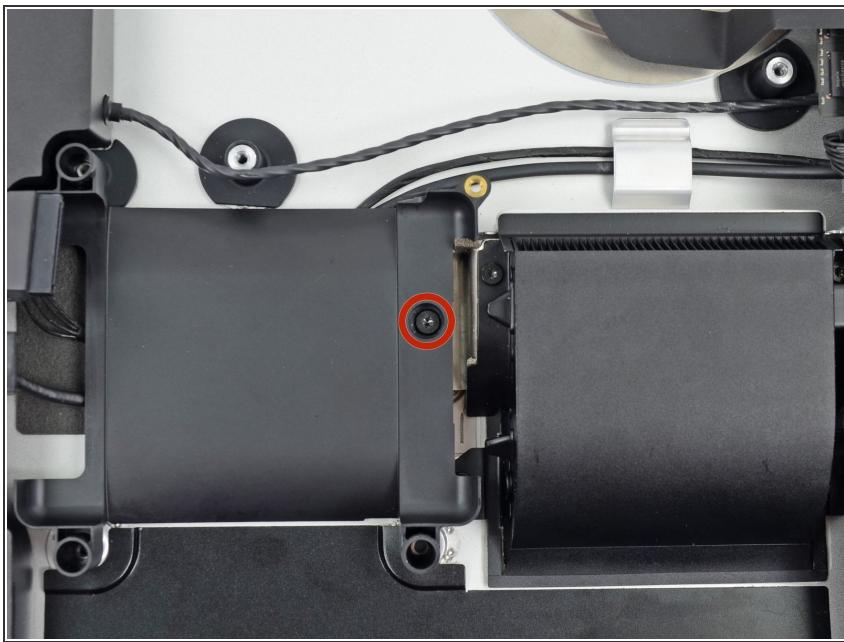

- Remove the single 7.2 mm T10 screw securing the hard drive tray to the rear enclosure.

## Step 2

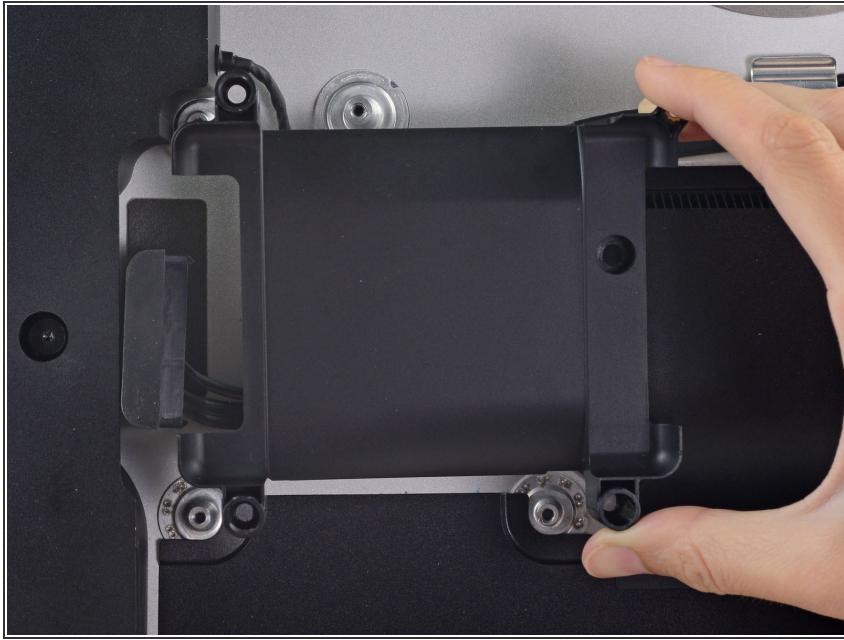

- Remove the hard drive tray from the rear enclosure.

To reassemble your device, follow these instructions in reverse order.