




iPad 2 GSM Headphone Jack Assembly Replacement

Prerequisite only.

Written By: Walter Galan

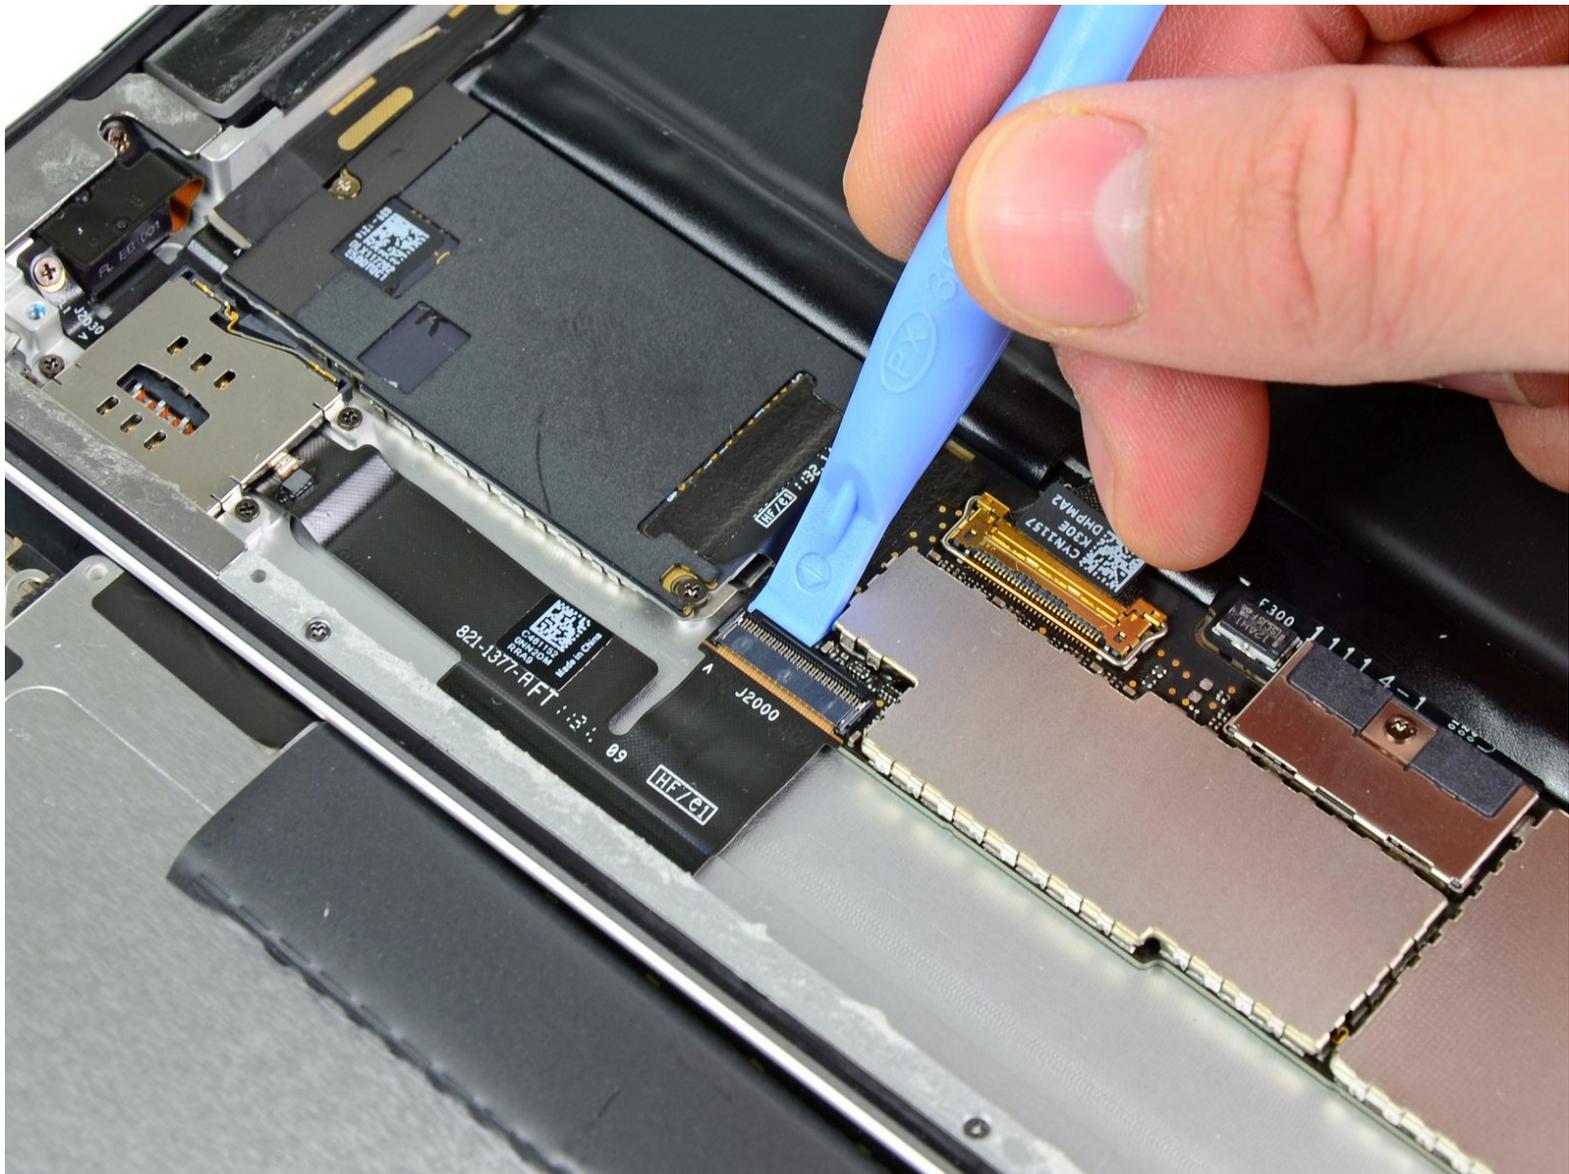


INTRODUCTION

Prerequisite only.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Headphone Jack Assembly

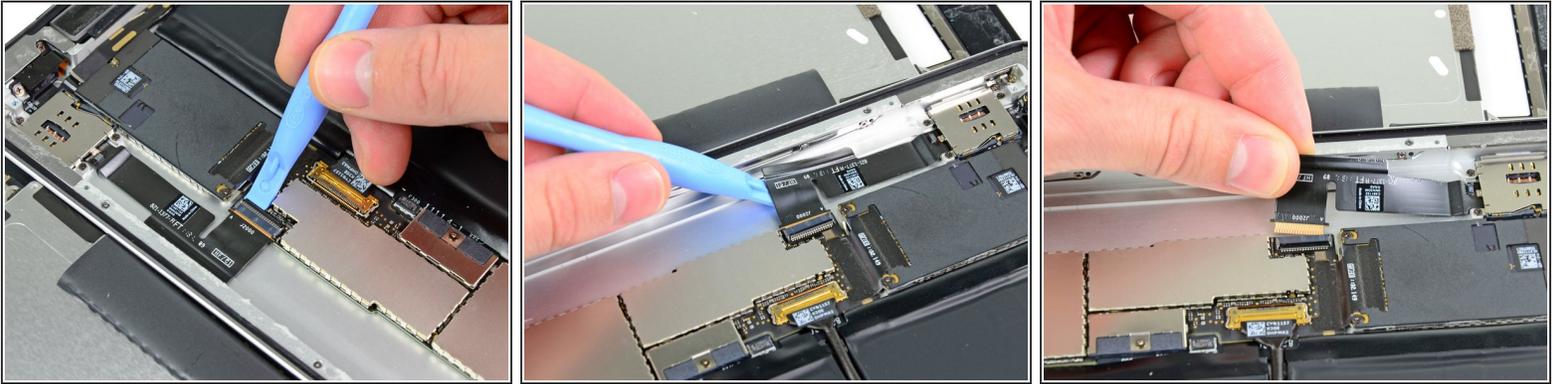


- Use the flat end of a plastic opening tool to flip up the retaining flap on the headphone jack and front-facing camera ribbon cable ZIF socket.

⚠ Be sure you are prying up on the hinged retaining flap, **not** the socket itself.


- Run a plastic opening tool underneath the headphone jack and front-facing camera cable to free it from the adhesive attaching the cable to the rear panel.
- Pull the headphone jack and front-facing camera ribbon cable straight out of its socket on the logic board.

Step 2

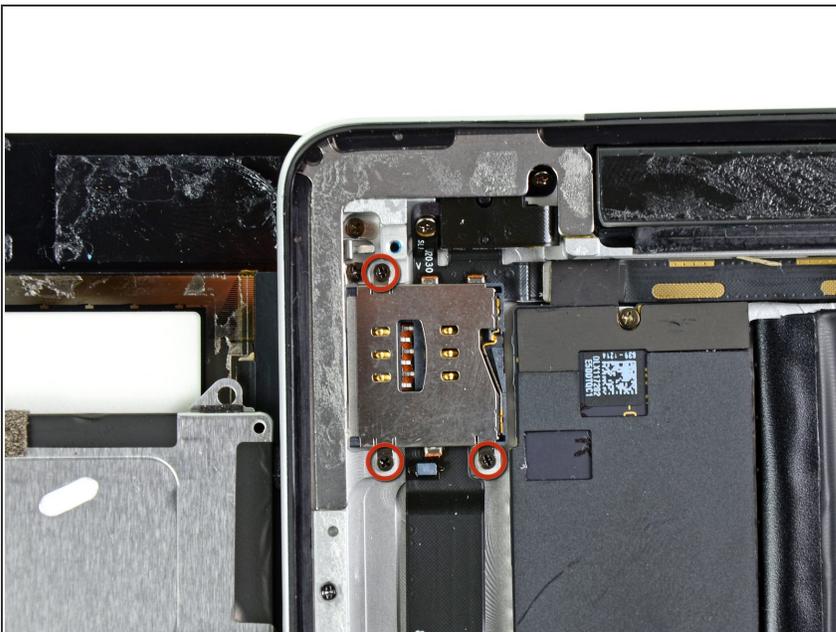

- Remove the three 2 mm Phillips screws securing the SIM slot to the rear panel.

Step 3

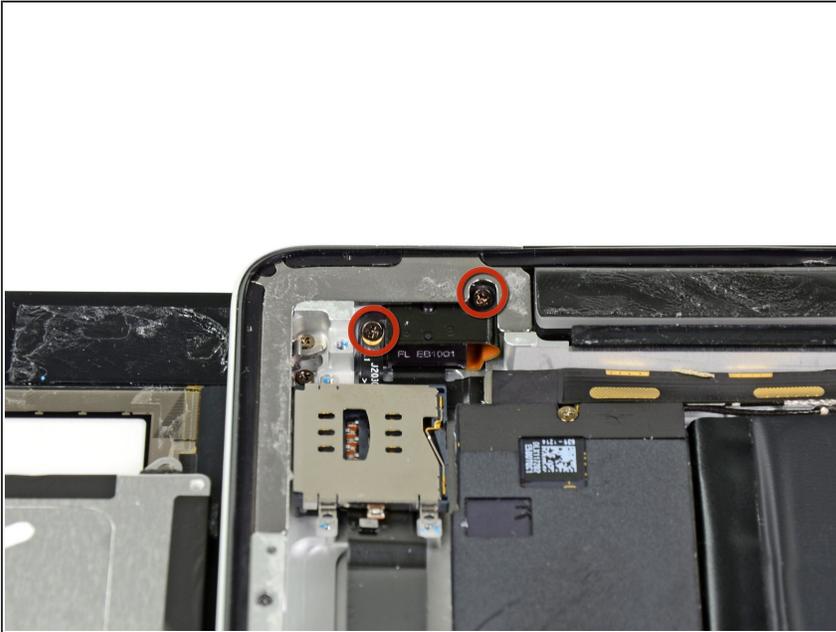

- Remove the two 2.9 mm Phillips screws securing the headphone jack to the rear panel.

Step 4





- Use a plastic opening tool to help pull the headphone jack away from its recess in the top edge of the iPad.
- ⚠ Don't try to remove the assembly just yet.

Step 5




- Carefully peel the front camera and microphone cables off the rear panel.

Step 6

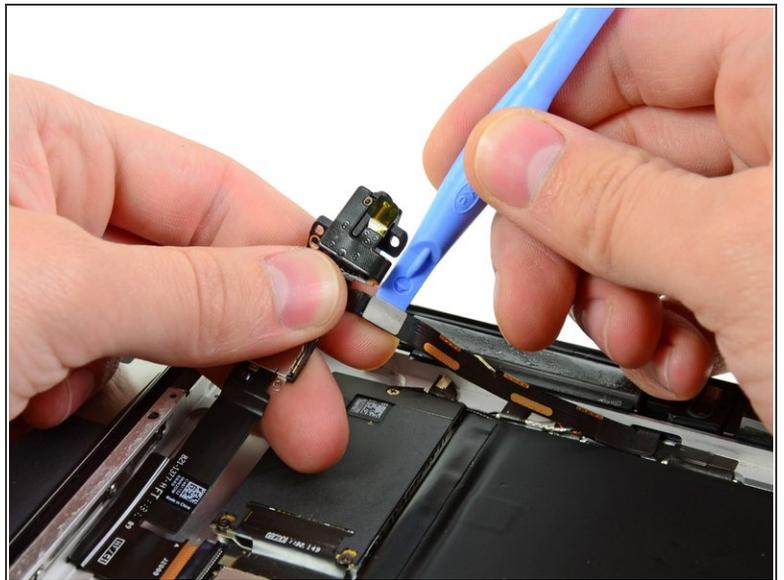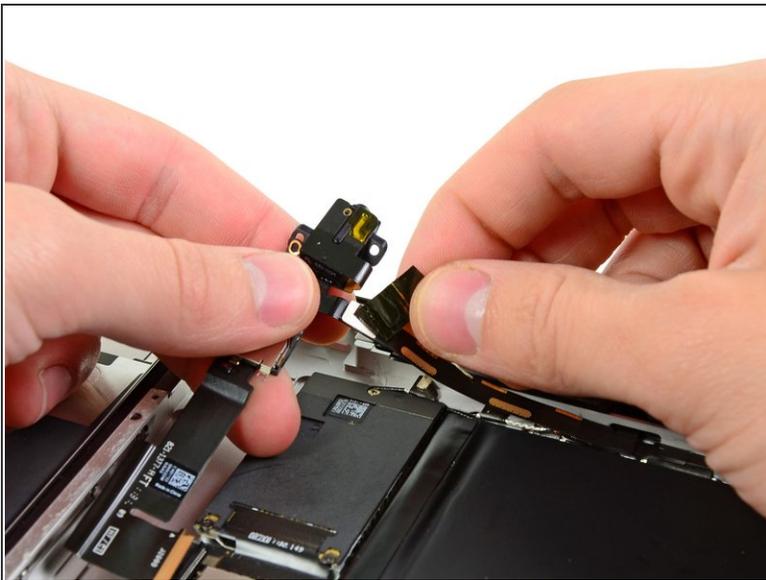

- Carefully remove the strip of tape covering the front camera cable connector.
- Use the edge of a plastic opening tool to disconnect the front camera cable from the headphone jack cable.

Step 7

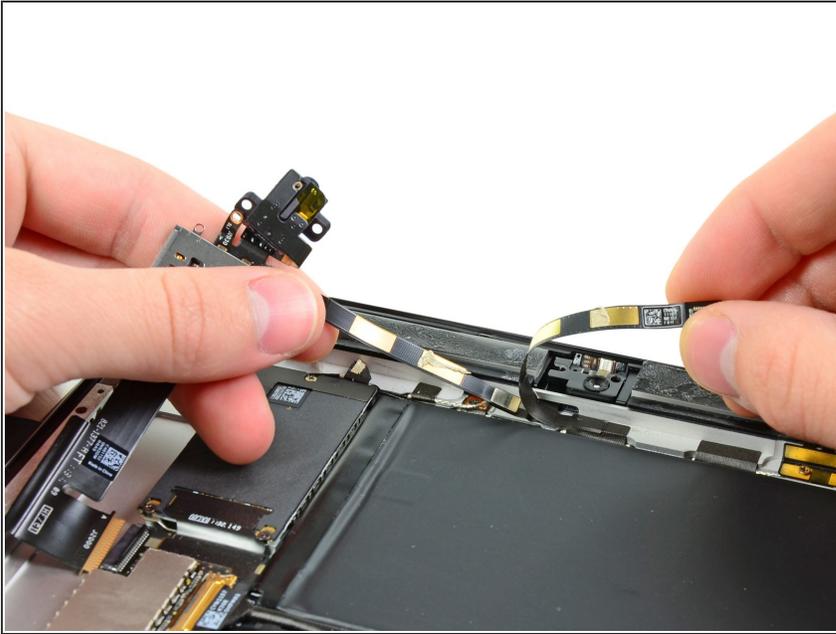

- Carefully peel the front camera cable off the bottom ribbon cable attached to the headphone jack.

To reassemble your device, follow these instructions in reverse order.