



iPad 3G Headphone Jack/Microphone Assembly Replacement

Replace a broken headphone jack or microphone on your iPad 3G.

Written By: Andrew Bookholt



INTRODUCTION

Use this guide to replace the microphone/headphone jack as an assembly.

TOOLS:

- [Metal Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [T5 Torx Screwdriver \(1\)](#)

PARTS:

- [iPad Headphone Jack/Microphone Assembly \(1\)](#)
- [iPad Display Clip Set \(1\)](#)


Step 1 — Display Assembly



- If your display glass is cracked, keep further breakage contained and prevent bodily harm during your repair by taping the glass.
- Lay overlapping strips of clear packing tape over the iPad's display until the whole face is covered.
 - ⓘ This will keep glass shards contained and provide structural integrity when prying and lifting the display.
- Do your best to follow the rest of the guide as described. However, once the glass is broken, it will likely continue to crack as you work, and you may need to use a metal prying tool to scoop the glass out.

 Wear safety glasses to protect your eyes, and be careful not to damage the LCD screen.

Step 2

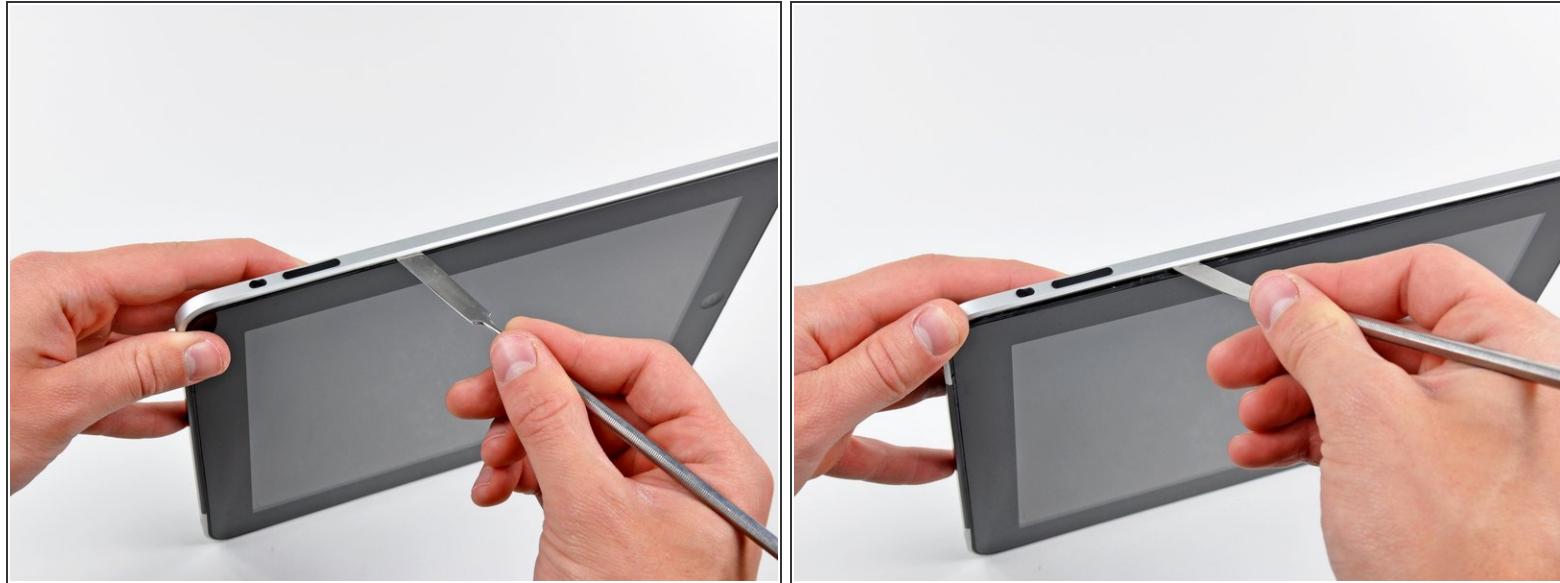

(i) The iPad shown in the photos may look slightly different from your iPad, but the procedure is the same.

- Insert a metal spudger between the right edge of the display assembly and the rear panel assembly.
- Rotate the spudger away from you to release the tabs along the top edge of the display.

Step 3



- Insert a second metal spudger between the top edge of the display assembly and the rear panel assembly to keep the tabs from snapping back into place.
- Pry the display assembly away from the rear panel.

Step 4



- Continue prying the display assembly away from the rear panel along the bottom and left edges of the iPad.

⚠ Use extreme caution as you approach the top edge of the iPad. The digitizer ribbon cable is located near the edge of the rear panel and can easily be damaged.

Step 5



- Lift the display assembly away from the rear panel assembly by its bottom edge.


⚠ Do not excessively lift the display assembly off the rest of the iPad, as a fragile antenna cable with very little slack still connects the two components.

Step 6



- Use the flat end of a spudger to pry the antenna connector closest to the bottom of the iPad up off its socket on the communications board.

Step 7

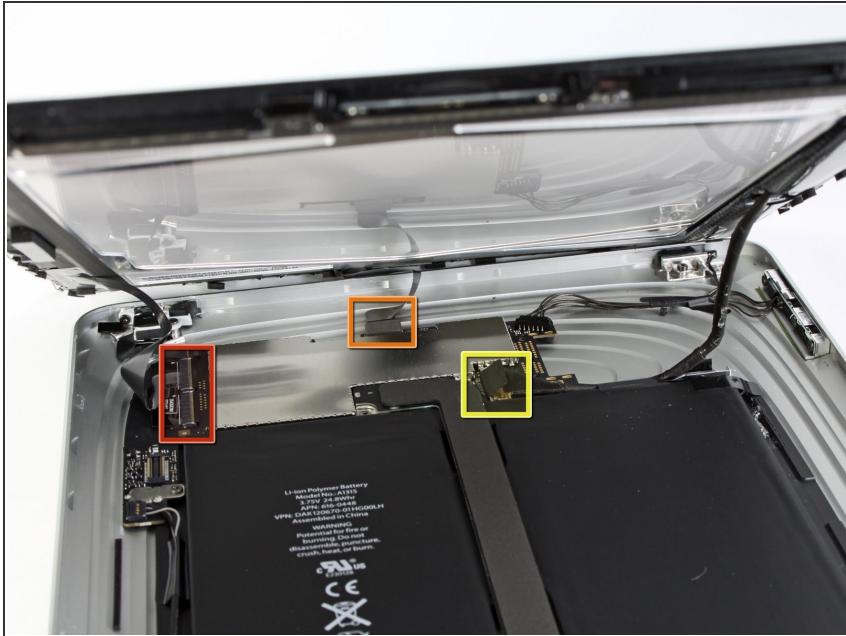

- In the following steps, you will disconnect the three cables attaching the display assembly to the logic board. The cables are for the following components:
 - Digitizer
 - Ambient Light Sensor
 - Display Data Cable

Step 8



- Use the edge of an iPod opening tool to flip up the retaining flaps holding the digitizer ribbon cables in their sockets on the logic board.

 Be sure you are flipping up the retaining flap, **not** the socket itself.



- Pull the digitizer ribbon cables straight out of their sockets.

Step 9



- Use an iPod opening tool to remove the ambient light sensor connector from its socket by gently prying upward.

Step 10

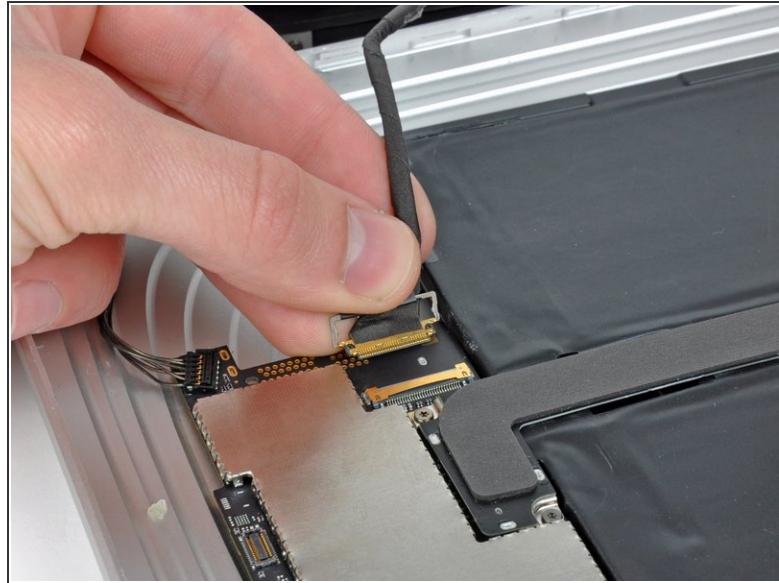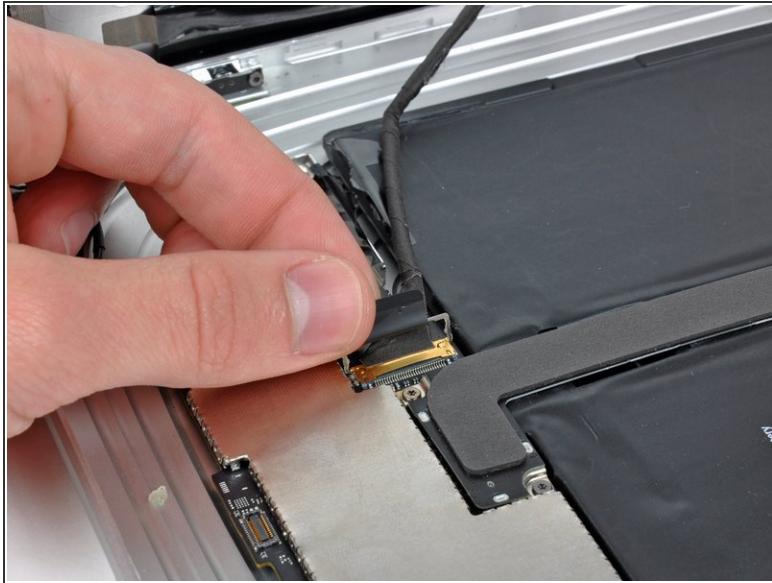


- Disconnect the display data cable from the main board by flipping up the metal retainer by its black plastic pull tab.
- Pull the cable connector away from its socket.

i Pull the connector parallel to the face of the logic board.

This document was generated on 2019-09-24 10:12:43 AM (MST).

Step 11

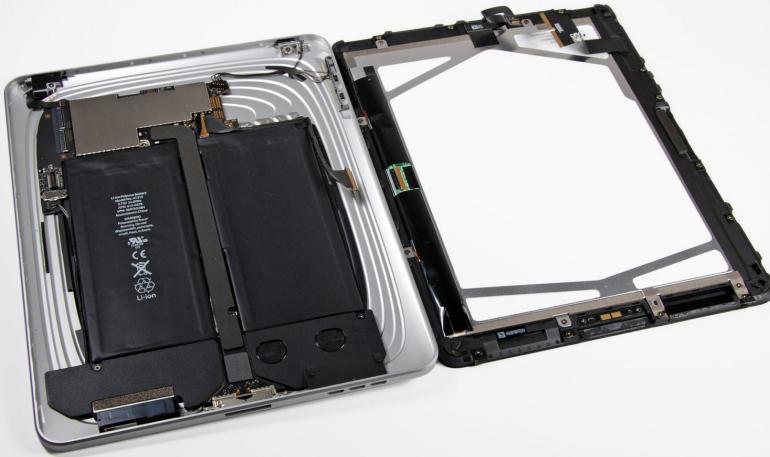

- Remove the display assembly from the rear panel assembly.


Step 12 — Headphone Jack/Microphone Assembly



- Use the edge of an iPod opening tool or your fingernail to flip up the ZIF cable retaining flap on the headphone jack socket.

 Be sure you pry up on the cable retaining flap, **not** the socket itself.

Step 13

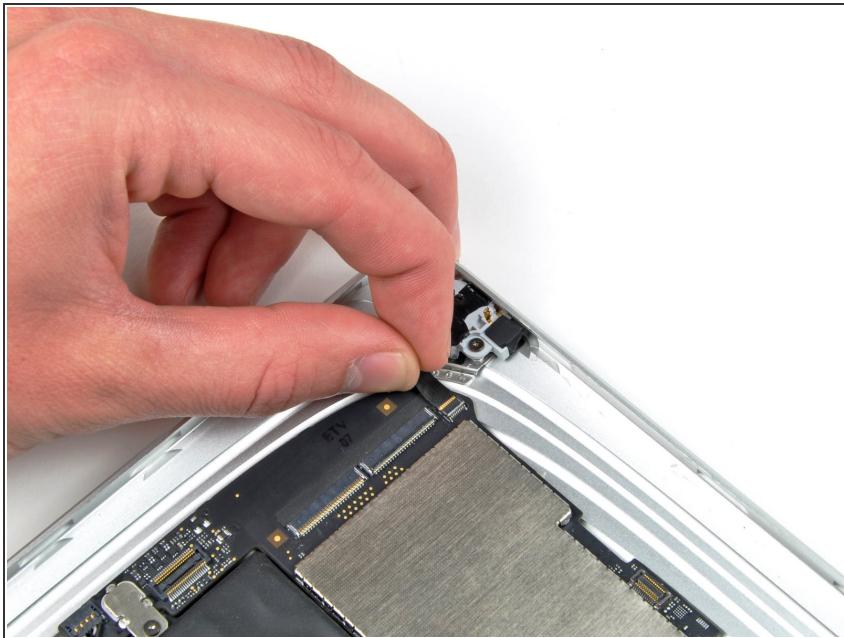

- Carefully pull the headphone jack cable out of its socket on the logic board.

Step 14



- Remove the two 2.8 mm T5 Torx screws securing the headphone jack to the rear case.

Step 15



- Remove the headphone jack from the rear case.

- *(i)* Make sure you transfer the rubber sound channel from your old microphone to the new microphone.

-  Before reinstalling the screws, be sure the headphone jack is properly seated in the headphone jack hole cut into the top edge of the rear case.

To reassemble your device, follow these instructions in reverse order.