



iPad 4 Wi-Fi Headphone Jack Assembly Replacement

Internal prereq.

Written By: Walter Galan



INTRODUCTION

Internal prereq.

TOOLS:

- Spudger (1)
- Tweezers (1)
- Phillips #0 Screwdriver (1)
- Phillips #00 Screwdriver (1)

Step 1 — Headphone Jack Assembly



- Carefully move, but **do not remove** the front-facing camera ribbon cable aside with the flat edge of a spudger.

Step 2



- Peel back and remove the adhesive tape covering the headphone jack assembly.

Step 3



- Using the tip of the spudger, flip up the retaining flap on the microphone cable ZIF connector.

Step 4



- Insert the tip of the spudger underneath the microphone ribbon cable and carefully push it out from its socket on the ZIF connector.
- Use the flat edge of a spudger to move the microphone ribbon cable aside.

Step 5




- Flip up the retaining flap securing the volume/power button ribbon cable connector to the headphone jack assembly board.

Step 6



- Push the volume button ribbon cable from its ZIF connector.
- Gently bend the volume button ribbon cable upwards to move it aside.

Step 7

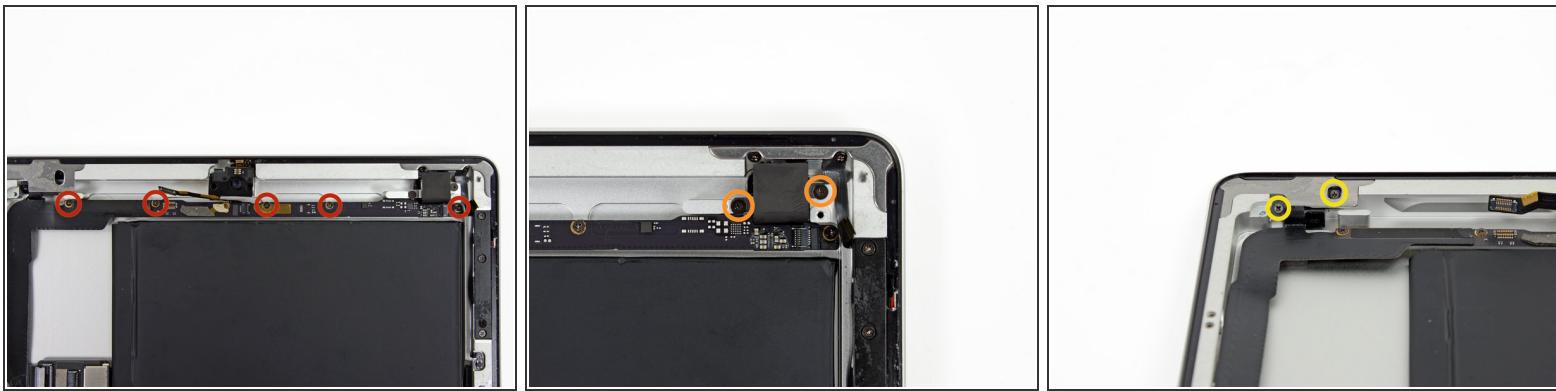

- Remove the following screws from the headphone jack assembly:
 - Five 2.6 mm Phillips #0
 - Two 2.2 mm Wide Head Phillips #00
 - Two 2.6 mm Phillips #00

(i) These screws are angled into the aluminum frame. Be sure to hold the screwdriver so that the screwdriver is in line with the screw, to avoid stripping the screw.

Step 8



- Holding onto the ribbon cable of the headphone jack assembly, carefully pull the assembly upwards towards the top of the device.

Step 9



- Grasping the headphone jack assembly with one hand, pull the assembly from the iPad, minding any cables that may get caught.

To reassemble your device, follow these instructions in reverse order.