



# iPhone 6 Plus Logic Board Assembly Replacement

Prereq only.

Written By: Walter Galan



# INTRODUCTION

Prereq only.

## TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [Tweezers](#) (1)

## Step 1 — Logic Board Assembly




- Remove the single 2.8 mm Phillips #00 screw securing the plastic clip to the logic board.

## Step 2



- Remove the single 1.3 mm Phillips #00 screw recessed against the top of the rear case.

## Step 3

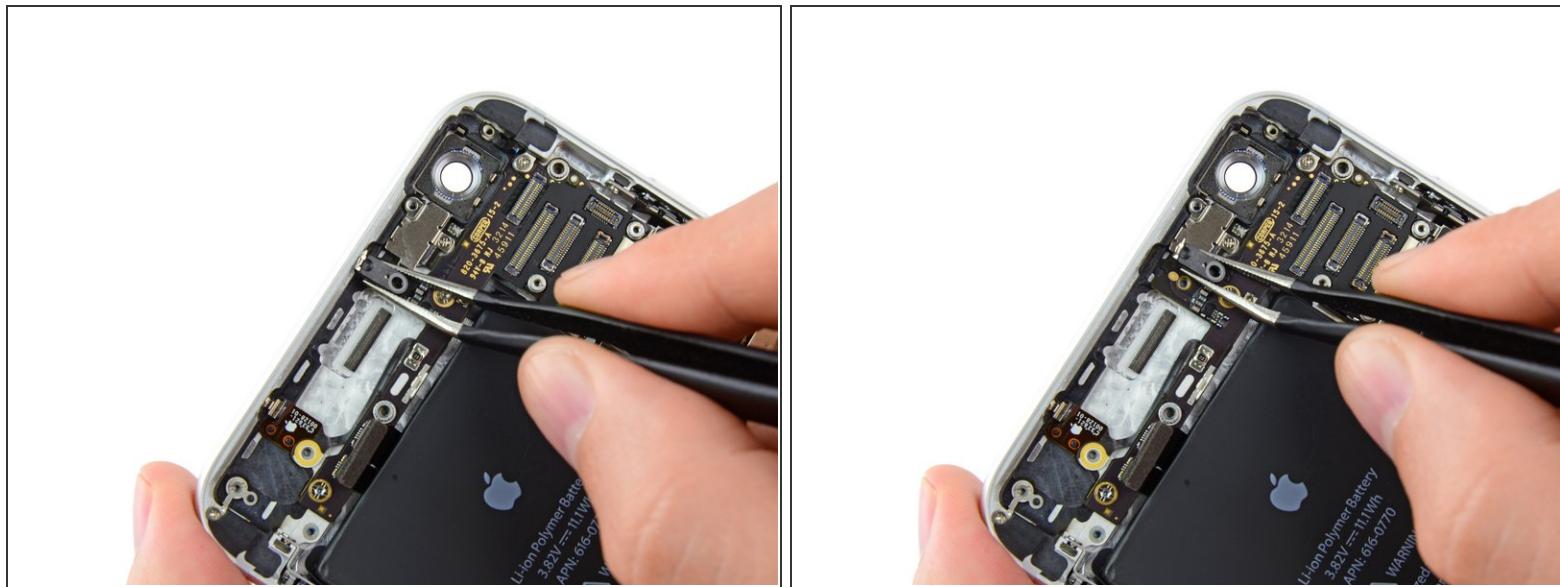

- Use a pair of tweezers to firmly grasp the plastic clip and remove it from the iPhone.

## Step 4



- Remove the single 1.6 mm Phillips #00 screw securing the antenna clip to the rear case.

## Step 5



- Carefully grasp the antenna clip with a pair of tweezers and remove it from the iPhone.

To reassemble your device, follow these instructions in reverse order.