

**L MULTIPLEX TERMINAL
LMX-2 (L60A/L120A)
TRANSMITTING CIRCUITS
SUPERGROUP MODULATOR
LOSS TESTS**

PURPOSE OF TESTS


- (a) To measure and, if necessary, adjust the loss of each supergroup modulator circuit
- (b) To determine that each supergroup modulator circuit meets its passband requirements.

REASON FOR REISSUE

To differentiate between 92-kHz and 104.08-kHz pilot operation. Arrows are used to indicate significant changes. *Equipment Test Lists are not affected.*

SYNOPSIS (SEE FIG. 1)

Only one supergroup modulator circuit is required in each L60A multiplex terminal while two are required in each L120A multiplex terminal. Any of ten supergroups (1 through 10) may be selected.

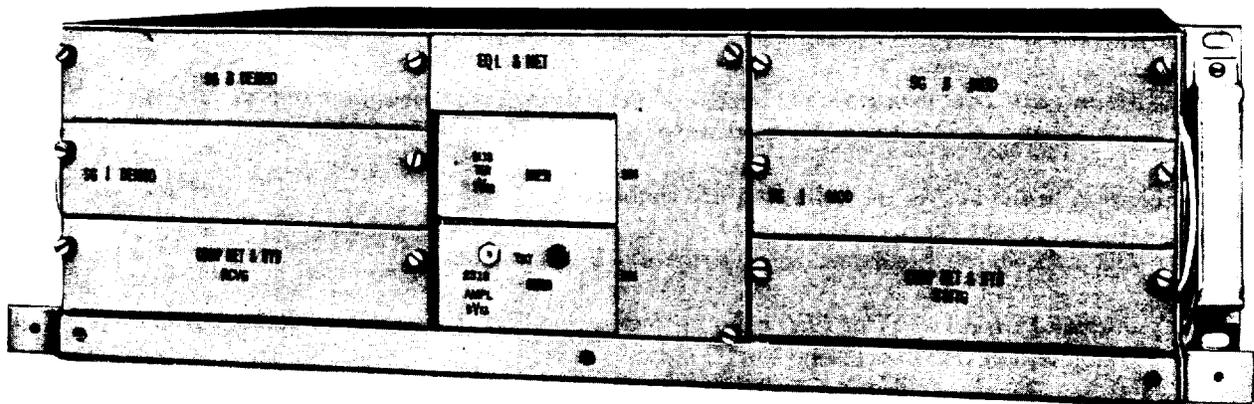

♦ Fig. 1—Supergroup Modem Panel ♦

SYNOPSIS (Cont)

Each supergroup modulator:

- (a) Accepts the 312- to 552-kHz supergroup frequency band, at a level of -25 dBm, from the output of either a group bank or a supergroup connector
- (b) Translates this band into its proper frequency allocation for transmission to a distant terminal.

The translated output of the supergroup modulator circuit is combined with the output of the second supergroup modulator circuit, *when used*, and is delivered to the supergroup bank output jacks at -43.4 dBm. Thus, a loss of 18.4 dB exists between the SG MOD IN jacks and the SG BK OUT jacks.

Note: Supergroups 1 and 3 of earlier manufacture, *when used*, require amplification to maintain the correct loss.

CHART	PAGE
1—92-KHZ Group Pilot Operation	3
2—104.08-KHZ Group Pilot Operation	5

APPARATUS:

◆The tests in this section require suitable transmission test equipment. Refer to Section 356-010-500 and select, from available equipment, sending and receiving units having the following capabilities:

Sending test equipment capable of delivering, into 75-ohm circuits, signals between 300 kHz and 600 kHz at a level of -25 dBm


Receiving test equipment capable of detecting, from 75-ohm circuits, signals between 60 kHz and 2788 kHz at levels between -43.4 dBm and -73.4 dBm.

In addition to the above, the following are required:

Out-of-Service Transmitting Group Bank (Chart 2 only)

J58858AT (58AT) Pilot Filter Set for measuring SG2 if the selected receiving test equipment is other than the 49A TMS (Chart 2 only)

P2BJ Cords, as required◆

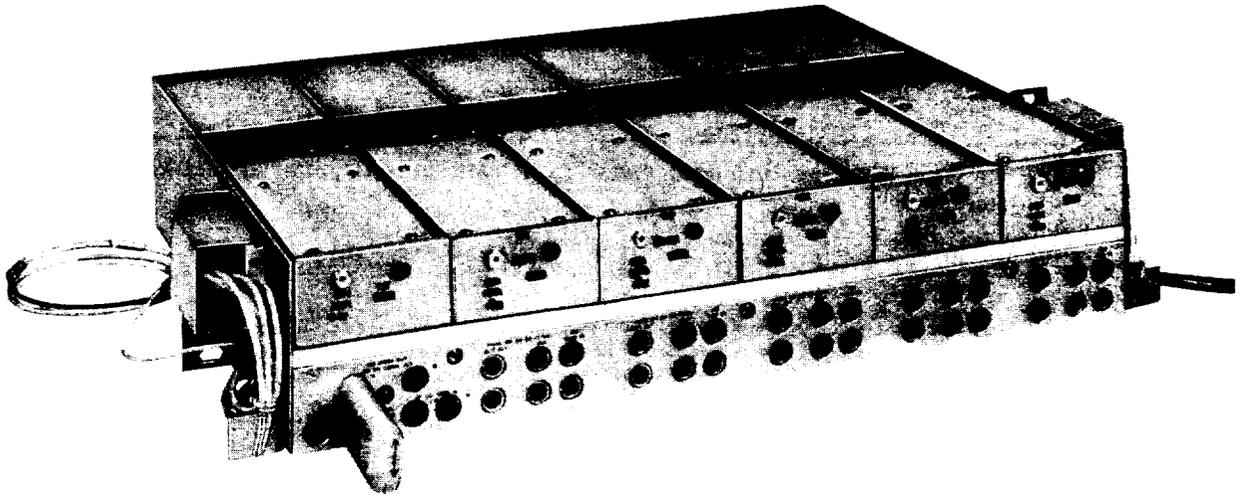

◆ Fig. 2—Transmitting Group Bank Shelf Assembly ◆

CHART 1

92-KHZ GROUP PILOT OPERATION

STEP	PROCEDURE																																																											
	<p>LOSS TEST</p>																																																											
1	Verify that the equipment to be tested is out of service.																																																											
2	Prepare the RTE (receiving test equipment) for a 75-ohm terminated measurement of the translated 421-kHz test signal at -43.4 dBm for the supergroup being tested.																																																											
	<p><i>Note:</i> All translated test frequencies are listed in Table A.</p>																																																											
	<p>◆ TABLE A ◆</p>																																																											
	<table border="1"> <thead> <tr> <th colspan="6" data-bbox="509 1436 1312 1486">FREQUENCY TRANSLATION (SUPERGROUP MODULATORS)</th> </tr> <tr> <th data-bbox="509 1486 646 1549" rowspan="2">INPUT TEST FREQUENCY (KHZ)</th> <th colspan="5" data-bbox="646 1486 1312 1516">OUTPUT TEST FREQUENCY (KHZ) FOR SUPERGROUPS 1 THROUGH 10</th> </tr> <tr> <th data-bbox="646 1516 792 1549">1</th> <th data-bbox="792 1516 938 1549">2</th> <th data-bbox="938 1516 1084 1549">3</th> <th data-bbox="1084 1516 1230 1549">4</th> <th data-bbox="1230 1516 1312 1549">5</th> </tr> </thead> <tbody> <tr> <td data-bbox="509 1549 646 1591">313</td> <td data-bbox="646 1549 792 1591">299</td> <td data-bbox="792 1549 938 1591">313</td> <td data-bbox="938 1549 1084 1591">803</td> <td data-bbox="1084 1549 1230 1591">1051</td> <td data-bbox="1230 1549 1312 1591">1299</td> </tr> <tr> <td data-bbox="509 1591 646 1633">421</td> <td data-bbox="646 1591 792 1633">191</td> <td data-bbox="792 1591 938 1633">421</td> <td data-bbox="938 1591 1084 1633">695</td> <td data-bbox="1084 1591 1230 1633">943</td> <td data-bbox="1230 1591 1312 1633">1191</td> </tr> <tr> <td data-bbox="509 1633 646 1675">549</td> <td data-bbox="646 1633 792 1675">63</td> <td data-bbox="792 1633 938 1675">549</td> <td data-bbox="938 1633 1084 1675">567</td> <td data-bbox="1084 1633 1230 1675">815</td> <td data-bbox="1230 1633 1312 1675">1063</td> </tr> <tr> <td data-bbox="509 1675 646 1717"></td> <td data-bbox="646 1675 792 1717">6</td> <td data-bbox="792 1675 938 1717">7</td> <td data-bbox="938 1675 1084 1717">8</td> <td data-bbox="1084 1675 1230 1717">9</td> <td data-bbox="1230 1675 1312 1717">10</td> </tr> <tr> <td data-bbox="509 1717 646 1759">313</td> <td data-bbox="646 1717 792 1759">1547</td> <td data-bbox="792 1717 938 1759">1795</td> <td data-bbox="938 1717 1084 1759">2043</td> <td data-bbox="1084 1717 1230 1759">2173</td> <td data-bbox="1230 1717 1312 1759">2787</td> </tr> <tr> <td data-bbox="509 1759 646 1801">421</td> <td data-bbox="646 1759 792 1801">1439</td> <td data-bbox="792 1759 938 1801">1687</td> <td data-bbox="938 1759 1084 1801">1935</td> <td data-bbox="1084 1759 1230 1801">2281</td> <td data-bbox="1230 1759 1312 1801">2679</td> </tr> <tr> <td data-bbox="509 1801 646 1829">549</td> <td data-bbox="646 1801 792 1829">1311</td> <td data-bbox="792 1801 938 1829">1559</td> <td data-bbox="938 1801 1084 1829">1807</td> <td data-bbox="1084 1801 1230 1829">2409</td> <td data-bbox="1230 1801 1312 1829">2551</td> </tr> </tbody> </table>	FREQUENCY TRANSLATION (SUPERGROUP MODULATORS)						INPUT TEST FREQUENCY (KHZ)	OUTPUT TEST FREQUENCY (KHZ) FOR SUPERGROUPS 1 THROUGH 10					1	2	3	4	5	313	299	313	803	1051	1299	421	191	421	695	943	1191	549	63	549	567	815	1063		6	7	8	9	10	313	1547	1795	2043	2173	2787	421	1439	1687	1935	2281	2679	549	1311	1559	1807	2409	2551
FREQUENCY TRANSLATION (SUPERGROUP MODULATORS)																																																												
INPUT TEST FREQUENCY (KHZ)	OUTPUT TEST FREQUENCY (KHZ) FOR SUPERGROUPS 1 THROUGH 10																																																											
	1	2	3	4	5																																																							
313	299	313	803	1051	1299																																																							
421	191	421	695	943	1191																																																							
549	63	549	567	815	1063																																																							
	6	7	8	9	10																																																							
313	1547	1795	2043	2173	2787																																																							
421	1439	1687	1935	2281	2679																																																							
549	1311	1559	1807	2409	2551																																																							

CHART 1 (Cont)

STEP	PROCEDURE
3	Prepare the STE (sending test equipment) to deliver, into 75 ohms, a 421-kHz test signal at -25 dBm.
4	Connect the STE to the SG MOD IN jack [patch (1), Fig. 3].
	<p style="text-align: center;">◆ Fig. 3—Test Connections—92-KHZ Group Pilot Operation ◆</p>
5	Connect the RTE to the SG BK OUT A jack [patch (2), Fig. 3].
6	Measure and record the level of the translated 421-kHz signal. Requirement: -43.4 dBm ± 0.05 dB.
7	If the requirement of Step 6 is met, proceed to Step 8. If it is not met, adjust the SG PAD control (see Fig. 2) on the associated group bank shelf to meet the requirement.
	PASSBAND TEST
8	Adjust the STE to deliver 313 kHz at -25 dBm.
9	Adjust the RTE to measure the translated 313-kHz signal.
10	Measure the level of the translated 313-kHz signal. Requirement: Between $+1.0$ dB and -0.2 dB of the value recorded in Step 6.
11	Adjust the STE to deliver 549 kHz at -25 dBm.
12	Adjust the RTE to measure the translated 549-kHz signal.

CHART 1 (Cont)	
STEP	PROCEDURE
13	<p>Measure the level of the translated 549-kHz signal.</p> <p>Requirement: Between +1.0 dB and -0.2 dB of the value recorded in Step 6.</p>
14	If the requirements of Steps 6, 10, and 13 are met, proceed to Step 16. If any of the requirements are not met, trouble is indicated.
15	<p>Locate and clear the trouble and repeat Steps 6 through 14.</p> <p>Note: The associated SG MBF or COMP NET may be defective.</p>
16	Repeat Steps 1 through 14 for each supergroup modulator circuit to be tested.
17	Remove patches (1) and (2) and restore service to normal.
CHART 2	
104.08-KHZ GROUP PILOT OPERATION	
STEP	PROCEDURE
	INPUT PILOT LEVEL CHECK
1	Select an out-of-service transmitting group bank.
2	Prepare the RTE (receiving test equipment) for a 75-ohm terminated measurement of 315.92 kHz at -45 dBm (-55 dBm if the 58AT pilot filter set is used).
3	Make patch (1) in Fig. 4.
4	<p>Measure the level of the 315.92-kHz pilot.</p> <p>Requirement: -45 dBm \pm0.05 dB. -55 dBm \pm0.05 dB if the 58AT pilot filter set is used.</p>
5	If the requirement of Step 4 is met, proceed to Step 6. If it is not met, perform out-of-service tests on the group bank as prescribed in Section 356-281-503.
6	Remove patch (1) in Fig. 4.
	LOSS TEST
7	Connect the out-of-service transmitting group bank to the SG MOD IN jack [patch (2), Fig. 4].

CHART 2 (Cont)

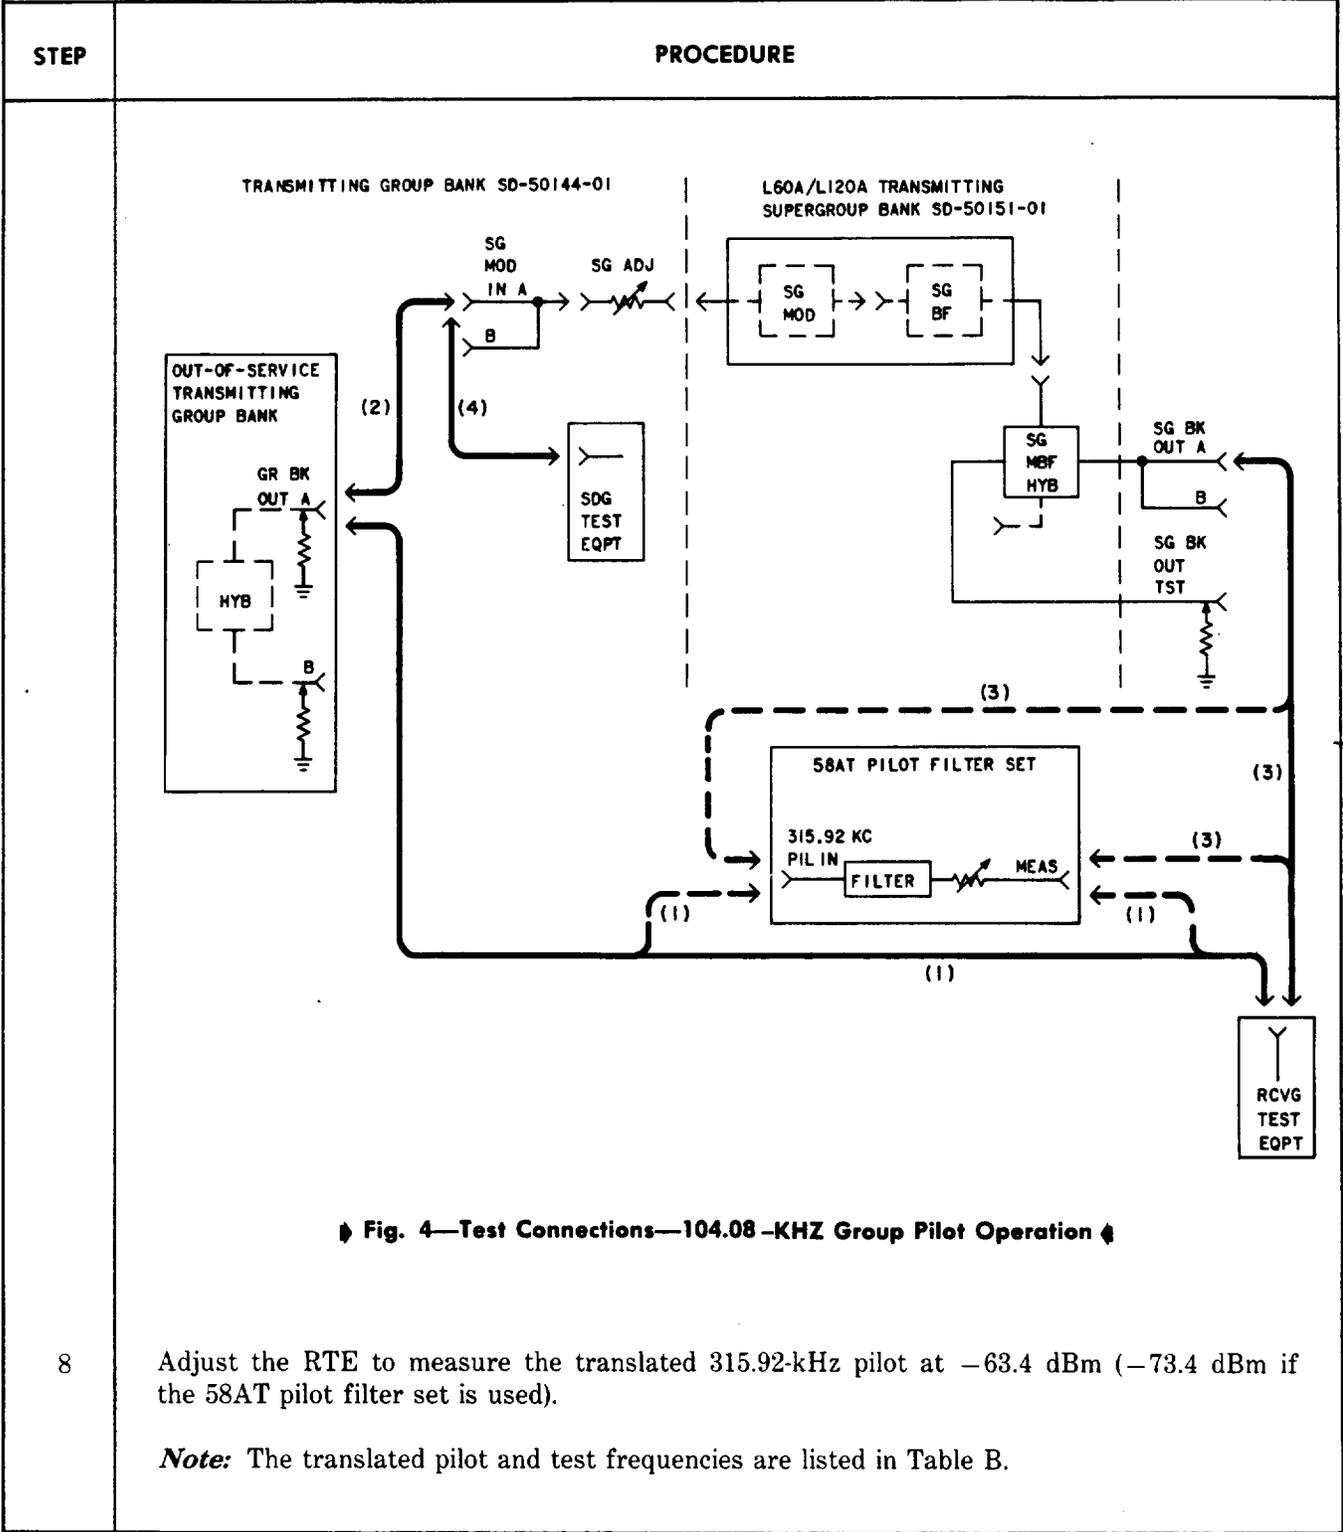


CHART 2 (Cont)

STEP	PROCEDURE																																																											
<p>◆ TABLE B ◆</p>																																																												
<table border="1"> <thead> <tr> <th colspan="6" data-bbox="529 474 1330 520">FREQUENCY TRANSLATION (SUPERGROUP MODULATORS)</th> </tr> <tr> <th data-bbox="529 520 662 590" rowspan="2">INPUT FREQUENCY (KHZ)</th> <th colspan="5" data-bbox="662 520 1330 552">OUTPUT TEST FREQUENCY (KHZ) FOR SUPERGROUPS 1 THROUGH 10</th> </tr> <tr> <th data-bbox="662 552 808 590">1</th> <th data-bbox="808 552 943 590">2</th> <th data-bbox="943 552 1081 590">3</th> <th data-bbox="1081 552 1219 590">4</th> <th data-bbox="1219 552 1330 590">5</th> </tr> </thead> <tbody> <tr> <td data-bbox="529 590 662 630">315.92 (PIL)</td> <td data-bbox="662 590 808 630">296.08</td> <td data-bbox="808 590 943 630">315.92*</td> <td data-bbox="943 590 1081 630">800.08</td> <td data-bbox="1081 590 1219 630">1048.08</td> <td data-bbox="1219 590 1330 630">1296.08</td> </tr> <tr> <td data-bbox="529 630 662 669">433 (TST)</td> <td data-bbox="662 630 808 669">179</td> <td data-bbox="808 630 943 669">433</td> <td data-bbox="943 630 1081 669">683</td> <td data-bbox="1081 630 1219 669">931</td> <td data-bbox="1219 630 1330 669">1179</td> </tr> <tr> <td data-bbox="529 669 662 709">549 (TST)</td> <td data-bbox="662 669 808 709">63</td> <td data-bbox="808 669 943 709">549</td> <td data-bbox="943 669 1081 709">567</td> <td data-bbox="1081 669 1219 709">815</td> <td data-bbox="1219 669 1330 709">1063</td> </tr> <tr> <td></td> <td data-bbox="662 709 808 749">6</td> <td data-bbox="808 709 943 749">7</td> <td data-bbox="943 709 1081 749">8</td> <td data-bbox="1081 709 1219 749">9</td> <td data-bbox="1219 709 1330 749">10</td> </tr> <tr> <td data-bbox="529 749 662 789">315.92 (PIL)</td> <td data-bbox="662 749 808 789">1544.08</td> <td data-bbox="808 749 943 789">1792.08</td> <td data-bbox="943 749 1081 789">2040.08</td> <td data-bbox="1081 749 1219 789">2175.92</td> <td data-bbox="1219 749 1330 789">2784.08</td> </tr> <tr> <td data-bbox="529 789 662 829">433 (TST)</td> <td data-bbox="662 789 808 829">1427</td> <td data-bbox="808 789 943 829">1675</td> <td data-bbox="943 789 1081 829">1923</td> <td data-bbox="1081 789 1219 829">2293</td> <td data-bbox="1219 789 1330 829">2667</td> </tr> <tr> <td data-bbox="529 829 662 869">549 (TST)</td> <td data-bbox="662 829 808 869">1311</td> <td data-bbox="808 829 943 869">1559</td> <td data-bbox="943 829 1081 869">1807</td> <td data-bbox="1081 829 1219 869">2409</td> <td data-bbox="1219 829 1330 869">2551</td> </tr> </tbody> </table> <p data-bbox="529 869 1330 966">* The 58AT Pilot Filter Set must be used when measuring SG2 if the selected receiving test equipment is other than the 49A TMS.</p>		FREQUENCY TRANSLATION (SUPERGROUP MODULATORS)						INPUT FREQUENCY (KHZ)	OUTPUT TEST FREQUENCY (KHZ) FOR SUPERGROUPS 1 THROUGH 10					1	2	3	4	5	315.92 (PIL)	296.08	315.92*	800.08	1048.08	1296.08	433 (TST)	179	433	683	931	1179	549 (TST)	63	549	567	815	1063		6	7	8	9	10	315.92 (PIL)	1544.08	1792.08	2040.08	2175.92	2784.08	433 (TST)	1427	1675	1923	2293	2667	549 (TST)	1311	1559	1807	2409	2551
FREQUENCY TRANSLATION (SUPERGROUP MODULATORS)																																																												
INPUT FREQUENCY (KHZ)	OUTPUT TEST FREQUENCY (KHZ) FOR SUPERGROUPS 1 THROUGH 10																																																											
	1	2	3	4	5																																																							
315.92 (PIL)	296.08	315.92*	800.08	1048.08	1296.08																																																							
433 (TST)	179	433	683	931	1179																																																							
549 (TST)	63	549	567	815	1063																																																							
	6	7	8	9	10																																																							
315.92 (PIL)	1544.08	1792.08	2040.08	2175.92	2784.08																																																							
433 (TST)	1427	1675	1923	2293	2667																																																							
549 (TST)	1311	1559	1807	2409	2551																																																							
9	Connect the RTE to the SG BK OUT A jack [patch (3), Fig. 4].																																																											
10	Measure the level of the translated 315.92-kHz pilot. Requirement: $-63.4 \text{ dBm} \pm 0.05 \text{ dB}$. $-73.4 \text{ dBm} \pm 0.05 \text{ dB}$ if the 58AT pilot filter set is used.																																																											
11	If the requirement of Step 10 is met, proceed to Step 12. If it is not met, adjust the SG PAD control (see Fig. 2) on the associated group bank shelf to meet the requirement. PASSBAND TEST																																																											
12	Adjust the STE (sending test equipment) to deliver, into 75-ohms, a 433-kHz signal at -25 dBm .																																																											
13	Adjust the RTE to measure the translated 433-kHz signal.																																																											
14	Remove patch (2) in Fig. 4 and the 58AT pilot filter set if used.																																																											
15	Make patch (4) in Fig. 4.																																																											
16	Measure and record the translated 433-kHz signal. Requirement: ◆ -42.4 dBm to -44.1 dBm (-43.4 dBm is nominal).◆																																																											
17	Adjust the STE to deliver 549 kHz.																																																											

CHART 2 (Cont)

STEP	PROCEDURE
18	Adjust the RTE to measure the translated 549-kHz signal.
19	Measure the translated 549-kHz signal. Requirement: ♦ Within -1.0 dB to $+0.7$ dB of the value recorded in Step 16.♦
20	If the requirement of Steps 10, 16, and 19 are met, proceed to Step 22. If any of the requirements cannot be met, trouble is indicated.
21	Locate and clear the trouble and repeat Steps 10 through 20. Note: The associated SG MBF or COMP NET may be defective.
22	Repeat Steps 7 through 20 for each supergroup modulator circuit to be tested.
23	Remove patches (3) and (4) and restore service to normal.