



SLC[®]-2000 MSDT

BYB2 T1/DSX Line Interface Unit— SAC1MB0 (BYB2)

Features/Functions

- Conforms to appropriate industry standards
- Accepts up to 33.5 dB of loss
- B8ZS or ZCS line coding
- Faceplate Jacks for monitoring T1 span current and voltage
- Meets TR-1089* standards for lightning and AC power crosses

* Bellcore Technical Reference TR-NWT-001089 Issue 1, October 1991, and all Revision and Supplements, "Electromagnetic Compatibility and Electrical Safety Generic Criteria for Network Telecommunications Equipment," Bell Communications Research.

Description

This data sheet describes the BYB2 T1/DSX line interface unit (LIU) (COMCODE 106848682, BYB2) and is intended for the end-user of the unit. The BYB2 T1/DSX LIU replaces the BYB1B optical unit (OU). The BYB2 T1/DSX line interface unit is used in SLC-2000 multi-services distant terminal (MSDT) to interface either a DSX or T1 signal. The BYB2 T1/DSX LIU can be used in place of the SLC Series 5 Carrier System BYB1B optical unit in those applications where the user interfaces to a DSX or T1 metallic facility from the remote terminal (RT) to the MSDT. This data sheet is being revised to update this specification.



CAUTION:

Under no circumstances should the signal lines be run to outside plant cables or equipment when the BYB2 is optioned for the DSX mode. The DSX mode of operation is intended for inside plant applications only.

The BYB2 T1/DSX line interface unit can be used in a DSX mode of operation. In this mode, the BYB2 LIU interfaces to a standard DSX-1 signal whose line length is within 655 feet (200 meters) of the DSX cross-connect point. This mode is typically used to connect a MSDT to DSX compatible equipment co-located in the same cabinet or in the central office (CO).

The BYB2 T1/DSX LIU can also be placed in the T1 mode of operation. This T1 mode is used in those applications in which an outside plant T1 span is used to connect the RT to the MSDT. In this mode the T1 interface is configured as a power looping line interface unit. This mode is commonly used to terminate a repeater span that is powered from the central office.

The front panel jacks are provided to facilitate measurement of the T1 span voltage and current. The T1 section also contains a transmit attenuator pad to compensate for various lengths of cable.

Figure 1 shows the faceplate diagram for the BYB2 T1/DSX line interface unit and switch layout. Table 1 lists the environmental specifications. Table 2 lists the power drain requirements. Table 3 lists the BYB2 T1/DSX LIU (T1 mode) transmit pad settings versus inserted loss. Table 4 lists the BYB2 T1/DSX LIU (DSX mode) equalization option settings and Table 5 lists the edge connections for the BYB2 T1/DSX LIU.

Table 1. Environmental Specifications

<p>A. Temperature Range (Ambient)</p> <ol style="list-style-type: none"> 1. Operating, per TR-NWT-000057*: in Lucent Technologies cabinet mounted RT, outside ambient temperatures of -40° F with no solar load to +115° F with maximum solar load and maximum power dissipation. Lucent Technologies cabinets are designed to assure that the components within do not exceed their rated temperatures for the above conditions. 2. Storage, per TR-NWT-000057: ambient temperatures of -40° to 140° F. <p>B. Relative Humidity</p> <ol style="list-style-type: none"> 1. Operating, per TR-NWT-000057. For outside ambient temperature 84° F or less, relative humidity of 5% to 95%. For ambient temperatures above 84° F, the relative humidity is limited to that corresponding to a specific humidity of 0.024 pounds of water per pound of dry air. 2. Storage, per TR-NWT-000057: ambient temperatures 84° F or less, 10% to 95%. For ambient temperatures above 84° F, the relative humidity is limited to that corresponding to a specific humidity of 0.024 pounds of water per pound of dry air.
--

* Bellcore Technical Reference TR-NWT-000057, Issue 2, January 1993, and all Revisions and Supplements, "Functional Criteria For Digital Loop Carrier Systems," Bell Communications Research

Table 2. Power drain for BYB2 LIU

Supply	Maximum Value
+5 Volts dc	750 mW
-5 Volts dc	100 mW

Installation and Testing

There are switches to set on this unit. Procedures for setting the pre-equalization are given in 915-710-115, *SLC Series 5 Carrier System Application Engineering Practice*.

Faceplate Features and Options

The BYB2 T1/DSX line interface unit faceplate and circuit board switch locations are shown in Figure 1. The following jacks are located on the faceplate are as follows:

+ V, - I Jacks: These jacks are used to monitor the T1 loop voltage and current. The voltage is measured between the + V jack and frame ground. The current is measured by measuring the voltage between the + V and - I jacks.

The switch options for the BYB2 T1/DSX line interface unit are as follows:

- **TRANSMIT PAD** option: These four switches S1 / S2 (TRANS- 1, 2, 3, 4) select the amount of loss inserted in the transmit path to meet route-junction and end section requirements. Refer to Table 3 for transmit pad settings versus inserted loss.

Table 3. BYB2 T1/DSX LIU (T1 Mode) — Transmit Pad Settings versus Inserted loss

Transmit (S2/S1) and Receive (S5) Pad Settings versus Inserted loss						
Transmit Pad (S2/S1) Switch Settings				Receive Pad (S5) Switch Settings		Inserted loss (dB)
1	2	3	4	1	2	
OFF	OFF	OFF	ON	-	-	22.5
OFF	OFF	ON	OFF	-	-	15.0
OFF	ON	OFF	OFF	OFF	ON	7.5
ON	OFF	OFF	OFF	ON	OFF	0.0

T1 Mode Setup	
Switches	Settings
S3 / S4	Set to the T1 position
S5	Use B/Z switch to select coding option.
S5	Set receive attenuation level according to Table 3 transmit pad settings.
S2 / S1	Set transmit level according to Table 3 transmit pad settings.

- **T1 / DSX** option: This switch S3 / S4 is used to select either the T1 or the DSX mode of operation. Both switches must be set to the same option.
- **B8ZS/ZCS** option: This switch S5 (B/Z) selects between per-channel zero code suppression (position Z) and the bipolar with 8 zero substitution (position B) line code. This switch is used to set the line code for both the DSX and T1 modes of operation.
- **T1 Receive Pad** option: This switch S5 (RCV- 1, 2) is used to insert loss where the T1 end section is short.
- **EQUALIZATION** option: These three switches S6 (TRANS- 0, 1, 2) select the amount of pre-equalization based on the distance between the bank and the DSX-1 cross-connect. This switch is used to compensate for various cable lengths to the DSX cross-connect when the BYB2B LIU is used in the DSX mode. When the BYB2 LIU is in the T1 mode, logic circuitry disables this switch. Refer to Table 4 for equalization option settings.

Table 4. BYB2 T1/DSX LIU (DSX MODE) — Equalization Option Settings

EQUALIZATION OPTION (S6) SETTINGS			
TRANS-			DISTANCE TO DSX-1*
2	1	0	FEET
OFF	OFF	ON	0 to 132
OFF	ON	OFF	133 to 265
OFF	ON	ON	266 to 398
ON	OFF	OFF	399 to 532
ON	OFF	ON	533 to 655

* These distances are for ABAM cable used in the central office. Refer to 915-710-115 for calculation for other types of cable used for collocated RT and T1 extension applications.

DSX Mode Setup	
Switches	Settings
S3/S4	Set to the DSX position
S5	Use B/Z switch to select coding option.
S6	Set line build out according to Table 4 equalization option settings.

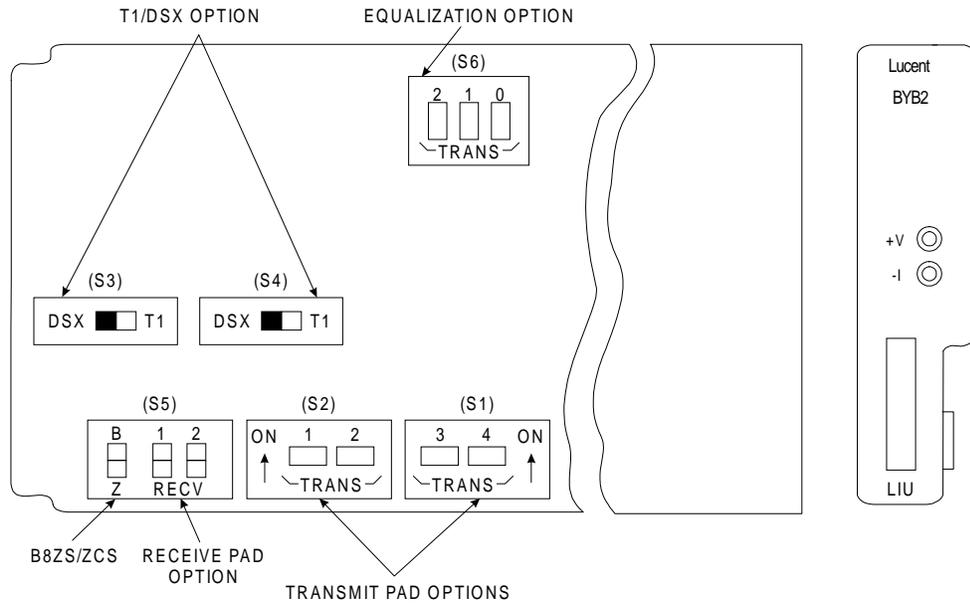


Figure 1. BYB2 LIU Faceplate Diagram and Switch Layout

Table 5. Edge Connections For BYB2 Line Interface Unit

Finger	Function
1	Frame Ground
2, 11	Circuit Ground
3, 10	+5 Volts dc
12	-5 Volts dc
8	R1 (receive)
9	T1 (receive)
17	R (transmit)
18	T (transmit)

References

The following documents provide additional information about the use of this channel unit in the *SLC Series 5 Carrier System*:

363-205-010	<i>SLC Series 5 Carrier System Applications and Planning Guide</i>
915-710-115	<i>SLC Series 5 Carrier System Application Engineering Practice</i>

Technical Assistance

Follow local procedures for obtaining technical assistance. Lucent Technologies also provides in-hours or emergency out-of-hours help for the *SLC Series 5 Carrier System*. Call the Lucent Technologies Regional Technical Assistance Center at 1-800-225-RTAC.

Ordering Information

Additional copies of this document (363-005-284) are available from the Customer Information Center — call 1-888-582-3688.

Comments

Comments about this document can be directed to:

Lucent Technologies
Customer Training and Information Products (CTIP)
Documentation Services
2400 Reynolda Road
Winston-Salem, NC 27106-4606

Copyright Information

Copyright© 1997 Lucent Technologies.
All Rights Reserved.

This material is protected by the copyright laws of the United States and other countries. It may not be reproduced, distributed, or altered in any fashion by any entity including Lucent Technologies business units or divisions without the expressed written consent of the Customer Training and Information Products Organization.

For permission to reproduce or distribute, please call: 1-888-584-6366.