


### SUBSCRIBER SETS

#### RINGER AND RELAY TYPES – NONPOLARIZED RINGING


392L; 531A; 534DE, DF; 584DE, DF; 592A; 687A; 684BT

#### COMMON AND LOCAL BATTERY – CONNECTIONS

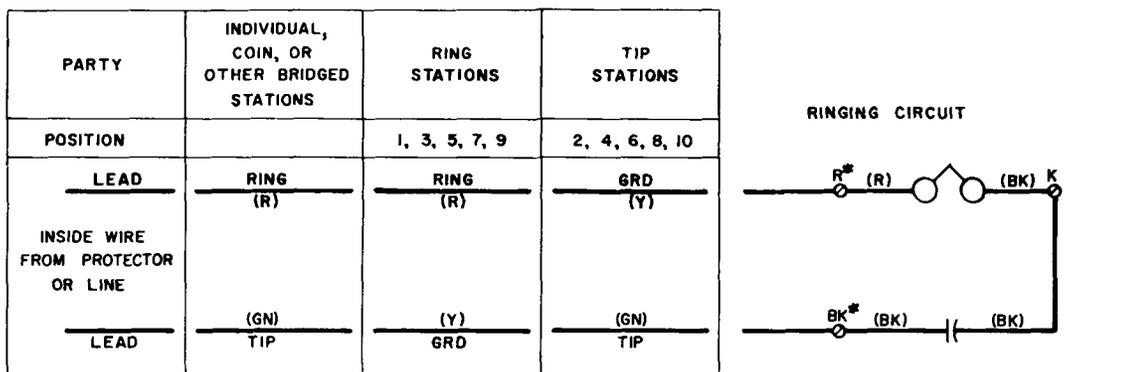

\* THE 392L SUBSCRIBER SET HAS NO TERMINAL DESIGNATIONS.  
THE RED RINGER LEAD INDICATES THE "R" TERMINAL.

**Fig. 1 – 392L and 592A Subscriber Set Connections**

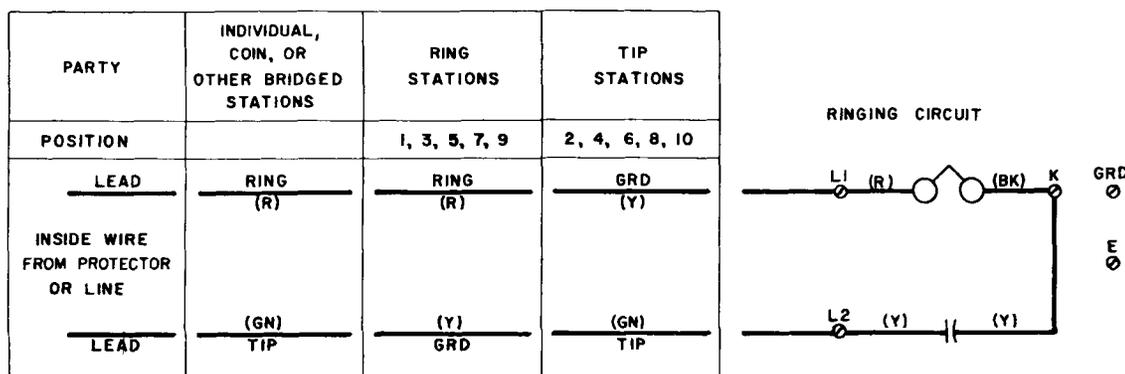

**Fig. 2 – 531A Subscriber Set Connections**

PARTY	INDIVIDUAL, COIN, OR OTHER BRIDGED STATIONS	RING STATIONS	TIP STATIONS
POSITION		1, 3, 5, 7, 9	2, 4, 6, 8, 10
LEAD	RING (R)	RING (R)	GRD (Y)
INSIDE WIRE FROM PROTECTOR OR LINE	(GN)	(Y)	(GN)
LEAD	TIP	GRD	TIP

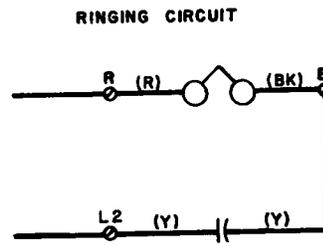


Fig. 3 — 534DE and DF and 584DE and DF Subscriber Set Connections

PARTY	INDIVIDUAL, COIN, OR OTHER BRIDGED STATIONS	RING STATIONS	TIP STATIONS
POSITION		1, 3, 5, 7, 9	2, 4, 6, 8, 10
LEAD	RING (R)	RING (R)	TIP (GN)
INSIDE WIRE FROM PROTECTOR OR LINE	(GN)	(Y)	(Y)
LEAD	TIP	GRD	GRD

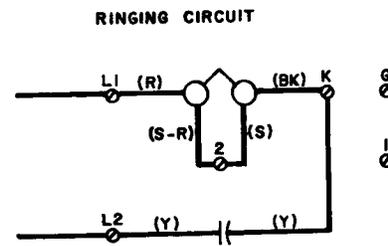


Fig. 4 — 687A Subscriber Set Connections

PARTY	INDIVIDUAL, COIN, OR OTHER BRIDGED STATIONS	RING STATIONS	TIP STATIONS
POSITION		1, 3, 5, 7, 9	2, 4, 6, 8, 10
LEAD	RING (R)	RING (R)	TIP (GN)
INSIDE WIRE FROM PROTECTOR OR LINE	(GN)	(Y)	(Y)
LEAD	TIP	GRD	GRD

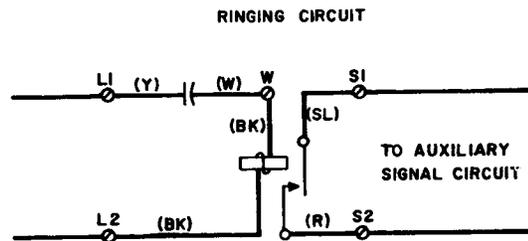


Fig. 5 — 684BT Subscriber Set Connections