

## SERVICE

### 201A, B, C, AND D HAND TELEPHONE SETS

**1. GENERAL**


**1.01** Information in this section was formerly contained in the following sections which are hereby canceled.

● 502-300-400

● 502-301-400

● 502-301-401

**1.02** The 201A, B, C, and D type hand telephone sets are MD.

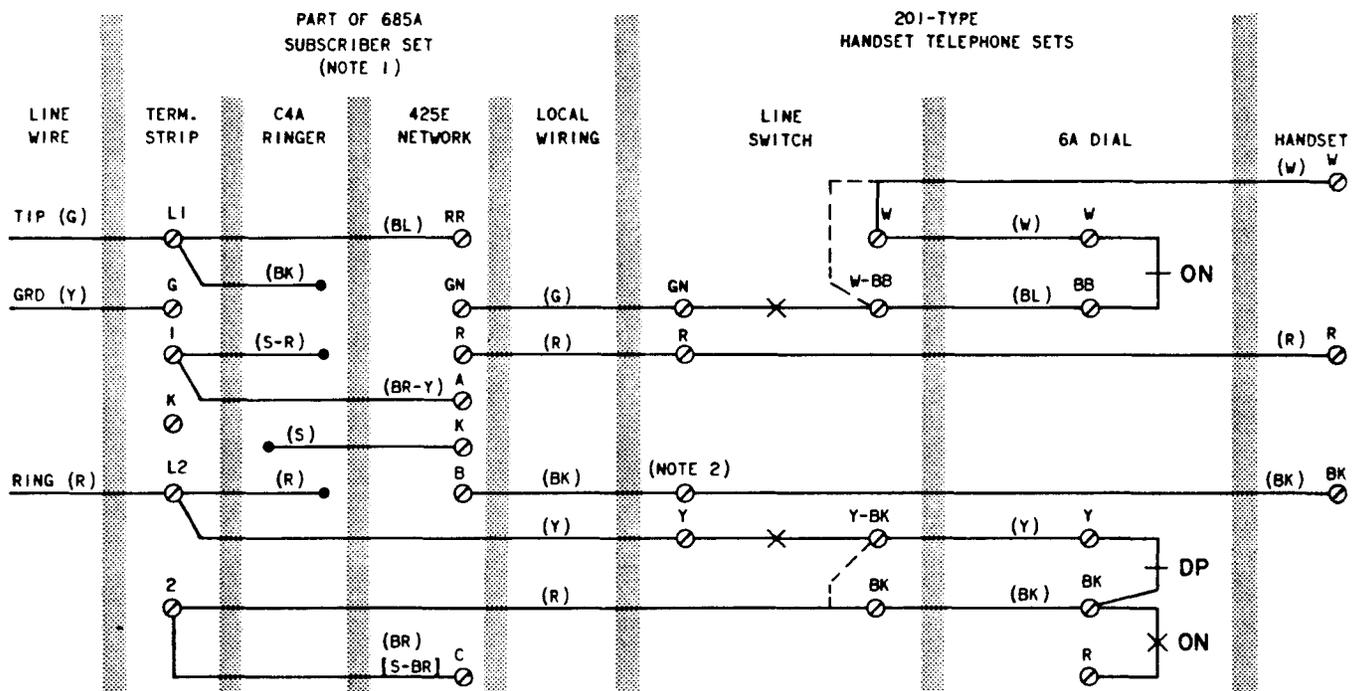

**NOTES:**

1. WIRED FOR INDIVIDUAL SERVICE. REFER TO TABLE A FOR ALL OTHER CLASSES OF SERVICE.
2. USE D-161488 CONNECTOR.
3. DOTTED LINES SHOW MANUAL CONNECTIONS.

ON -OFF-NORMAL  
DP -DIAL PULSE

TPA 551062

**Fig. 1—201-Type Hand Telephone Set Connections Used With 685A Subscriber Set**

**NOTICE**

This document is either  
AT&T - Proprietary, or WESTERN  
ELECTRIC - Proprietary

Pursuant to Judge Greene's Order of August 5, 1983, beginning on January 1, 1984, AT&T will cease to use "Bell" and the Bell symbol, with the exceptions as set forth in that Order. Pursuant thereto, any reference to "BELL" and/or the BELL symbol in this document is hereby deleted and "expunged".

TABLE A

LINE AND RINGER CONNECTIONS 685A OR 686A SUBSET USED WITH 201-TYPE HAND TELEPHONE SET

WIRE OR LEAD	COLOR	TIP PARTY	RING PARTY (Note 1)	NEGATIVE (-) PARTIES	POSITIVE (+) PARTIES
				RING STATION (NOTE 1)	
				1 AND 5	3 AND 7
Ringer Leads (Note 2)	R	L2	L2	G	L2
	BK	G	G	G	L2
	S	K*	K*	A*	A*
	S-R	1	1	K*	K*
426A Tube Leads (3-element-686A only)	BK			K*	K*
	Y			L2	G
	R			G	L2

\*Terminal on 425E network.

Notes:

1. Reverse tip and ring for tip party service.
2. To silence ringer permanently, connect (R) and (BK) ringer leads to K on the terminal strip (Fig. 1).

TABLE B

ASSOCIATED APPARATUS

CLASS OF SERVICE	SUBSCRIBER SET
Individual Lines 2-Party Flat Rate* 2-Party Message Rate (Ring Party Only)* 4-Party Semiselective Multiparty Divided Code Regular PBX Stations 750A and 755A Keyless Stations	685A
4-Party Full Selective 8-Party Semiselective	686A

\*No message rate or tip-party identification can be provided for tip-party station.

TABLE C

61G FILTER CONNECTIONS

FILTER LEADS (See Note)	FILTER LEAD TERMINATIONS
BK	To BK of terminal block
R	To Y-BK mounting terminal
Y	To filter bracket terminal

Note: The 201-type set is arranged for, but not equipped with a 61G filter for radio-frequency suppression. When this filter is required, remove the Y dial lead from the Y-BK mounting contact and connect to the filter bracket terminal. Connect filter per Table C.