


TELEPHONE SETS — 302E, G, 5302G  
COMMON BATTERY — CONNECTIONS

MOUNTING CORD      RINGER BIAL OR BIA      CAPACITOR 195A      INDUCTION COIL 101A      SWITCH ASSEMBLY      DIAL 6A, 5H (302) 6H, 5M (5302)      HAND SET F1, F4, OR G

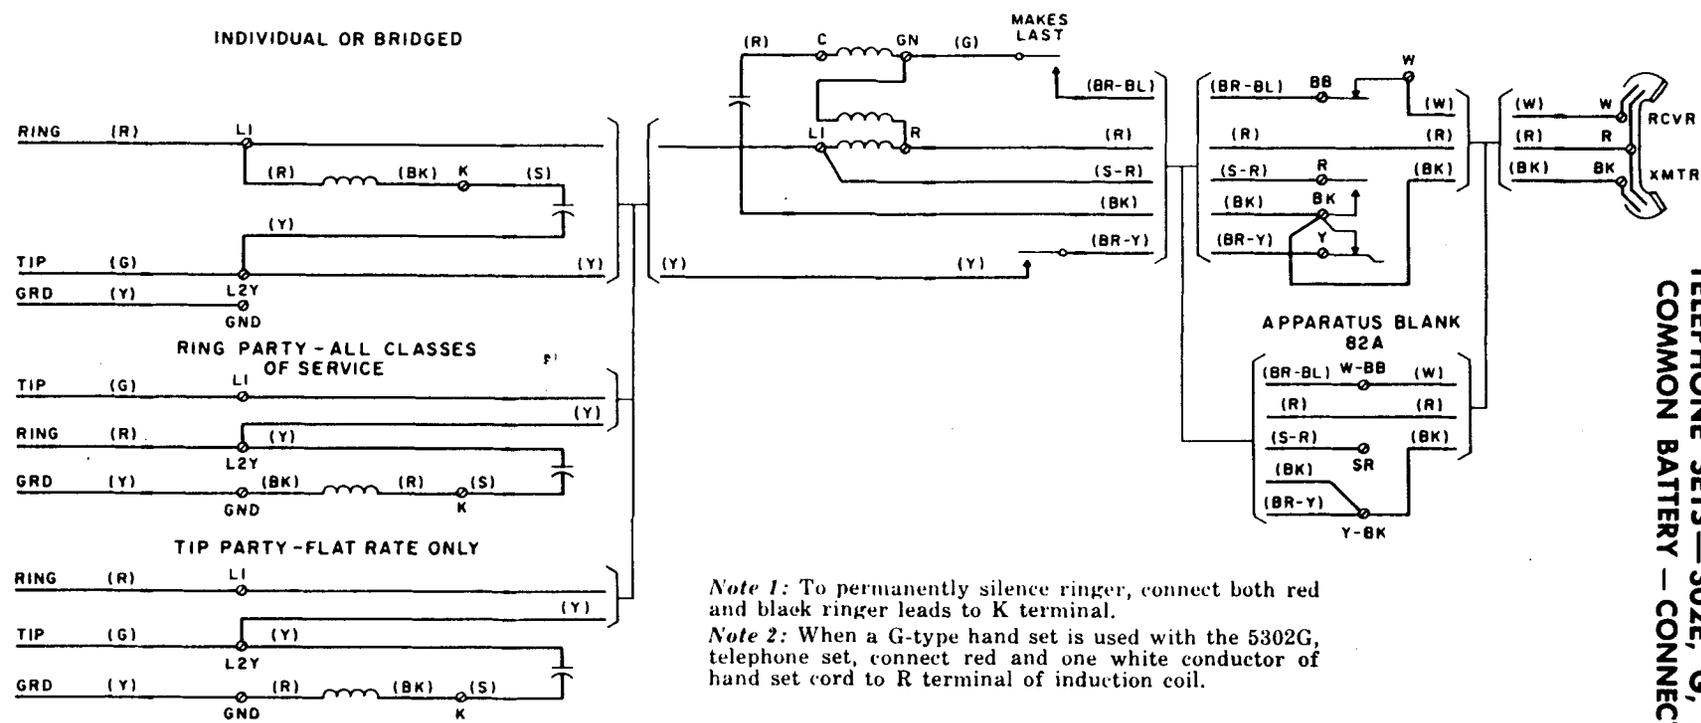

*Note 1:* To permanently silence ringer, connect both red and black ringer leads to K terminal.  
*Note 2:* When a G-type hand set is used with the 5302G, telephone set, connect red and one white conductor of hand set cord to R terminal of induction coil.

TABLE A  
FILTER (OPTIONAL)

Type Filter		Filter Leads	Filter Lead Termination
302G	5302G		
61P or 61L	61S	BK	BK of Dial
		Y	Y of Dial
		R	Filter bracket terminal. Also, disconnect BR-Y lead from Y of dial and reconnect to filter bracket terminal.

TABLE B  
LINE AND RINGER CONNECTIONS

Wire or Lead	Individual or Bridged	Ring Party All Classes of Service	Tip Party Flat Rate
Mounting Cord in Set	R	L1	L1
	G	L2Y	L2Y
	Y	Gnd	Gnd
Ringer Leads	R	L1	Gnd
	BK	K	K
Mounting Cord at Connecting Block	R	R	R
	G	G	G
	Y	Y	Y
Line Wire at Connecting Block	Ring	R	R
	Tip	G	G
	Grd	Y	Y

Fig. 1 — 302 E, G, 5302 G Telephone Sets