

TELEPHONE SETS 1515-TYPE CONNECTIONS

1. GENERAL

(a) This section is reissued to:

- Add Table A
- Add Fig. 2

Since this reissue covers a general revision, arrows ordinarily used to indicate changes have been omitted.

2. CONNECTION INDEX

Table A—Connections for Addition of Polarity Guard

Fig. 1—1515B Telephone Set Connections With 25A3 Dial

Fig. 2—1515B Telephone Set Connections With 25W3 Dial



The following operating instructions should be explained to the customer upon installation of the set.

2.01 If a call is received on one line and it is desired to hold the party while transferring to the other line:

- (1) Lift the hold switch plunger (left switch hook plunger) and operate the line key to pickup the other line.
- (2) When the call on the second line is completed, operate the line key back to the first line position and depress the hold switch plunger.

Note: Failure to depress the hold switch plunger when a held line is reconnected will automatically place a hold on the unused line preventing its use for either incoming or outgoing calls. Reversal of the operating sequence (i.e., depressing the hold switch plunger before operating the line key) will disconnect the held line.

(3) If the second line is to be held for pickup by an extension station, operate the line key back to the first line and leave the hold switch operated (lifted) until the extension is answered. This removes the hold from the first line and places a hold on the second line. When the extension handset is lifted, the hold switch plunger (first set) must be depressed to connect the talking path of the extension.

(4) Replacing the handset automatically releases the hold switch, restoring the circuit to normal.

**TABLE A
CONNECTIONS FOR ADDITION OF
POLARITY GUARD**

LEAD		FROM	TO
Dial	BK	RR	T*
Line Switch	BR	C	S*
Polarity Guard	G W		RR C

* Terminal on polarity guard

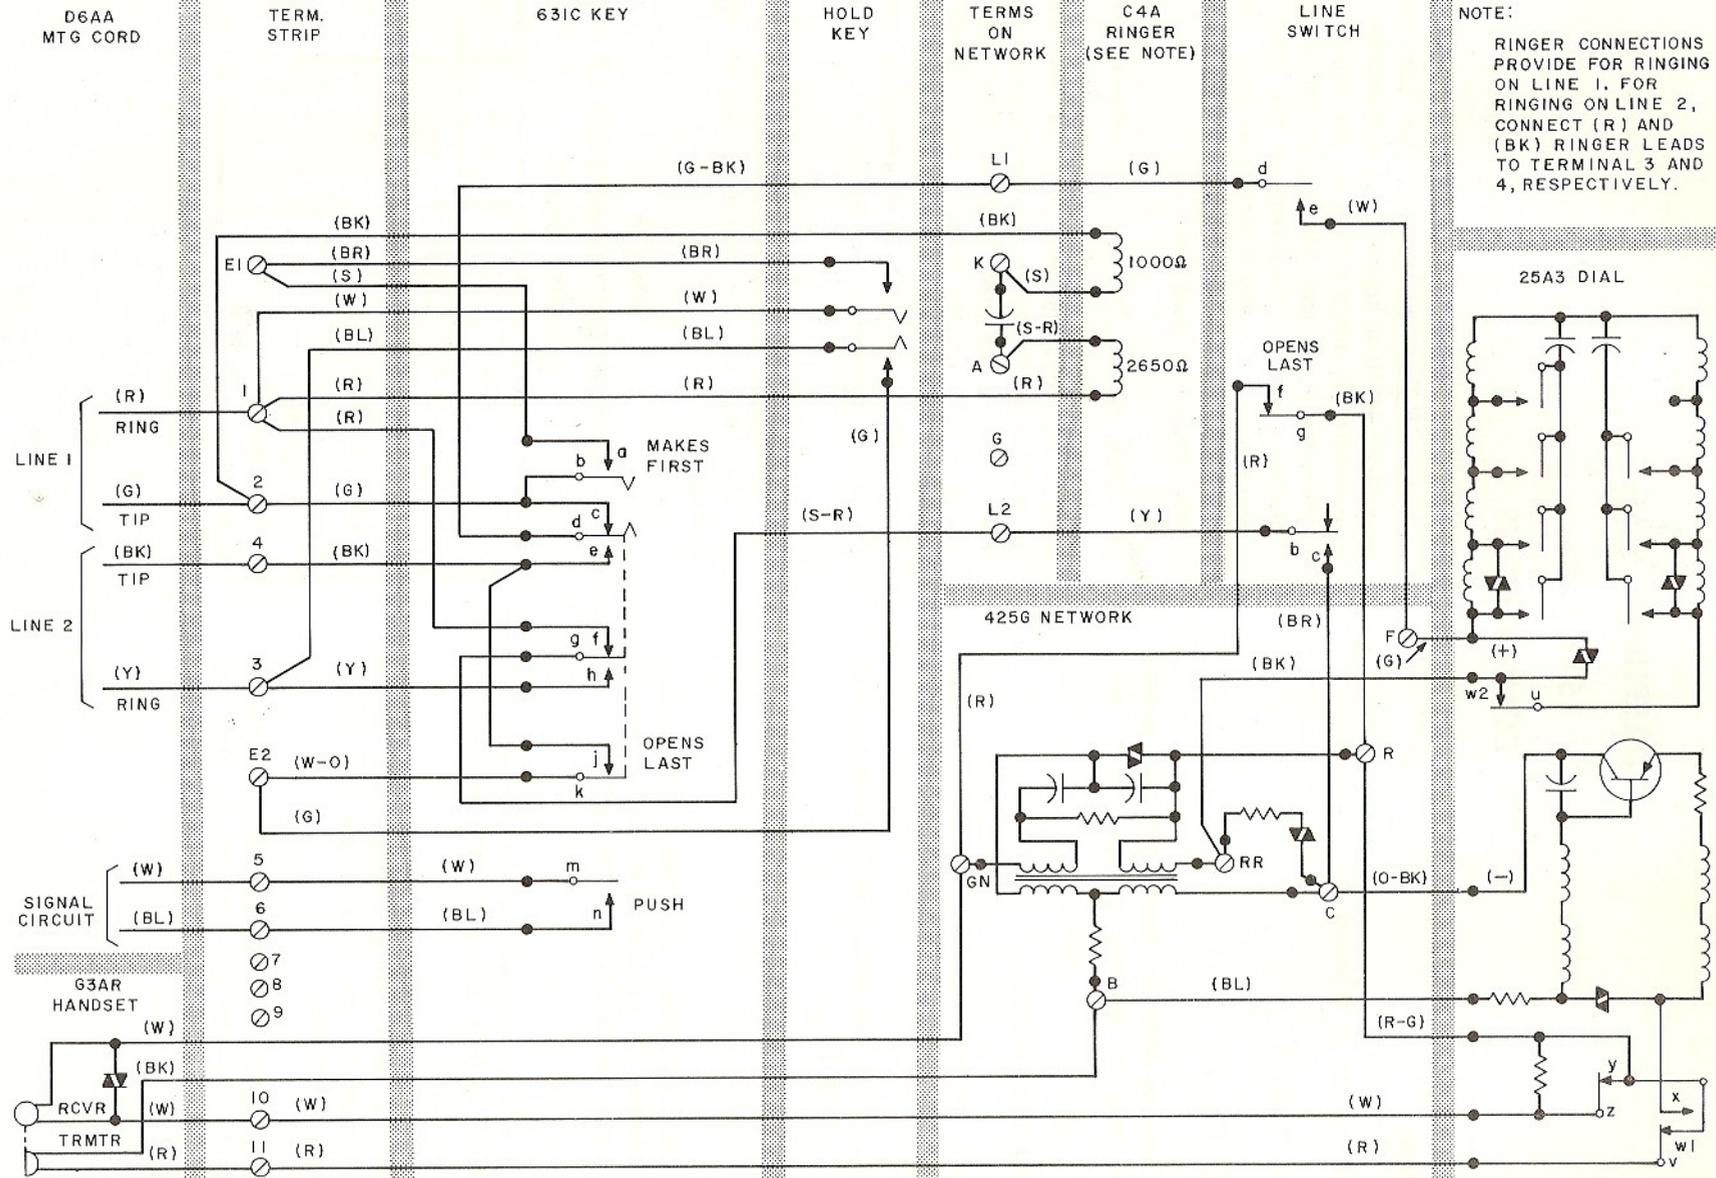


Fig. 1—1515B Telephone Set Connections With 25A3 Dial

