

SERVICE
2558D TELEPHONE SETS

1. GENERAL

1.01 Reissued to:


- Change P-90D053 Guard Assembly to D-180190 Guard Assembly
- Show (BL) lead removed from later model ringers

TABLE A

POLARITY GUARD CONNECTIONS
↓ (D-180190 GUARD ASSEMBLY) †

| LEAD | COLOR | REMOVE FROM | CONNECT TO | |
|----------------|--------|-------------|------------|----------------|
| | | NET. | NET. | POLARITY GUARD |
| Line Switch | W | C | | S |
| Dial | BK | RR | | T |
| Polarity Guard | W G | | C RR | |

Note: For use when specified by local instructions for end-to-end signaling installations.

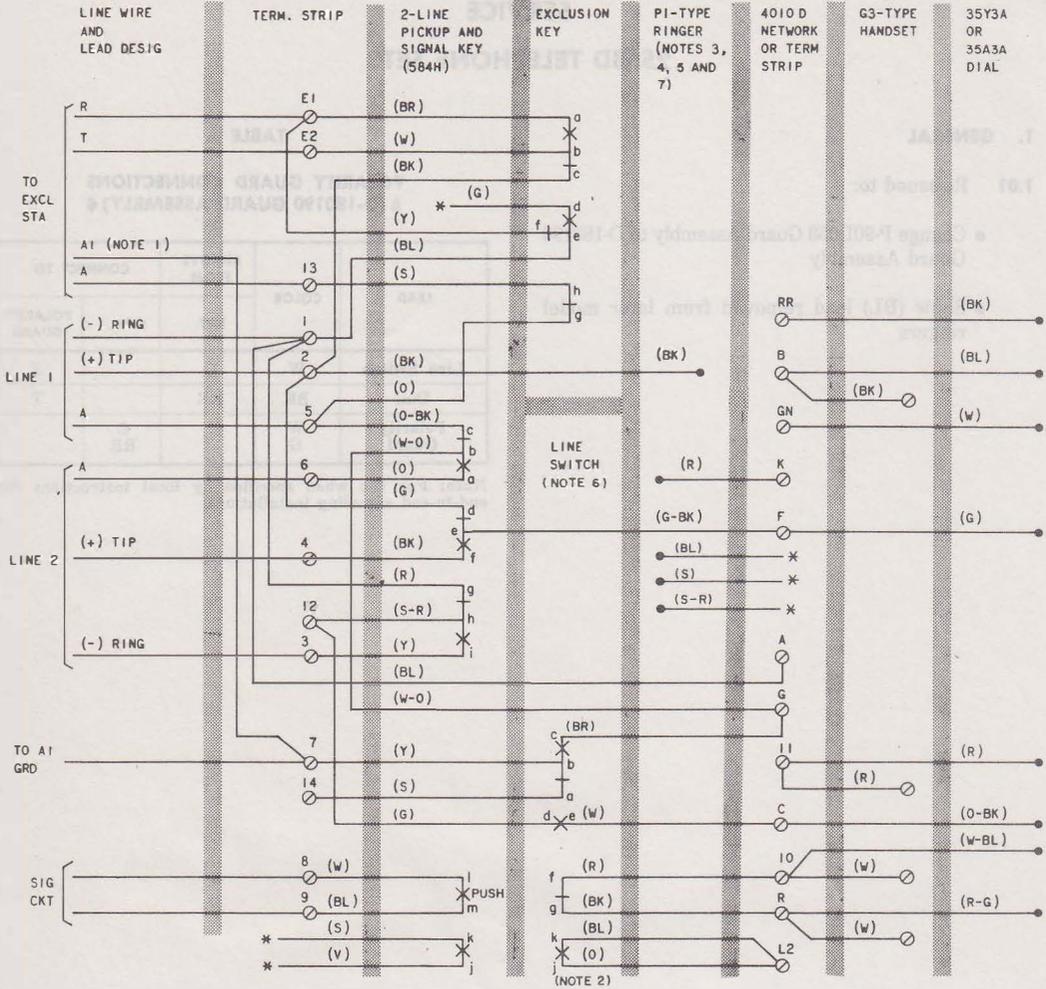

NOTES:

1. PROVIDE A1 GROUND AT EXCLUDED STATION OR CONNECT AS SHOWN.
2. CURRENT PRODUCTION SETS DO NOT HAVE CONTACTS j-k AND ASSOCIATED (O) AND (BL) LEADS.
3. RINGER CONNECTIONS PROVIDE FOR RINGING ON LINE 1. FOR RINGING ON LINE 2, CONNECT (BK) RINGER LEAD TO TERMINAL 4 AND (BL) STRAP FROM A OF NETWORK TO TERMINAL 3.
4. SETS ARE FACTORY WIRED FOR BRIDGED RINGING SERVICE. CONNECTIONS FOR PIB SAME AS PIA RINGER. (BL), (S), AND (S-R) LEADS SHOWN INSULATED AND STORED ARE ON PIA ONLY.
5. TO SILENCE RINGER PERMANENTLY, REMOVE (BK) RINGER LEAD FROM TERMINAL 2, INSULATE AND STORE.

6. LINE SWITCH SEQUENCE, HANDSET REMOVED:

- bc-MAKES ab-BREAKS
 - de-MAKES fg-MAKES
7. (BL) LEAD HAS BEEN REMOVED FROM LATER MODEL RINGERS.
* INSULATED AND STORED

◆ Fig. 1—2558D Telephone Set Connections (Factory Wired) ◆