


**COIN COLLECTORS — PREPAY**  
**155C, D, G, H**  
**COMMON BATTERY — CONNECTIONS**

**Note 1:** In some upper housings, terminals may be designated Y, BB, YY, W, and BK-YY, respectively. Terminal 5 is not always furnished.

**Note 2:** Dotted lines in diagram show manual set connections.


**Note 3:** When a 61R filter is required for radio frequency suppression, move yellow dial lead from Y upper-housing contact spring to filter bracket terminal, and connect filter leads as follows:

- Yellow lead to filter bracket terminal.
- Black lead to A terminal on chute.
- Red lead to Y upper-housing contact.

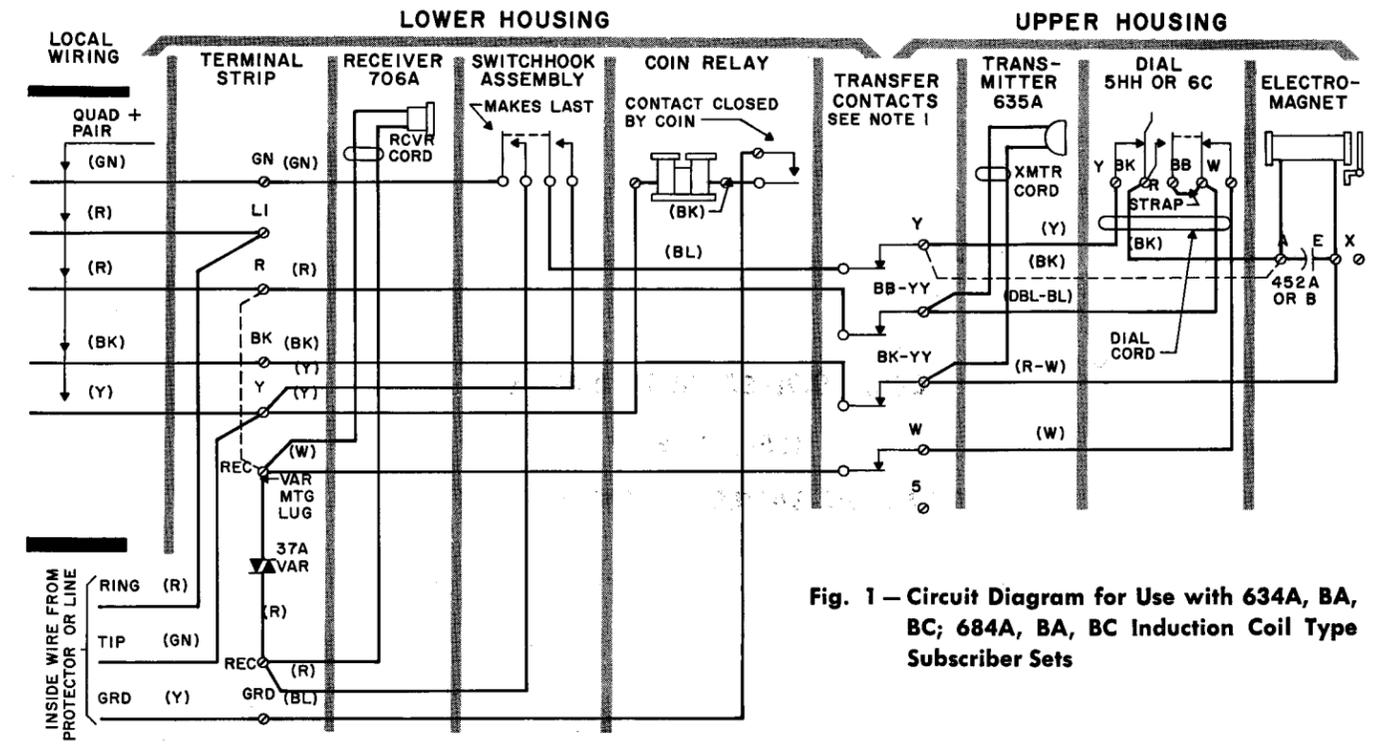

**Fig. 1 — Circuit Diagram for Use with 634A, BA, BC; 684A, BA, BC Induction Coil Type Subscriber Sets**

SEE NOTES ON FACING PAGE

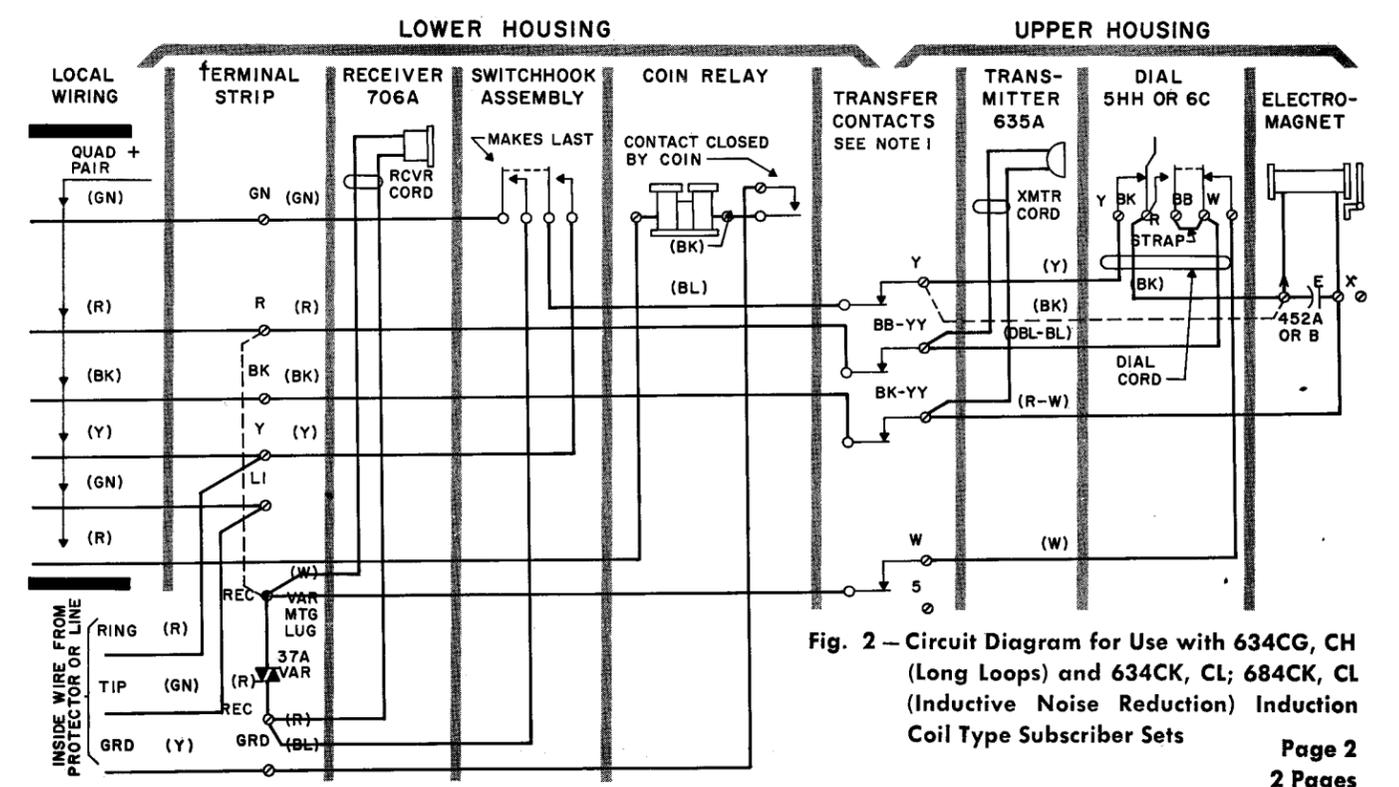

**Fig. 2 — Circuit Diagram for Use with 634CG, CH (Long Loops) and 634CK, CL; 684CK, CL (Inductive Noise Reduction) Induction Coil Type Subscriber Sets**