

SERVICE
COIN COLLECTORS, SUBSCRIBER SET REQUIRED
150 SERIES

1. GENERAL

1.01 This section provides connection information for the 150-type coin collectors and associated subscriber sets.

1.02 Information in this section was formerly contained in Sections 506-319-400, 506-430-400, 506-510-400, and 506-510-401 which are hereby canceled.

1.03 Refer to the Division 506, section entitled: Reference, Coin Collectors, Subscriber Set Required for additional information on these sets.

2. CONNECTION INDEX


Fig. 1—150K and L Coin Collectors with 634A, BA, BC, or 684A, BA, BC Subscriber Sets—Postpay, Connections

Fig. 2—152C and D Coin Collectors with 634A, BA, BC, or 684A, BA, BC Subscriber Sets—Postpay, Connections

Fig. 3—155C, D, G, and H Coin Collectors with 634A, BA, BC, or 684A, BA, BC Subscriber Sets—Coin First, Connections

Fig. 4—155C, D, G, and H Coin Collectors with 634CG, CH, CK, CL, or 684CK, CL Subscriber Sets—Coin First Connections

Fig. 5—158G and H Coin Collectors with 634BA or 684BA Subscriber Sets—Postpay, Connections

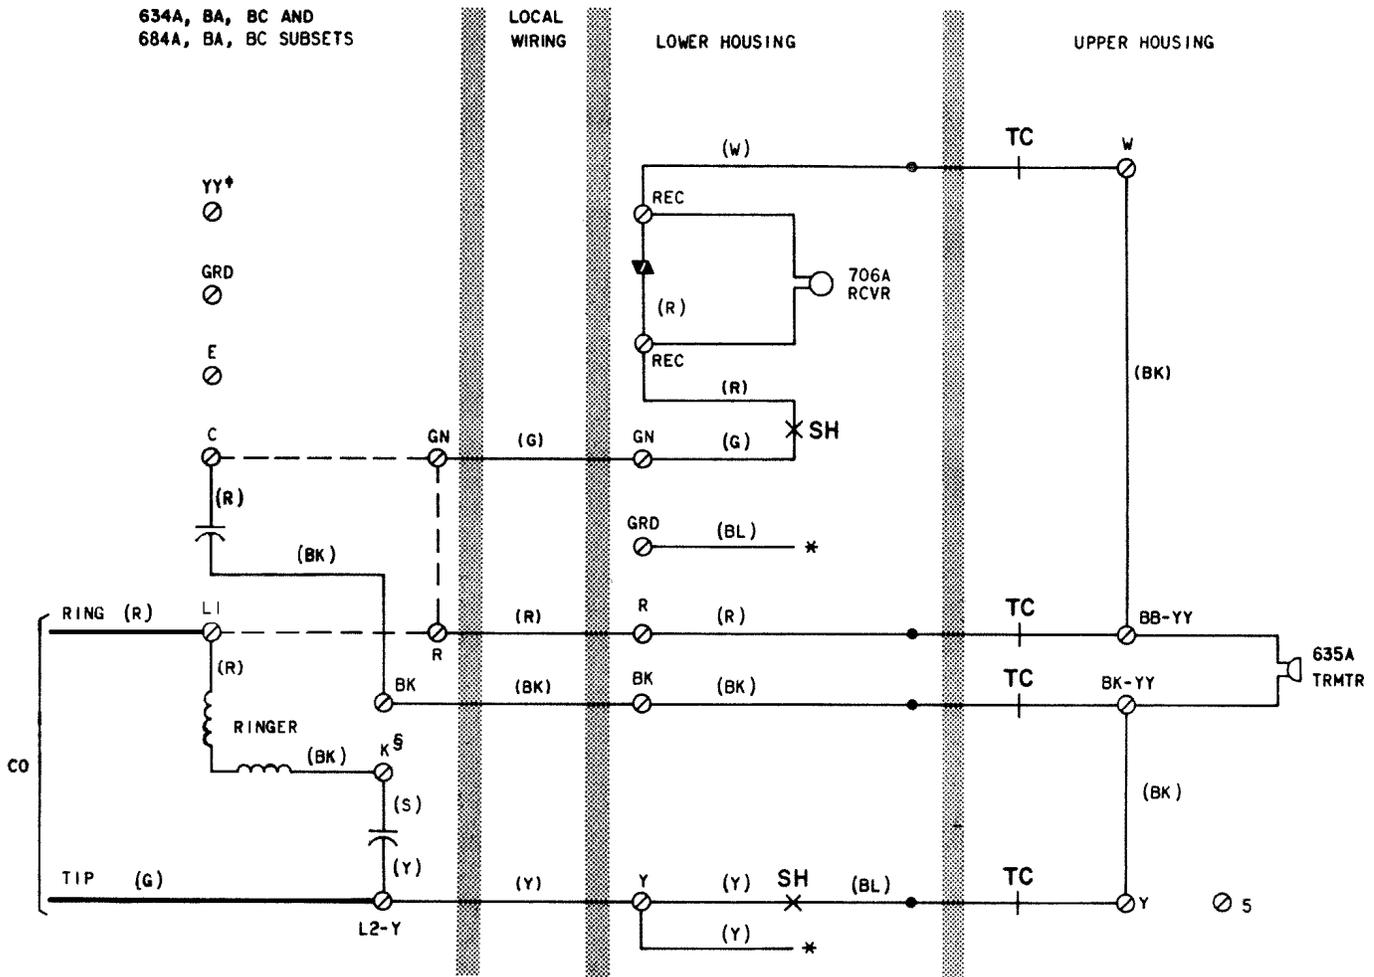

NOTE:
 IN SOME UPPER HOUSINGS, TC TERMINALS MAY BE DESIGNATED W, BB, YY,
 Y, BK-YY, RESPECTIVELY. TERMINAL 5 IS NOT ALWAYS FURNISHED.

- * INSULATED AND STORED
- † PROVIDED WITH 634BC AND 684BC SUBSETS ONLY.
- § RR TERM. ON 634BC AND 684BC SUBSETS.
- SH - SWITCH HOOK CONTACTS
- TC - TRANSFER CONTACTS

Fig. 1—150K and L Coin Collectors with 634A, BA, BC, or 684A, BA, BC Subscriber Sets—Postpay, Connections


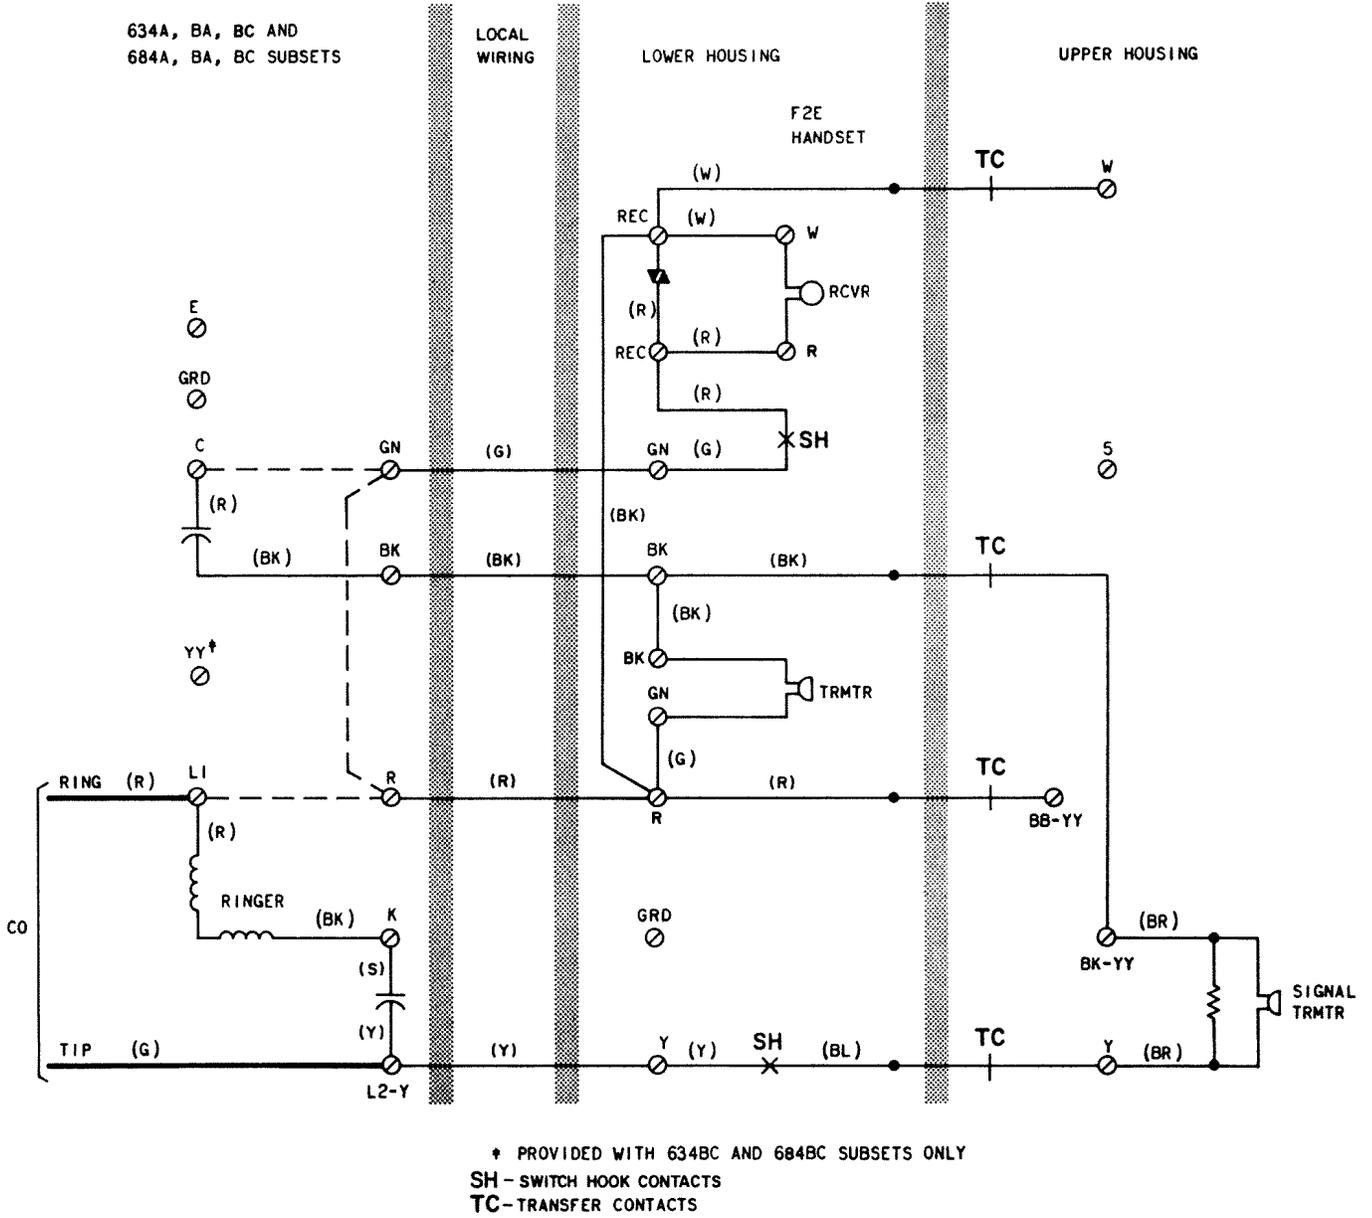


Fig. 2—152C and D Coin Collectors with 634A, BA, BC, or 684A, BA, BC Subscriber Sets—Postpay, Connections

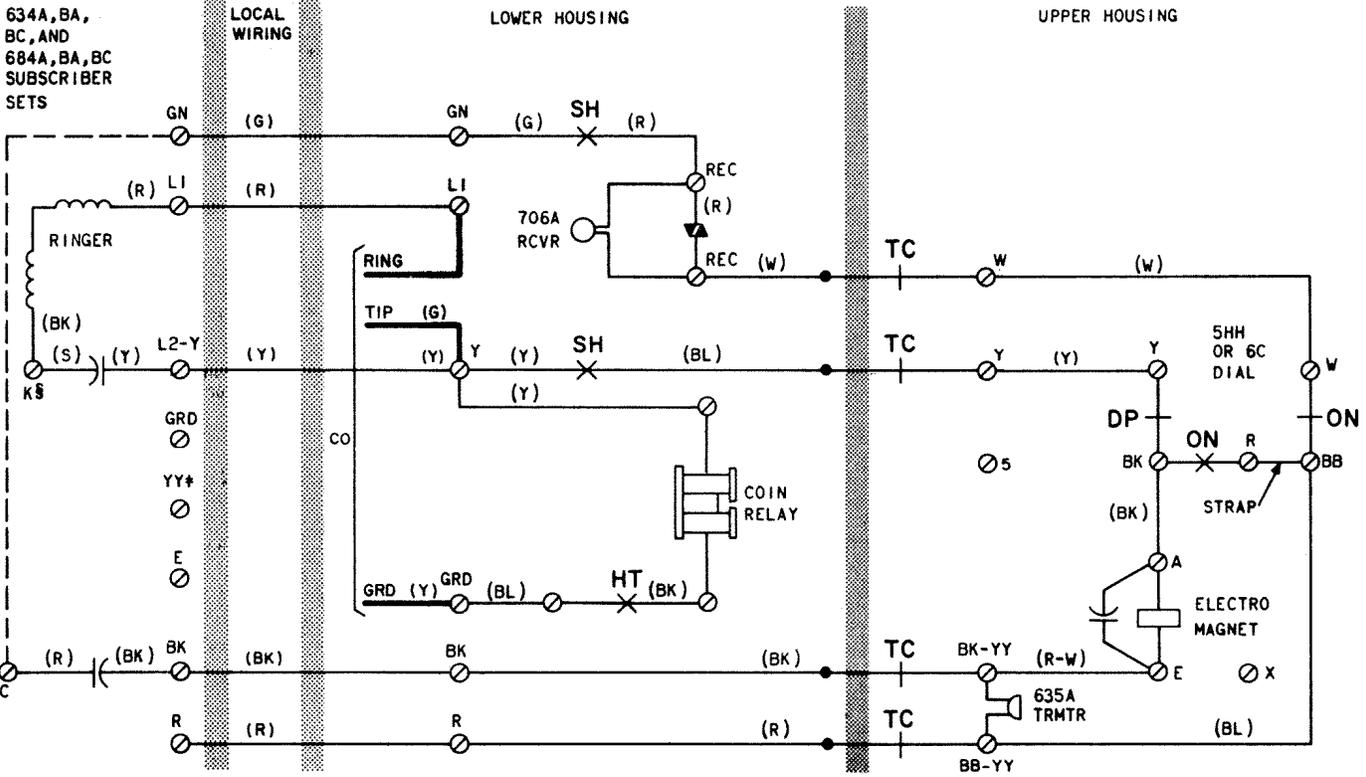


NOTE:

WHEN A 6IR FILTER IS REQUIRED FOR RADIO FREQUENCY SUPPRESSION, MOVE (Y) DIAL LEAD FROM Y UPPER-HOUSING CONTACT SPRING TO FILTER BRACKET TERM., CONNECT (Y) FILTER LEAD TO FILTER BRACKET TERM., CONNECT (BK) FILTER LEAD TO TERM. A ON CHUTE, AND CONNECT (R) FILTER LEAD TO Y UPPER HOUSING CONTACT.

LEGEND:

- ‡ PROVIDED WITH 634BC AND 684BC SUBSETS ONLY
- § RR TERMINAL ON 634BC AND 684BC SUBSETS
- DP-DIAL PULSE CONTACTS
- HT-HOPPER TRIGGER CONTACTS
- SH-SWITCH HOOK CONTACTS
- ON-SWITCH NORMAL CONTACTS
- TC-TRANSFER CONTACTS

Fig. 3—155C, D, G, and H Coin Collectors with 634A, BA, BC, or 684A, BA, BC Subscriber Sets—Coin First Connections

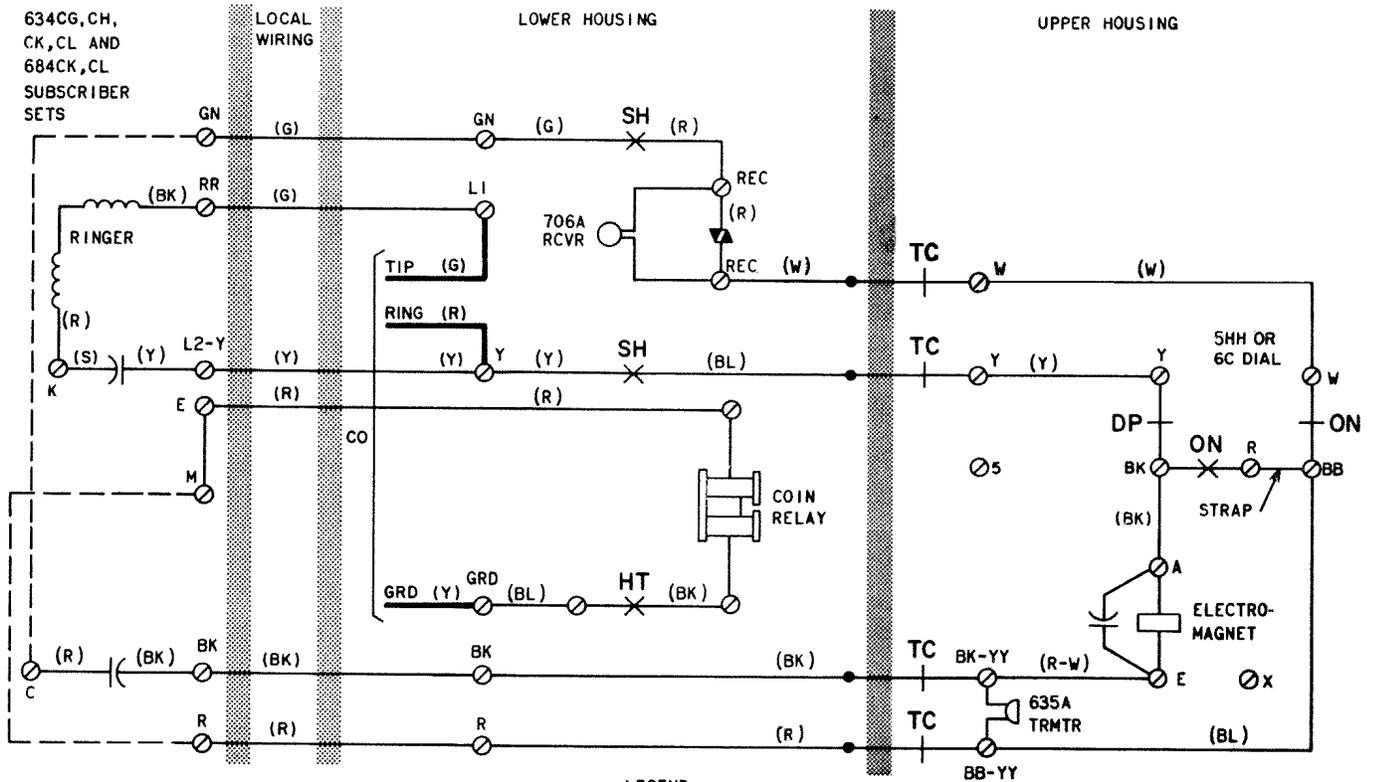

NOTE:
 WHEN A 6IR FILTER IS REQUIRED FOR RADIO FREQUENCY SUPPRESSION, MOVE (Y) DIAL LEAD FROM Y UPPER-HOUSING CONTACT SPRING TO FILTER BRACKET TERM., CONNECT (Y) FILTER LEAD TO FILTER BRACKET TERM., CONNECT (BK) FILTER LEAD TO TERM. A ON CHUTE, AND CONNECT (R) FILTER LEAD TO Y UPPER HOUSING CONTACT.

LEGEND:
 DP- DIAL PULSE CONTACTS
 HT- HOPPER TRIGGER CONTACTS
 SH- SWITCH HOOK CONTACTS
 ON- OFF NORMAL CONTACTS
 TC- TRANSFER CONTACTS

Fig. 4—155C, D, G, and H Coin Collectors with 634CG, CH, CK, CL, or 684CK, CL Subscriber Sets— Coin First Connections

