

INTERPHONE SYSTEM—1A HOME
2558D TELEPHONE SET
CONNECTIONS AND MAINTENANCE

1. GENERAL

1.01 This section is reissued to add note 2, Fig. 1: j-k line switch contacts and associated leads are removed from current production sets.

2. CONNECTION INDEX

Table A—Wiring Changes to Provide 1A Home Interphone


Fig. 1—2558D Telephone Set Connections, 1-Line Pickup, Hold, and 1A Home Interphone

Fig. 2—2558D Telephone Set Connections to 1A Home Interphone

TABLE A
WIRING CHANGES TO PROVIDE 1A HOME INTERPHONE

EXCLUSION KEY			LINE SWITCH			INSTALL 664D TRANSMITTER		
LEAD	FROM	TO	LEAD	FROM	TO	LEAD	FROM	TO
BK	2	*	S	14	L1	R		13
W	E2	2				S		L1
BR	E1	1				W		14
Y	E1	*				Bracket		14
BL	1	*						
S	13	*						
O	5	*						

* Insulate and store.

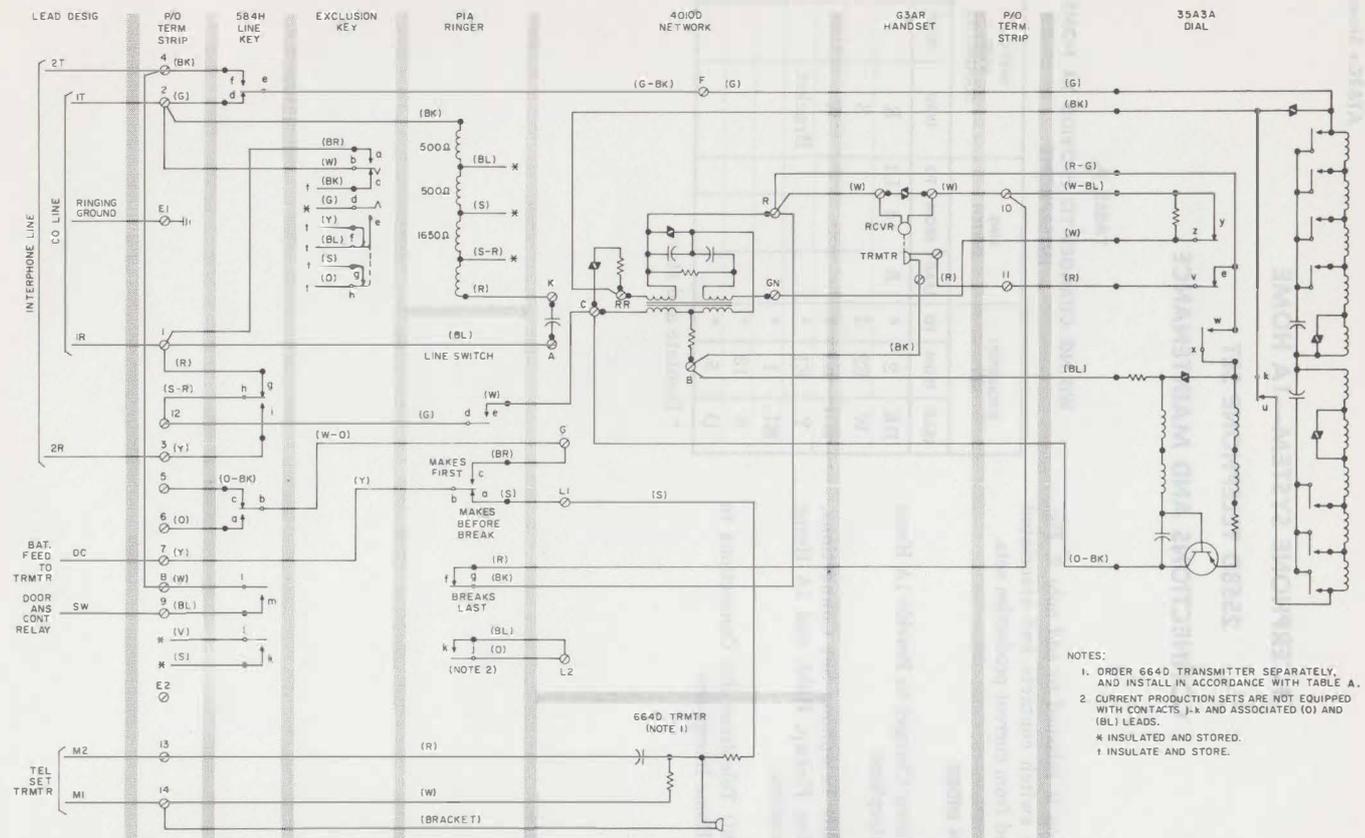

- NOTES:
1. ORDER 664D TRANSMITTER SEPARATELY, AND INSTALL IN ACCORDANCE WITH TABLE A.
 2. CURRENT PRODUCTION SETS ARE NOT EQUIPPED WITH CONTACTS j, k AND ASSOCIATED (O) AND (BL) LEADS.
- * INSULATED AND STORED.
† INSULATE AND STORE.

Fig. 1—2558D Telephone Set Connections, 1-Line Pickup, Hold, and 1A Home Interphone

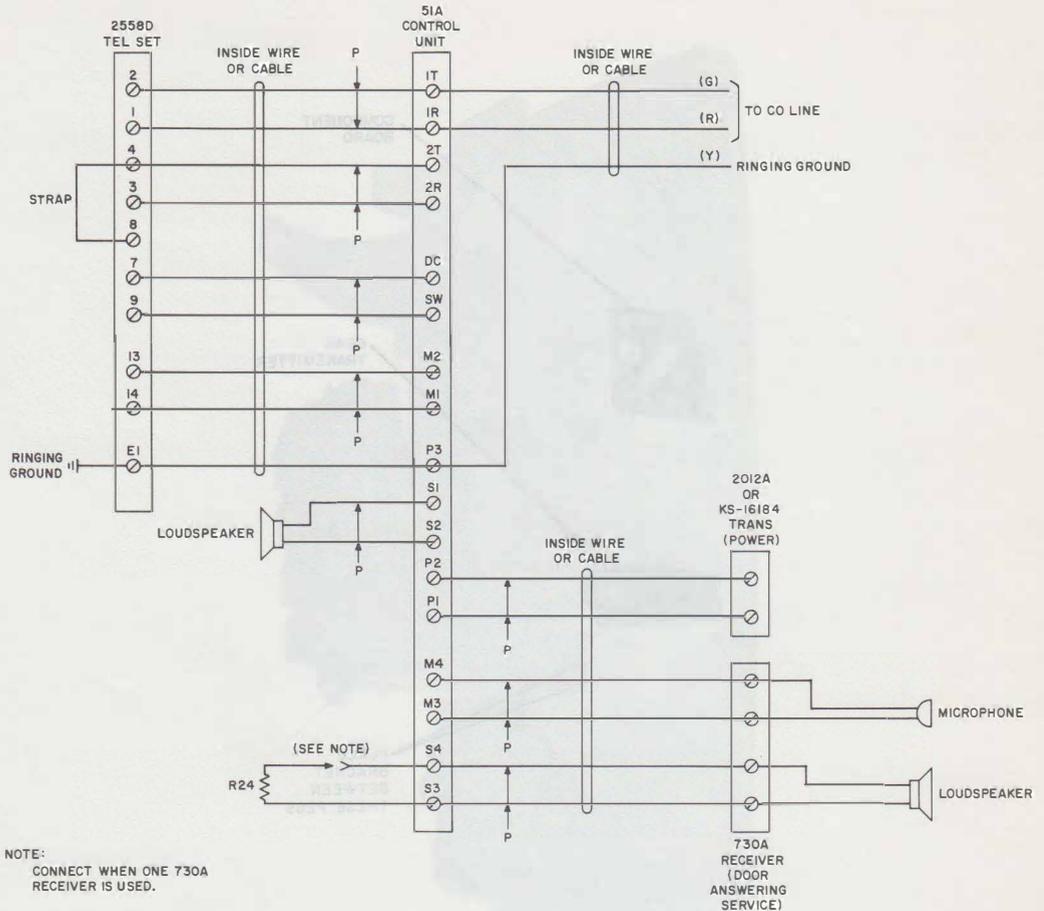


Fig. 2—2558D Telephone Set Connections To 1A Home Interphone

3. MAINTENANCE

- (a) Refer to Division 502 for maintenance of the 2558D telephone set and appropriate sections for individual components such as handset and dial.
- (b) Refer to Division 512 for maintenance of 1A home interphone system.

(c) Maintenance of the home interphone components of these sets (Fig. 3) consists only of replacement of defective components.

(d) The 664D transmitter must be ordered separately and installed in accordance with Table A.

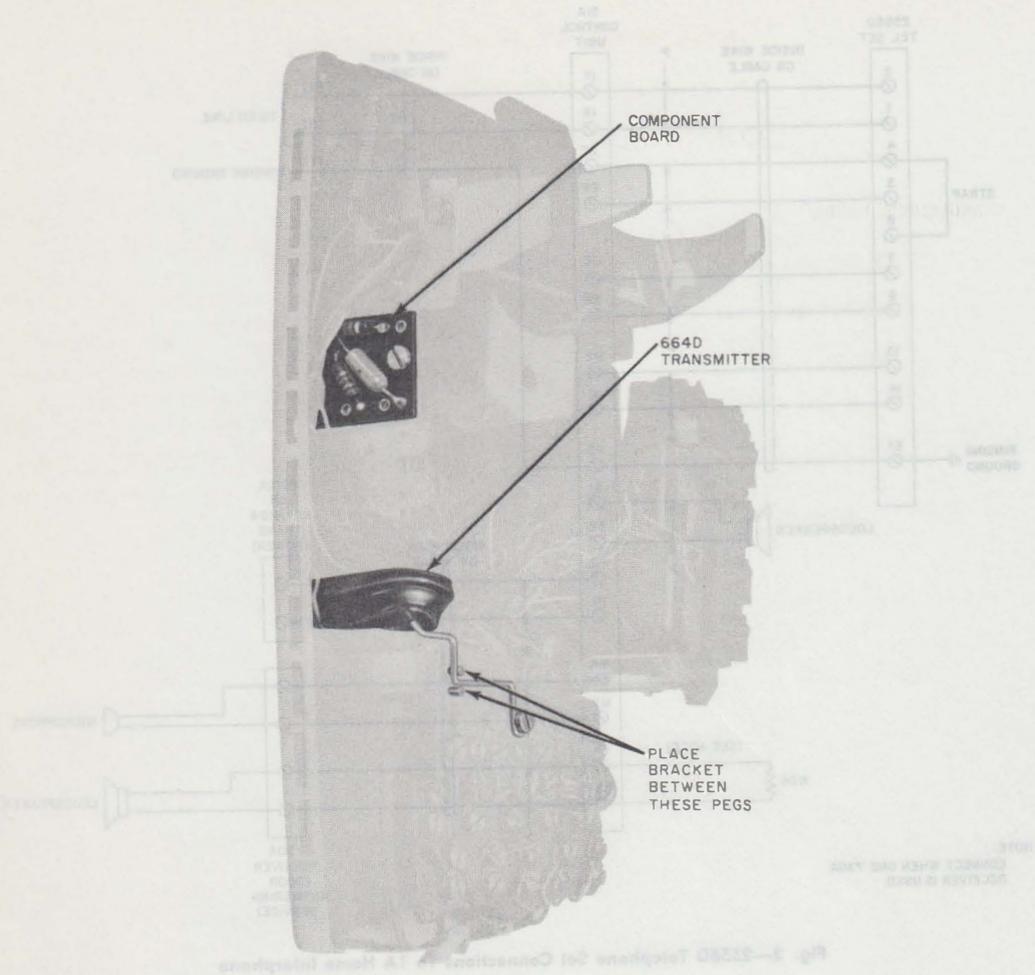


Fig. 3—2558D Telephone Set 1A Home Interphone Components Installed