

SPEAKERPHONE SYSTEM—3-TYPE

660A1 TELEPHONE SET

CONNECTIONS AND MAINTENANCE

1. GENERAL

1.01 This section is reissued to change section reference in 3.01.

1.02 Telephone sets equipped with an 8R dial must be equipped with an 8C dial when connected for use with 3-type speakerphone in addition to other modifications, see Table A.

2. CONNECTION INDEX

Table A—660A1 Telephone Set—Modification for Speakerphone

Fig. 1—660A1 Telephone Set, Connections To 3-Type Speakerphone

Fig. 2—660A1 Telephone Set Wired For Speakerphone

3. MAINTENANCE

3.01 ♦Refer to Division 502 for maintenance information for the 660A1 telephone set and to Division 512 for maintenance of 3-type speakerphone components. ♦


TABLE A
660A1 TELEPHONE SET — MODIFICATION FOR SPEAKERPHONE

WIRE OR LEAD		1A1 OR 1A2 KEY TEL SYS	INDIVIDUAL OR BRIDGED	RING PARTY	TIP PARTY							
Line Switch	(BR) [S-G] (Y) [S-W] (W) [S-BR]	TB1-1 TB1-P2 C of net	* TB1-P2 C of net	* TB1-P2 C of net	* TB1-P2 C of net							
Ringer Straps	(R) (BK)	L1 of net F of net	L1 of net F of net	L1 of net TB1-P2	F of net TB1-P2							
8C Dial (Note 1)	(Y) (Y) (W) (W) (BL) (G) or (BL)	TB2	<table style="border: none;"> <tr><td rowspan="6" style="font-size: 3em; vertical-align: middle;">}</td><td>1</td></tr> <tr><td>2</td></tr> <tr><td>3</td></tr> <tr><td>4</td></tr> <tr><td>5</td></tr> <tr><td>6</td></tr> </table>			}	1	2	3	4	5	6
}	1											
	2											
	3											
	4											
	5											
	6											
Add Straps	M1W cord or equivalent	TB2-1 to 41-type dial, terminal 1 TB2-2 to 41-type dial, terminal 2										
D10R Mounting Cord (Note 2)	R (BL-W) T (W-BL) A1 (O-W)	TB1-L1 F of net. TB1-P2										
	T1 (W-O) P4 (G-W) P3 (W-G)	41-type dial, terminal 6 41-type dial, terminal 1 41-type dial, terminal 2										
	A (BR-W)	TB1-1	*	*	*							
	LK (W-BR) P1 (S-W) P2 (W-S)	TB1-L2 41-type dial, terminal P1 41-type dial, terminal P2										

Notes: 1. Replace 8R dial with 8C dial (order separately)
2. Replace D6AF cord with D10R (order separately)


* Insulate and store.
() Current color code.
[] MD color code.

SECTION 512-620-460

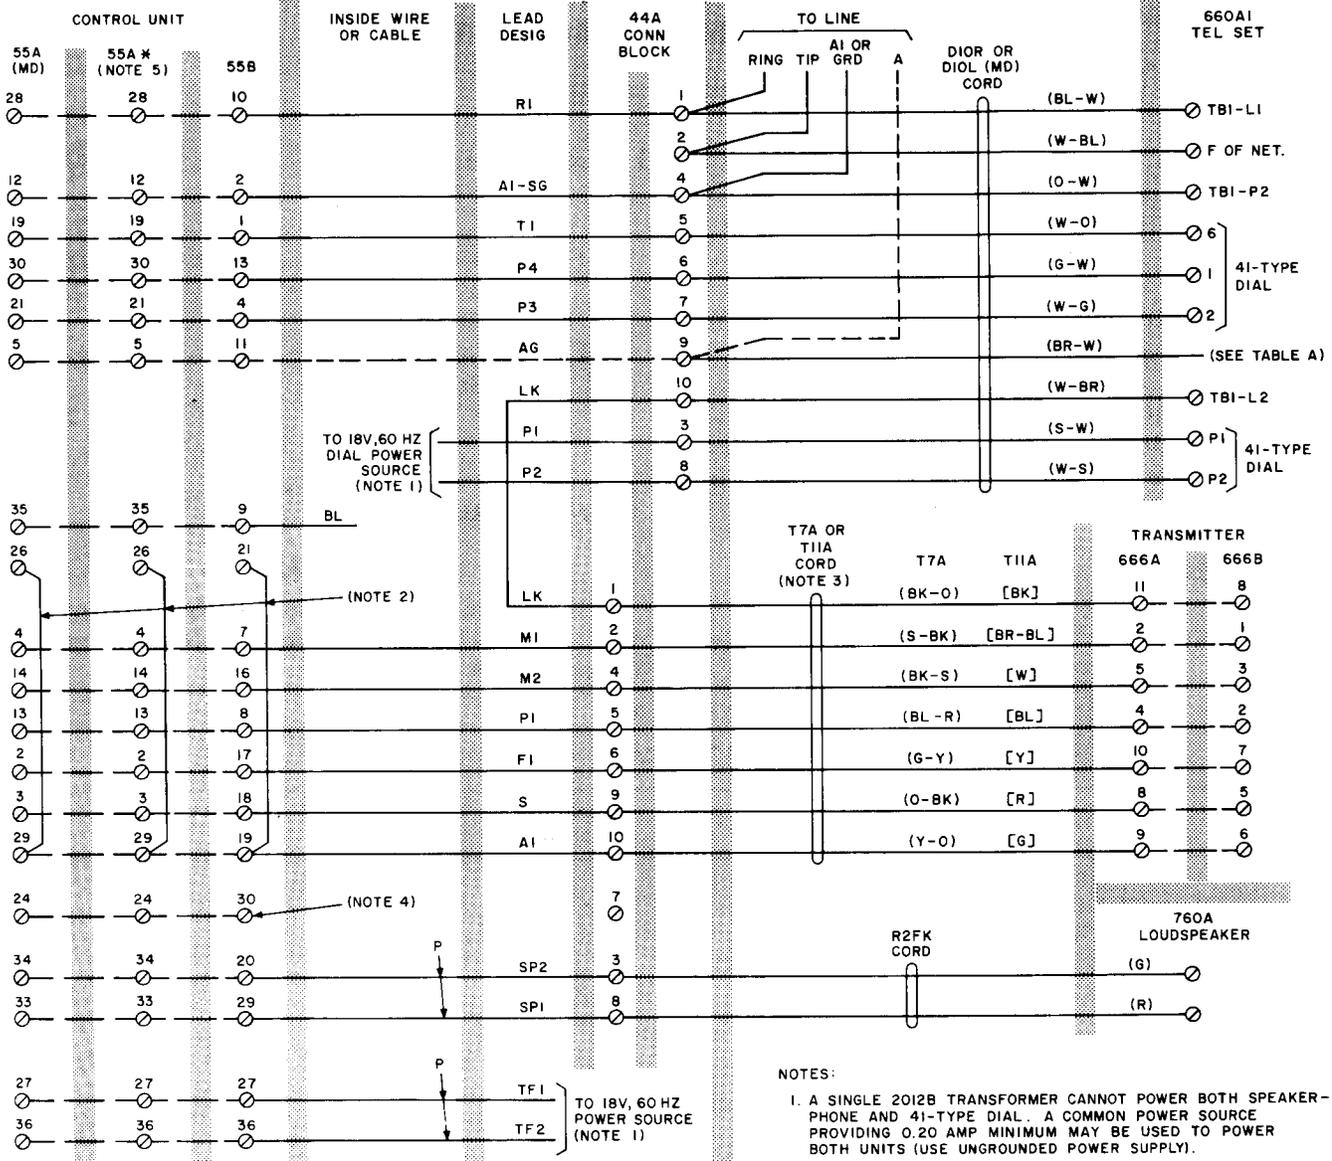

- NOTES:
1. A SINGLE 2012B TRANSFORMER CANNOT POWER BOTH SPEAKERPHONE AND 41-TYPE DIAL. A COMMON POWER SOURCE PROVIDING 0.20 AMP MINIMUM MAY BE USED TO POWER BOTH UNITS (USE UNGROUNDED POWER SUPPLY).
 2. CONNECT FOR BUSY LAMP CONTROLLED BY 55-TYPE CONTROL UNIT ONLY, ADD STRAP AS SHOWN.
 3. INSULATE AND STORE UNUSED LEADS IN T11A CORD.
 4. CONNECT SP1 LEAD TO TERMINAL 30 (55B C.U.) OR 24 (55A C.U.) FOR REDUCED LOUDSPEAKER VOLUME.
 5. 55A* CONTROL UNIT MODIFIED BY WESTERN ELECTRIC COMPANY.

Fig. 1—660A1 Telephone Set, Connections to 3-Type Speakerphone

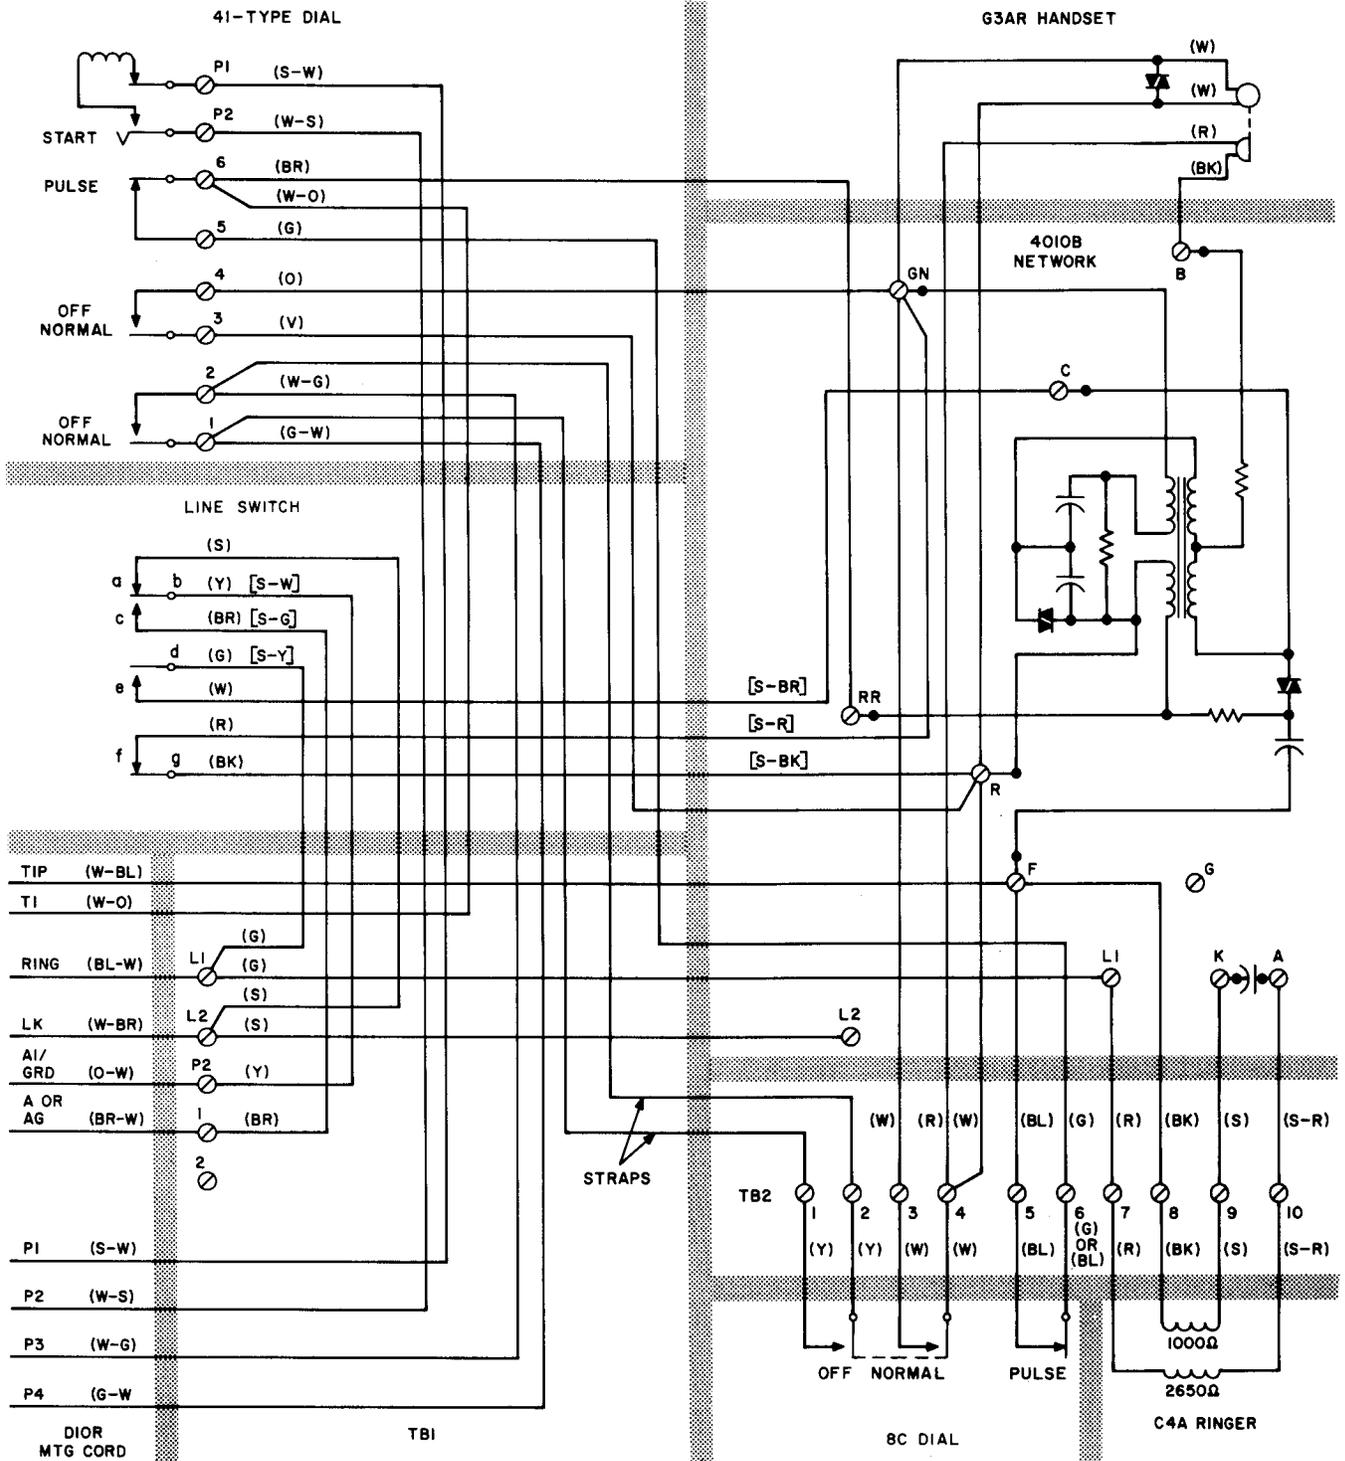

() CURRENT COLOR CODE.
 [] MD COLOR CODE.

Fig. 2—660A1 Telephone Set Wired for Speakerphone