

SPEAKERPHONE SYSTEMS—3-TYPE

1565-TYPE TELEPHONE SETS

CONNECTIONS

1. GENERAL

(a) This section shows connections between components of the 3-type speakerphone system and the 1565GK, 1565HK, and 1565LK telephone sets.

(b) A portion of this information was formerly found in Section 512-620-402.

(c) The connections in this section are for use with 1A1 or 1A2 KTS. For conversion to 1A KTS or for complete telephone set connections refer to the following sections:

- 1565GK—Section 502-525-424
- 1565HK—Section 502-525-426
- 1565LK—Section 502-525-427

(d) Use a 55B control unit with these sets, or a 55A modified for use with TOUCH-TONE® telephone sets. Modified control units may be identified by an asterisk following the code.

(e) When using a 666-type transmitter unit equipped with a T11A cord, insulate and store the spare conductors.

2. CONNECTIONS

Fig. 1—Connections For 1565-Type Telephone Set Using 66E-Type Connecting Block

Fig. 2—Connections For 1565-Type Telephone Set Using 149-Type Adapter

SECTION 512-621-415

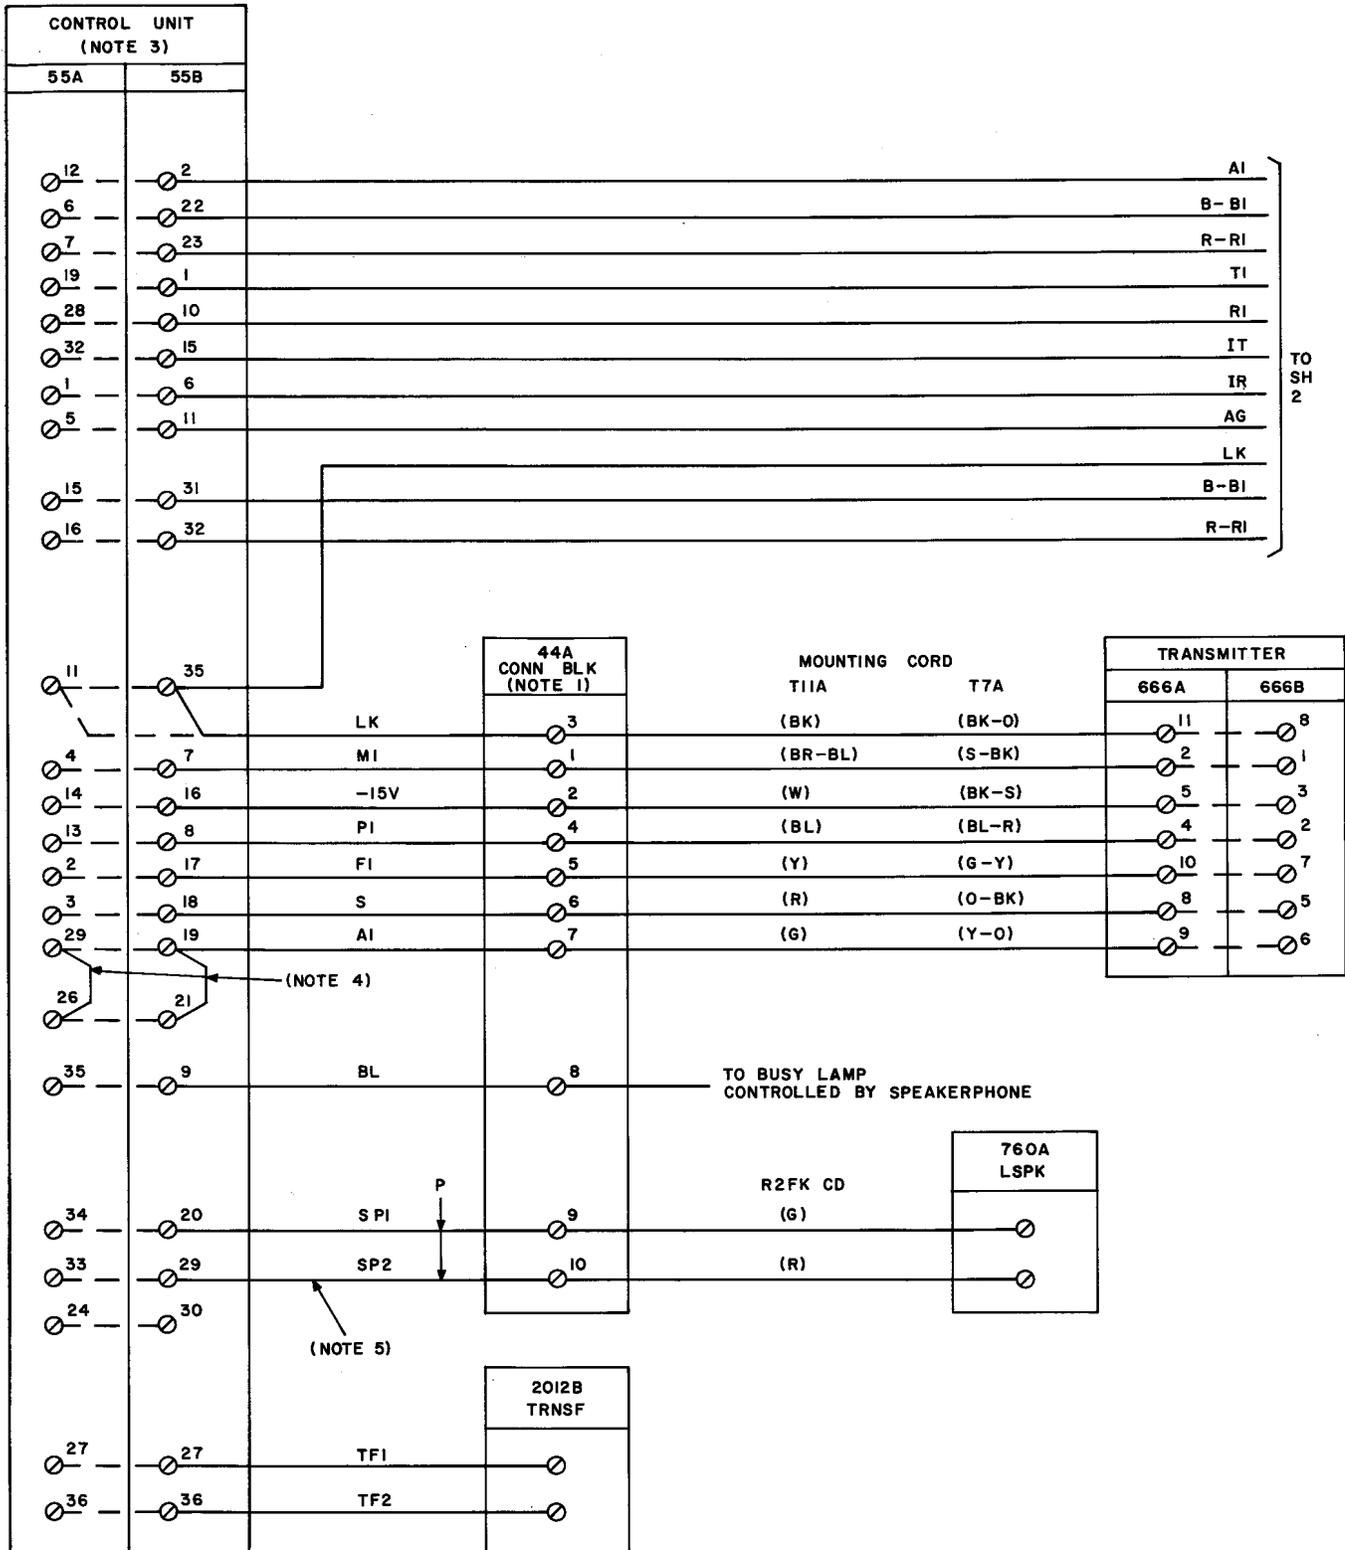


Fig. 1—Connections for 1565-Type Telephone Set, Using 66E-Type Connecting Block (Sheet 1 of 2)

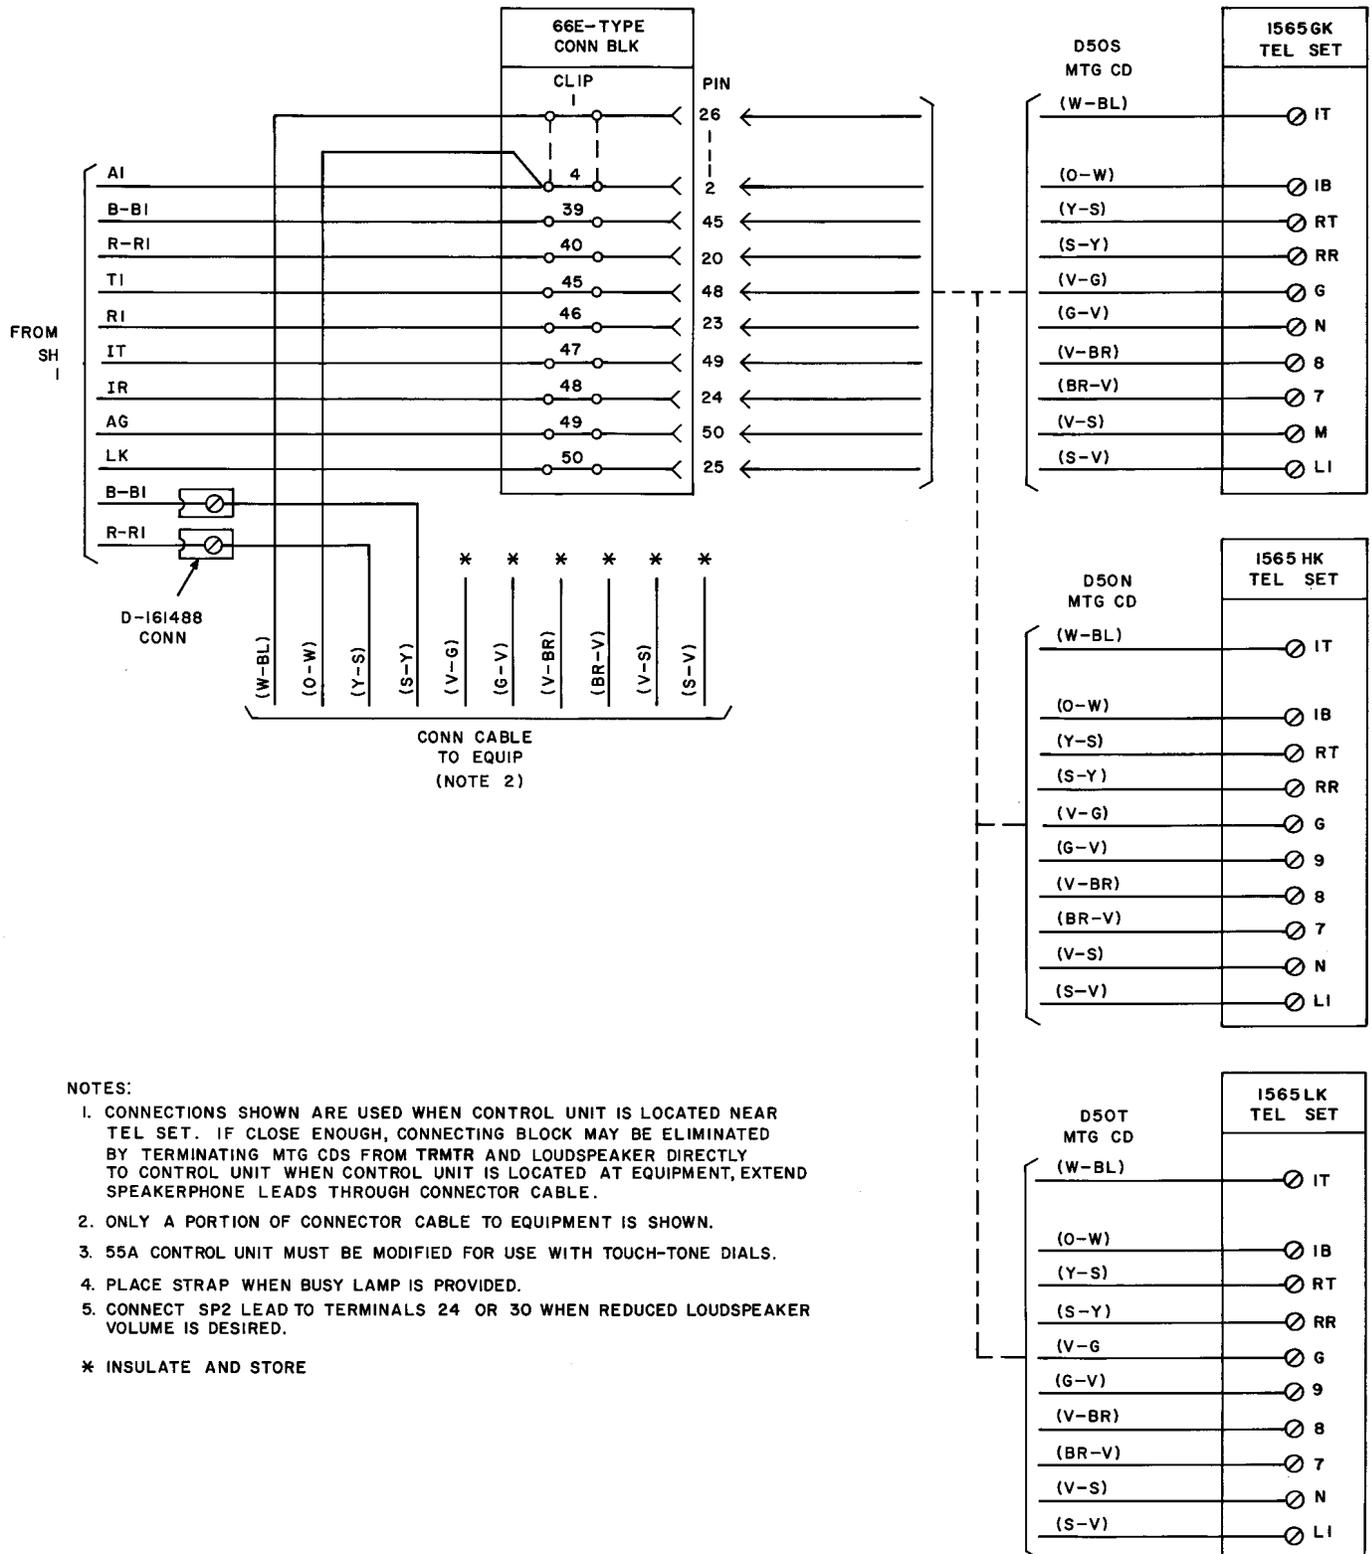


Fig. 1—Connections for 1565-Type Telephone Set, Using 66E-Type Connecting Block (Sheet 2 of 2)

SECTION 512-621-415

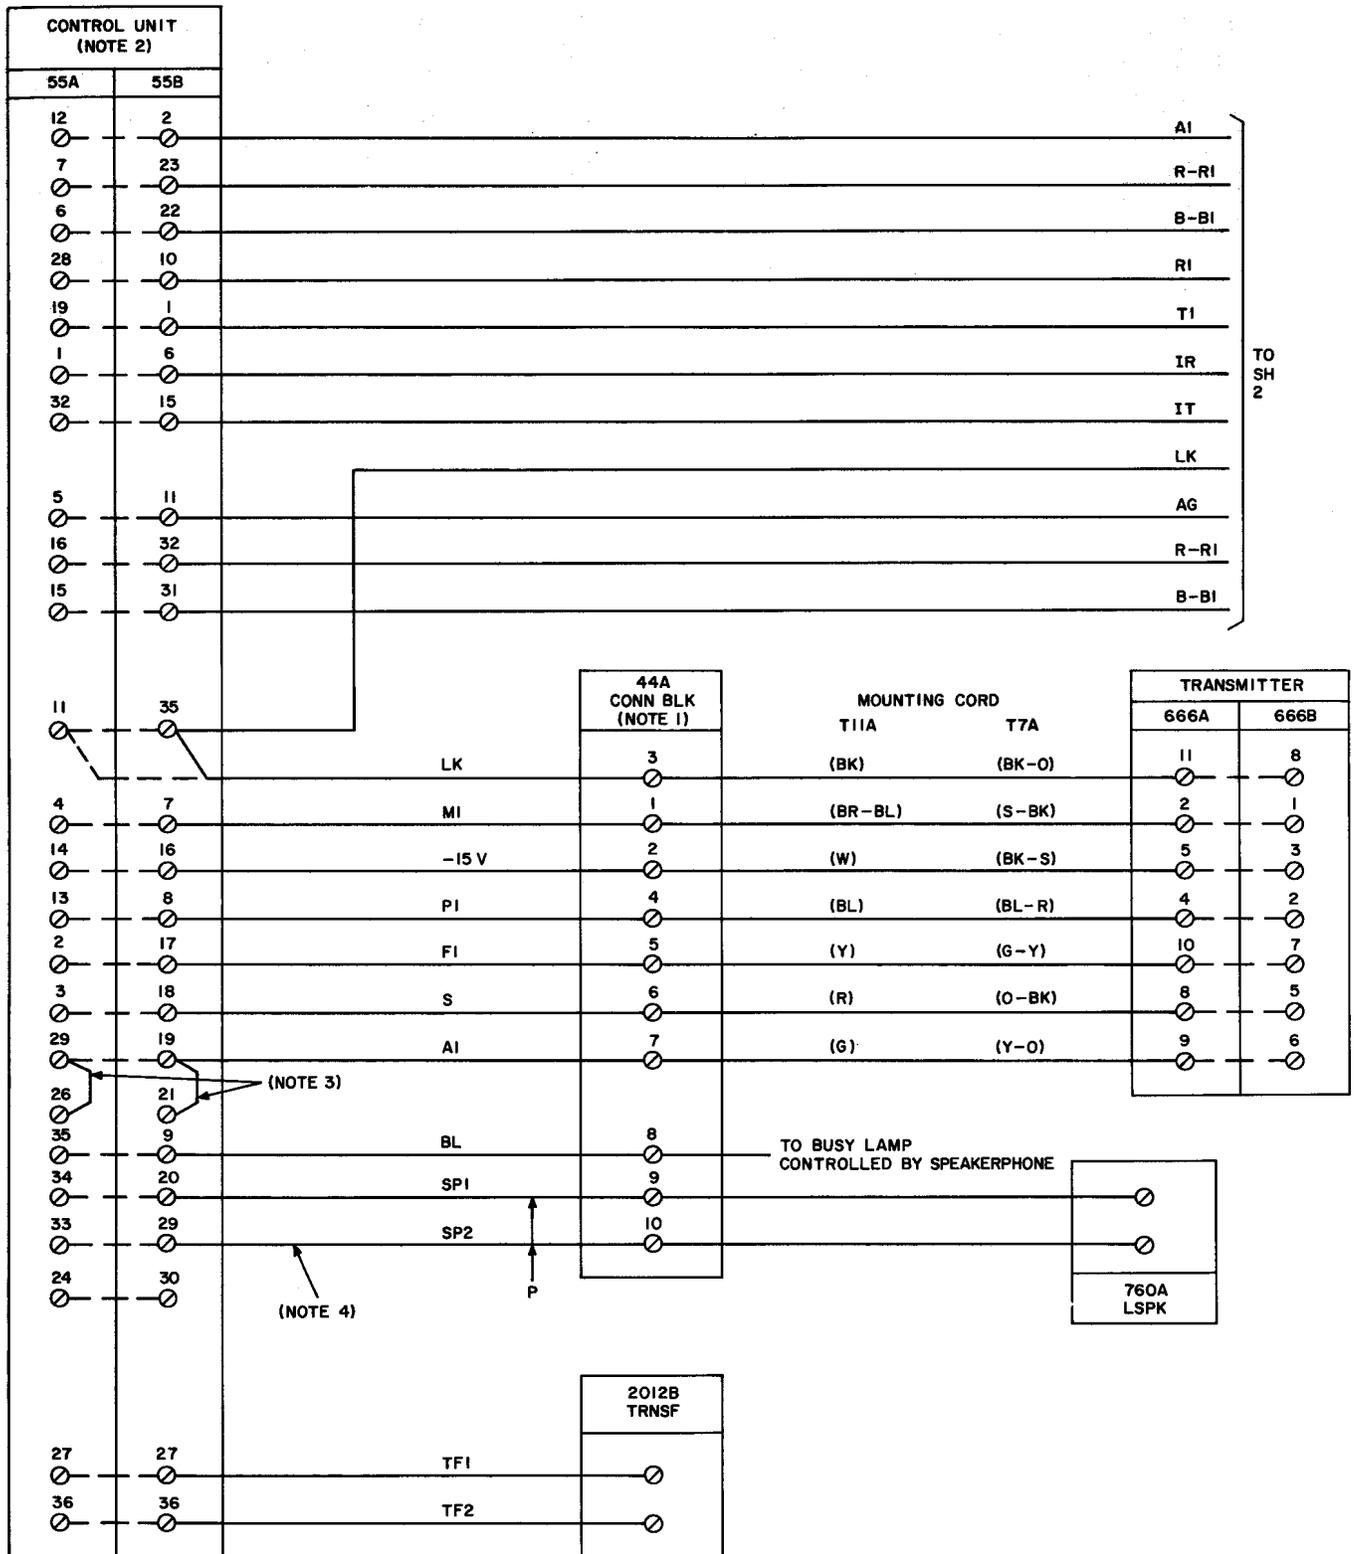


Fig. 2—Connections for 1565-Type Telephone Set, Using 149-Type Adapter (Sheet 1 of 2)

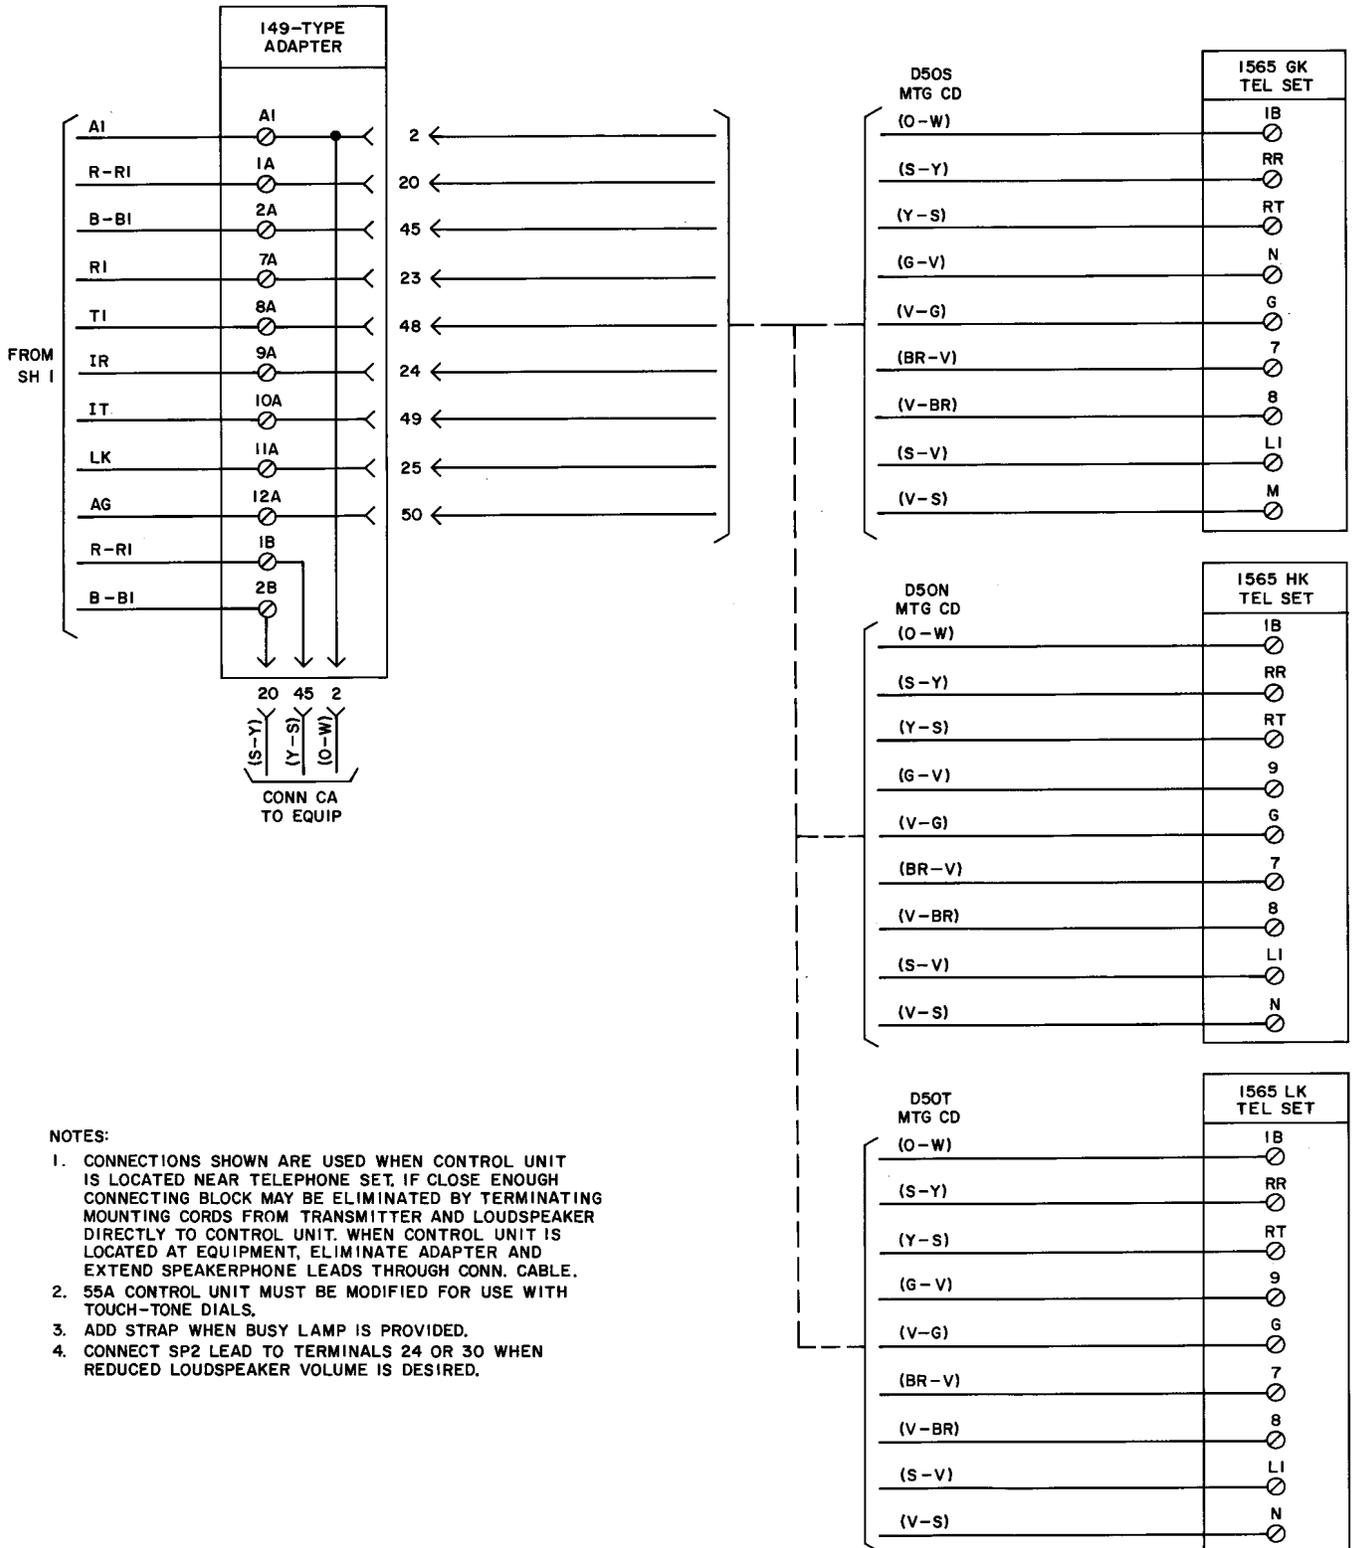


Fig. 2—Connections for 1565-Type Telephone Set, Using 149-Type Adapter (Sheet 2 of 2)