

SPEAKERPHONE SYSTEM—3-TYPE

2702B TELEPHONE SETS

CONNECTIONS AND MAINTENANCE

1. GENERAL

1.01 This section contains connection and maintenance information for the 2702B telephone set as used with the 3-type speakerphone system.

1.02 This section is reissued to:

- Change section reference in 3.01.
- Show 666A transmitter MD, Fig. 2

1.03 Control units designated 55A* have been modified by Western Electric Company to the 55B configuration for use with TOUCH-TONE® dial equipped telephone sets. Modified units have an asterisk following the code.

2. CONNECTION INDEX

Table A—2702B Telephone Set, Modifications For 3-Type Speakerphone

Fig. 1—2702B Telephone Set, Wired For 3-Type Speakerphone and KTS Use

Fig. 2—2702B Telephone Set, Connections To 3-Type Speakerphone

3. MAINTENANCE

3.01 Refer to Division 512 for maintenance of 3-type speakerphone components and to appropriate sections for maintenance of PRINCESS® telephone set components.

TABLE A
2702B TELEPHONE SET
MODIFICATIONS FOR 3-TYPE SPEAKERPHONE

WIRE OR LEAD	COLOR	REMOVE FROM NETWORK	CONNECT TO	
			NET.	TERM. BLOCK
Line Switch	W	F	C	
	S	A	F	
	Y	L2		3
	BR	C	G	
Ringer	BK	G	L1	
Network Strap	BK	*	A	
D6AF Mtg Cord (Note)	R		L1	
	G		L2	
	BL		G	
	Y		F	
	W			3
	BK			4
Dial	G	F	L2	

Note: Replace D5AK mounting cord with D6AF mounting cord when both KTS and speakerphone are required, otherwise retain D5AK cord with no connection to G terminal.

* Remove from stored location.

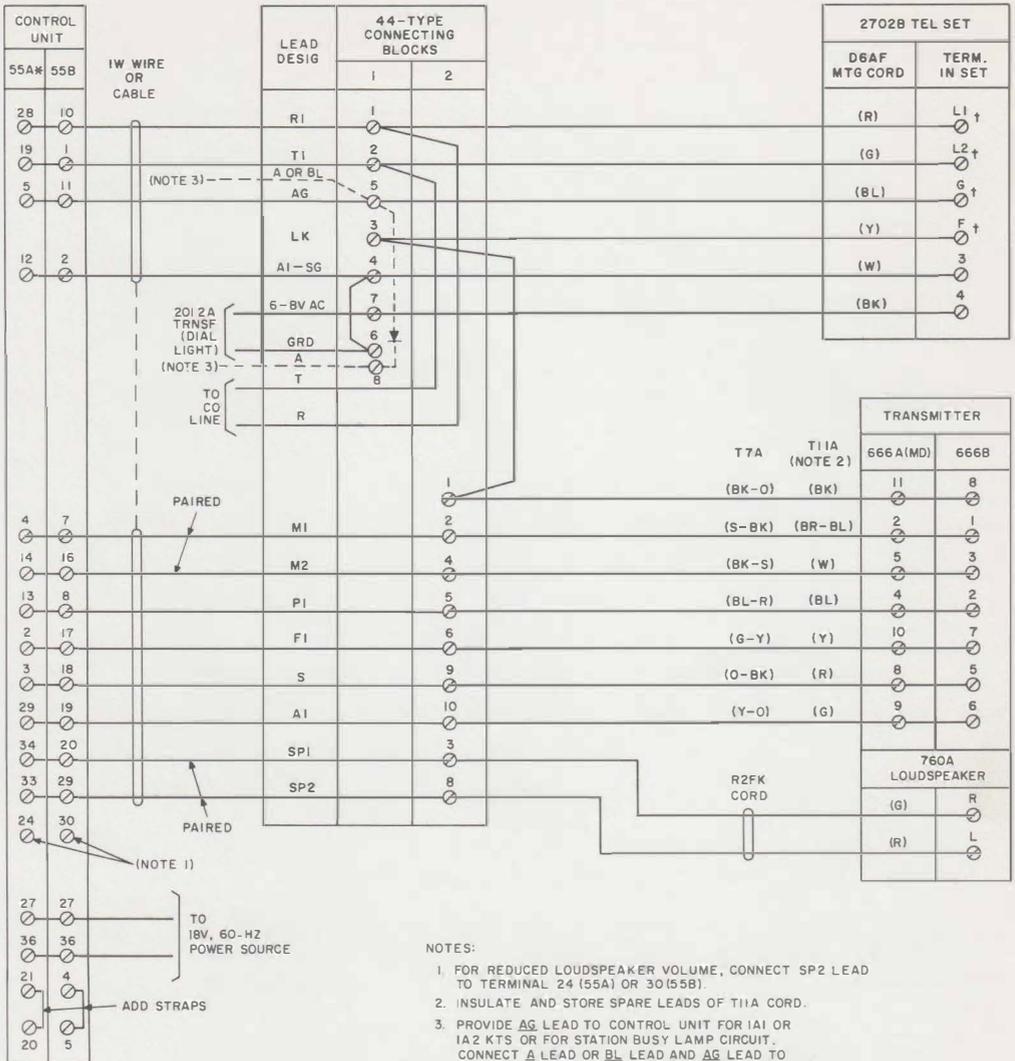


Fig. 2—2702B Telephone Set, Connections To 3-Type Speakerphone